

Model 217 Computer

Congratulations on purchasing an HP 9000 Model 217 computer. We know you're going to enjoy using it. The instructions which follow will help you unpack the computer and inventory the contents, then point the way to install the system.

Taking Inventory

Your Model 217 computer comes packed in either one or four boxes depending on which option you bought. You may also receive other boxes containing peripherals depending on what configuration you ordered.

If you purchased product number 9817A, you received **one** box:

- The computer/accessories kit box

If you purchased product number 9817H, you received **four** boxes:

9817H Packaging

Box	Label
computer/accessories kit	9817
keyboard	46020A
monitor	35721
tilt/swivel assembly	35722



Note

Remember which option you have, 9817A or 9817H. You'll need to know this when you begin setting up. You have a 9817A if you received one box and a 9817H if you received four. In addition, the 9817H has a 98204B Composite Video card installed in an accessory slot.

Fort Collins Systems Division • 3404 East Harmony Road • Fort Collins, Colorado 80525

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

Let's open up each box:

The Computer/Accessories Kit Box


This box is labelled 9817 and 98280. It contains two boxes, the accessories kit box and the box containing the computer, in which you found this Unpacking Instruction.

Carefully remove the computer. Place it on a desk or other level surface. Don't try to plug it in or turn it on yet. Instructions for this step are provided in the *Model 217 Installation Guide*. If you have a 9817H, also remove the video cable from the box.

Now go on to the accessories kit box. It is labelled 98280. In it you should find these items:

Description	Part Number
Model 217 Installation Guide (with binder)	09817-90000 9282-1023
Keyboard Cable	46020-60001
Power Cord	(see figure)
Fuse (4 Amp Normal Blow)	2110-0055
HP-IB Cable	8120-3446

Note that you received a keyboard cable even if you did not order a keyboard. It is included in case you obtain a keyboard in the future.

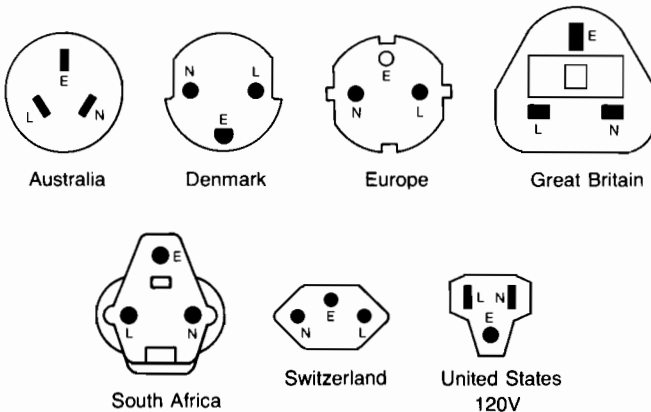

NOTE: Plugs are viewed from connector end. Shape of molded plug may vary within country.

Country	Part Number	Opt.	Voltage
Australia	8120-1369	901	250V, 6A
Denmark	8120-2956	912	250V, 6A
Europe	8120-1689	902	250V, 6A
Great Britain	8120-1351	900	250V, 6A
South Africa	8120-4211	917	250V, 10A
Switzerland	8120-2104	906	250V, 6A
United States	8120-1378	903	120V, 10A

Power cords supplied by HP have polarities matched to the power-input socket on the computer:

- L = Line or Active Conductor (also called "live" or "hot")
- N = Neutral or Identified Conductor
- E = Earth or Safety Ground

Power Cords

The Remaining Boxes (9817H only)

Here is a list of the other assemblies in the 9817H product, along with the marking on the box:

Assembly	Box Marking
Keyboard	46020A
Monitor	35721
Tilt/swivel	35722

Any Problems?

If any of these items are missing or damaged in transport, report the problem to your HP sales office and file a claim with the carrier. Save all shipping cartons and packing materials in case you need to return the system to HP.

If any parts are missing, contact your HP sales office for replacement.

Where to Go Next

You are now ready to set up your system and put it to work. The *Model 217 Installation Guide* (part number 09817-90000) in the accessories kit is the place to go for this information.