



HEWLETT  
PACKARD

Caution


## Read Before adding an HP Vectra CS on the HP SERIAL Network

The following information applies only if you are using the serial port on the processor card supplied with the HP Vectra CS to install the HP SERIAL Network.

To ensure error-free operation of the HP SERIAL Network, you must set the HP Vectra CS to an AT serial communication mode.

Using the manual titled *Setting Up Your Vectra CS Personal Computer*, follow these steps to change from the XT (the factory-set default) mode to the AT mode:

1. Remove the cover as described in Chapter 2 to locate the processor card shown in Appendix G.
2. Change the jumper setting by moving the jumper cover as shown in the following figure.

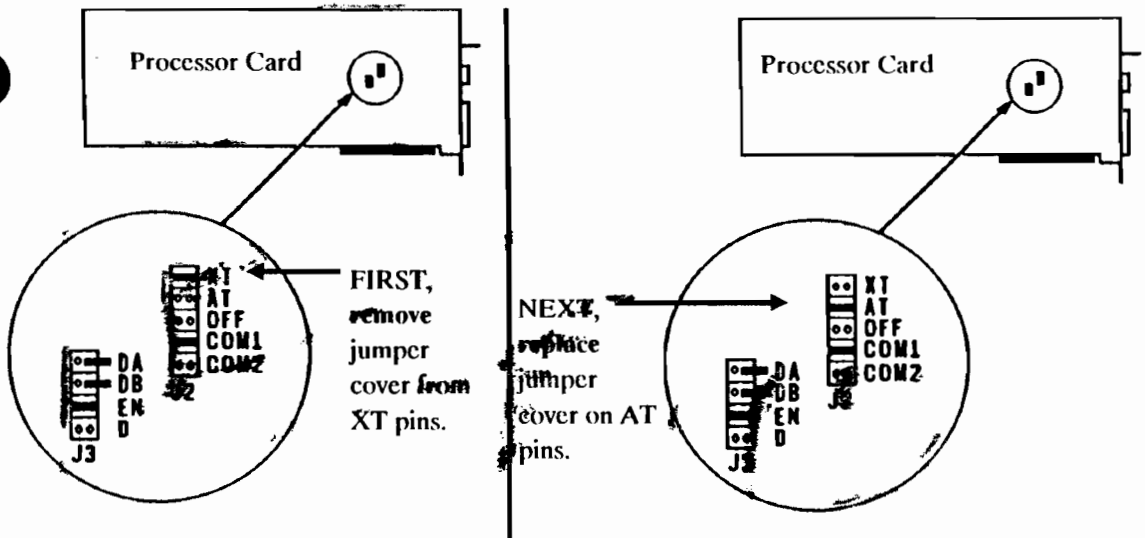

3. Replace the cover as described in Chapter 7 and begin HP SERIAL Network installation.

Hewlett-Packard Company • 3404 East Harmony Road • Fort Collins, Colorado 80525

HP Part Number

5058-9035

Printed in U.S.A. U0588