

HEWLETT-PACKARD

Configuring the Hewlett-Packard SketchPro Tablet

You must perform the following two steps before you can use SketchPro with your CAD software.

1. Set the switches on the back of SketchPro as shown below for your software. *Turn off the tablet before setting the configuration switches; otherwise, SketchPro will not read your selections.*
2. When configuring your software program, you will be asked to select the tablet being used. Select the 'HP SketchPro' tablet if it is listed on the computer screen. Otherwise, select the tablet listed below for your software.

ANVIL-1000MD (version 1.2A)



 
Select HITACHI 1111B

AutoCAD (version 2.62) AutoCAD is a U.S. trademark of Autodesk, Inc



Select the Hitachi HICOMSCAN HDG Series, Model 1111

AutoSketch (version 1.01)



Select Microsoft Mouse *

 


CADKEY (version 3.01)



Select SUMMA/GTCO

EasyCAD (version 1.10)



Select Hitachi Tiger

FastCAD (version 1.10)



Select Hitachi Tiger Tablet

* Drivers for the Microsoft Mouse are contained on the floppy disc provided with the tablet. Refer to the *HP SketchPro Tablet User's Guide* for installation.

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.


Generic CADD (version 3.0)



Select HITACHI
TIGER Digitizer

P-CAD PC-CAPS (version 1.35)

PC-CAD and PC-CAPS are trademarks of Personal Cad Systems, Inc.

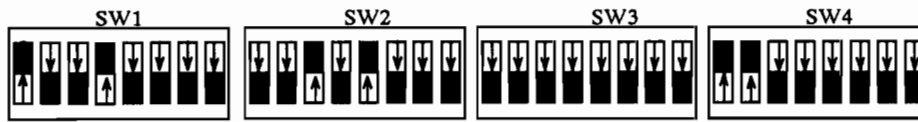

Select Hitachi Tablet
Digitizer HDG-1111
IHDG1111.DRV

ROBO-CAD-PC2 (version 3.3F)



Select Hitachi 1111

VersaCAD (version 5.2)



Select Summagraphics
MM1103

If Your Software Is Not Listed Above

If your CAD software is not listed above in these Software Configuration Instructions:

1. Determine if your software supports the Summagraphics Bit Pad 2 (MM1103). If so, configure SketchPro switch banks SW1, SW2, and SW3 to the settings given in the software manual for the Summagraphics Bit Pad 2. For switch bank SW4, set SW4-1 on (up) and all the other SW4 switches off (down), as shown in the illustration to the right.
2. Determine if your software supports the Hitachi HDG-1111B. If so, configure SketchPro switch banks SW1, SW2, and SW3 to the settings given in the software manual for the Hitachi HDG-1111B. For switch bank SW4, set SW4-1 and SW4-2 on (up) and all the other SW4 switches off (down), as shown in the illustration to the right.



NOTE: If your software supports both tablets, select the Summagraphics Bit Pad 2.

If the Summagraphics Bit Pad 2 or the Hitachi HDG-1111B are supported by your software, but switch settings are not given, refer to the *HP SketchPro Tablet User's Guide* appendix for a description of switch functions during emulation. Using either the table for Summagraphics emulation or the table for Hitachi emulation, determine the function of each switch (baud rate, handshaking, etc.) and set the switch to the specifications provided by the software vendor.

Direct questions about your software package to the software manufacturer. Direct questions about the HP SketchPro Graphics Tablet to your nearest Hewlett-Packard representative.