
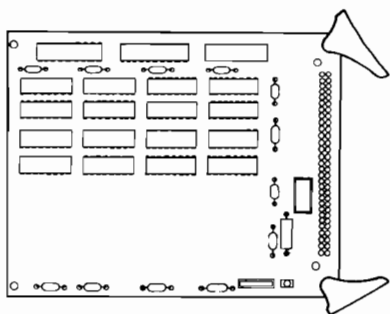
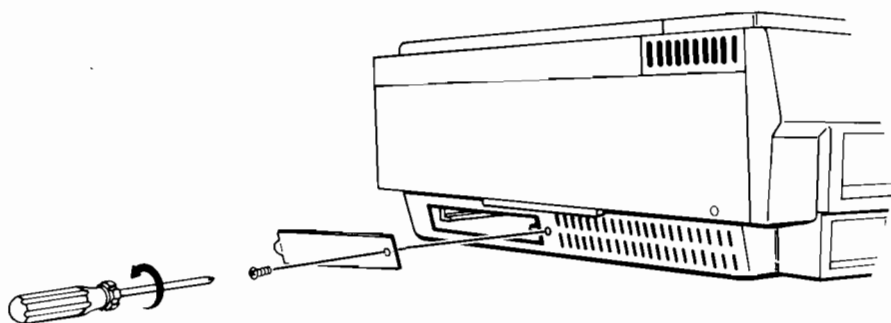
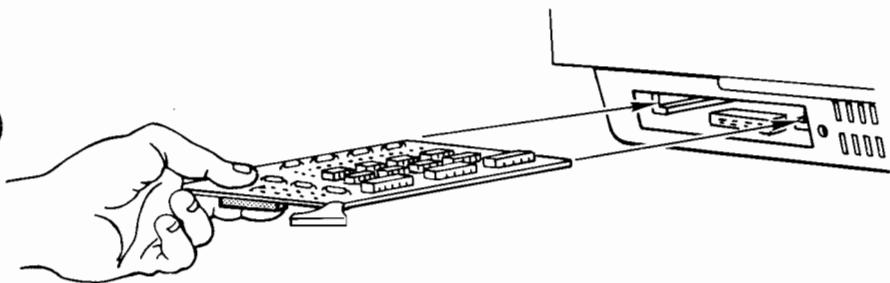


HEWLETT-PACKARD

**Installing Your
HP Memory Board
For The LaserJet
Series II Printer**

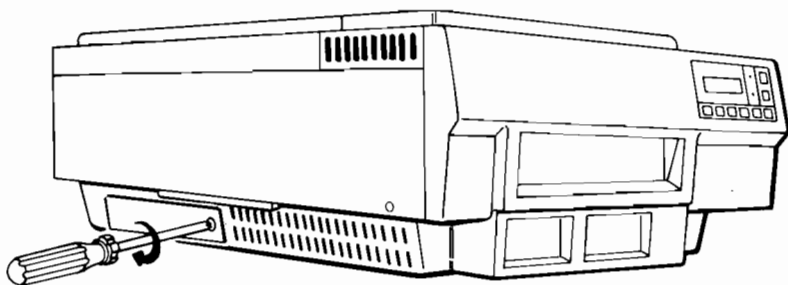

**124
Mbyte**

1**2****3****4**

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

ENGLISH

This booklet provides instructions for installing the 1, 2 or 4 megabyte RAM board in the **LaserJet series II Printer**.

The purpose of the board is to expand the printer memory from its standard 512 K Bytes by either 1, 2 or 4 megabytes. Additional memory allows more pages to be stored in the page buffer, more soft fonts to be downloaded and more macros to be defined.

INSPECT THE BOARD

Before installing the board in the printer, inspect the board for damage such as cracks, broken etching and broken parts.

If damage is found, notify your local Hewlett-Packard Sales and Service Office or Authorized Dealer immediately for replacement of the board.

PROTECT THE BOARD

- Handle the board carefully at all times. Hold the board by it's edges - never hold it in a manner that puts excessive pressure on the parts.
- Do not expose the board to temperatures above 70°C or below 0°C. Other environmental limits specified in your printer **User's Manual** apply to the RAM board.
- If the board will not be installed immediately, put it in its original container and place it in a cool, dry area.
- Do not use magnetic tools when installing the board.



INSTALL THE BOARD

CAUTION

The RAM Board contains components sensitive to damage from electrostatic discharge. When handling the board, be sure to use protective measures including static-free workstations and personal grounding devices. Be especially careful when working in carpeted areas.

First, read all instructions carefully. Make sure you understand all installation procedures before installing the board.

- 1 Identify your board.** The RAM board can be identified by the part number stamped on the board. Refer to the table below and the illustration at left.

PART NUMBER	BOARD MEMORY
33443-XXXXX*	1 megabyte
33444-XXXXX*	2 megabyte
33445-XXXXX*	4 megabyte


* These numbers are subject to change. X's are used in these instructions for reference only.

If you have not received the correct board, notify your local Hewlett-Packard Sales and Service Office or Authorized Dealer immediately.

WARNING

Hazardous voltages are present in the laser printer. Never remove any access cover or work near exposed electrical parts when power is applied.

- 2** Set the printer power switch to OFF, then unplug the power cord. Remove the access plate at the side of the printer using a small phillips screwdriver. This exposes the RAM board connector.
- 3** Install the board. Make sure the board is positioned on the guide rails as shown. Seat the board firmly in the printer connector.
- 4** Install the access plate. Tighten the screw securely. Plug in the power cord.
- 5** To check operation of the RAM board, run an 05 SELF TEST (see the User's Manual). The RAM board is operating correctly if the self-test printout shows: 1536 for a 1 megabyte board, 2560 for a 2 megabyte board and 4608 for a 4 megabyte board. A "63 SERVICE ERROR" display may mean that the RAM board is defective. Notify your local Hewlett-Packard Sales and Service Office or Authorized Dealer for assistance.



124
Mbyte