



**OPERATING & SERVICE MANUAL**

**HP 37204A/B  
HP-IB EXTENDER**



**SERIAL NUMBERS**

This manual applies directly to instruments with serial numbers prefixed 2547U.

For additional important information about serial numbers, refer to INSTRUMENTS COVERED BY MANUAL in section 1.

©Copyright HEWLETT-PACKARD LIMITED 1987  
SOUTH QUEENSFERRY, WEST LOTHIAN, SCOTLAND

Manual Part Number: 37204-90003  
Microfiche Part Number: 37204-90028

Printed: September 1987

---

**HP Computer Museum**  
**[www.hpmuseum.net](http://www.hpmuseum.net)**

**For research and education purposes only.**

## SAFETY SUMMARY (Page 1)

**Observe the following safety precautions during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.**

### **GROUND THE INSTRUMENT**

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable which must be plugged into an approved three-contact electrical outlet; or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

If the instrument is to be energized via an auto-transformer, make sure that the common terminal of the auto-transformer is connected to the neutral pole of the power source.

### **DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE**

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

### **KEEP AWAY FROM LIVE CIRCUITS**

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

### **DO NOT SERVICE OR ADJUST ALONE**

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

### **DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT**

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification of the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

**SAFETY SUMMARY (Page 2)**

**DANGEROUS PROCEDURE WARNINGS**

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

**WARNING**

**DANGEROUS VOLTAGES, CAPABLE OF CAUSING DEATH, ARE PRESENT IN THIS INSTRUMENT. USE EXTREME CAUTION WHEN HANDLING, TESTING, AND ADJUSTING.**

## LIST OF CONTENTS

### SECTION 1 GENERAL INFORMATION

#### Paragraph

1-1 INTRODUCTION.....	Page 1-1
1-2 MODELS COVERED.....	1-1
1-3 OPTIONS.....	1-1
1-4 SERIAL NUMBER/MANUAL CHANGES.....	1-2
1-5 SPECIFICATIONS.....	1-2
1-6 SAFETY CONSIDERATIONS.....	1-2
1-7 WARRANTY CONVERSION.....	1-3
1-8 EXTENDED WARRANTY.....	1-3
1-9 RECOMMENDED TEST EQUIPMENT.....	1-3

#### Table

1-1 RECOMMENDED TEST EQUIPMENT.....	1-3
-------------------------------------	-----

### SECTION 2 INSTALLATION

#### Paragraph

2-1 INTRODUCTION.....	2-1
2-2 INITIAL INSPECTION.....	2-1
2-3 AC LINE VOLTAGE.....	2-1
2-4 POWER CORD.....	2-1
2-5 RACK MOUNTING.....	2-1
2-6 PLANNING THE HP-IB EXTENDER CHAIN.....	2-2
2-6-1 Connection of HP-IB Devices to Extenders.....	2-2
2-7 SETTING SWITCHES.....	2-2
2-7-1 Front Panel POSITION Switch.....	2-2
2-7-2 Rear Panel Configuration Switches.....	2-2
2-8 CABLE LINK BETWEEN EXTENDERS.....	2-3
2-8-1 Coaxial Cable.....	2-3
2-8-2 Fiber Optic Cable.....	2-3

Paragraph

2-8-3 Cable Connection Between Extenders.....	Page 2-4
2-9 SYSTEM POWER UP.....	2-4
2-9-1 Continuous Monitoring of Link Integrity.....	2-4
2-9-2 In Case of Difficulty.....	2-4

Table

2-1 REAR PANEL CONFIGURATION SWITCHES.....	2-5
--	-----

Figure

2-1 37204A/B HP-IB EXTENDER FRONT PANEL.....	2-0
2-2 37204A/B HP-IB EXTENDER REAR PANEL.....	2-0
2-3 37204A/B EXTENDER CONFIGURATIONS.....	2-5

**SECTION 3 OPERATION**

Paragraph

3-1 CONSIDERATIONS FOR OPERATION.....	3-1
3-1-1 Transparency.....	3-1
3-1-2 Extender is a Listen Always Device.....	3-1
3-1-3 Parallel Poll Response.....	3-1
3-2 TRUNCATION.....	3-2
3-3 DATA THROUGHPUT.....	3-3

Figure

3-1 TRUNCATION IN STAR NETWORKS.....	3-3
--------------------------------------	-----

**SECTION 4 PERFORMANCE VERIFICATION**

Paragraph

4-1 INTRODUCTION.....	4-1
4-2 EQUIPMENT REQUIRED.....	4-1
4-2 COMPUTER HP-IB INTERFACES.....	4-1

Paragraph

4-4 TEST CONFIGURATION .....	Page 4-2
4-5 PERFORMANCE VERIFICATION PROGRAM .....	4-2

Figure

4-1 PERFORMANCE TEST TYPICAL CONFIGURATION.....	4-3
---	-----

**SECTION 5 ADJUSTMENTS**  
(None required)

**SECTION 6 REPLACEMENT PARTS**

Paragraph

6-1 INTRODUCTION.....	6-1
6-2 ORDERING INFORMATION.....	6-1

Table

6-1 EXCHANGE ASSEMBLY .....	6-1
6-2 REPLACEABLE PARTS 37204A/B MAIN LIST .....	6-2
6-3 REPLACEABLE PARTS ASSEMBLY A1.....	6-2
6-4 REPLACEABLE PARTS ASSEMBLY A2.....	6-5
6-5 REPLACEABLE PARTS ASSEMBLY A10.....	6-7

**SECTION 7 MANUAL CHANGES**

Paragraph

7-1 INTRODUCTION.....	7-1
-----------------------	-----

## SECTION 8 SERVICE

### Paragraph

8-1	INTRODUCTION	Page 8-1
8-2	PREVENTIVE MAINTENANCE	8-1
8-3	FAULT ISOLATION	8-1
8-4	SAFETY REQUIREMENTS	8-2
8-5	RECOMMENDED TEST EQUIPMENT	8-2
8-6	REPAIR	8-2
8-7	CO-AXIAL CABLE REPAIR	8-2
8-8	FIBER OPTIC CABLE REPAIR	8-2
8-9	DESCRIPTION OF SELF TEST	8-3
8-9-1	Introduction	8-3
8-9-2	Co-Axial Ports	8-3
8-9-3	HP-IB Interface	8-3
8-9-4	Fiber Optic Interface	8-4
8-10	RUNNING SELF TEST	8-4
8-10-1	Testing the COAX Ports	8-4
8-10-2	Testing the Fiber Optic Ports	8-6

### Figure

8-1	BLOCK DIAGRAM OF 37204A SHOWING SELF TEST LOOPBACK PATHS	8-5
-----	--	-----

### Paragraph

G1	SYSTEM TROUBLESHOOTING	8-7
G1-1	FAULTY EXTENDER CHAIN OR HP-IB DEVICE?	8-7
G1-1-1	All Port FAULT LAMPS Off	8-7
G1-1-2	One or More PORT FAULT Lamps On	8-7
G1-2	TROUBLESHOOTING WITHIN THE EXTENDER CHAIN	8-8
G1-2-1	Background	8-8
G1-2-2	Locating The Faulty Extender or Cable Link	8-10

### Figure

G1-1	LOCATING A TRUNCATING EXTENDER	8-8
G1-2	PORT FAULT LAMP INDICATIONS CAUSED BY INTERMITTENT ERRORS	8-9



Paragraph

G1-3	PORT FAULT LAMP INDICATIONS CAUSED BY A CONTINUOUS FAILURE.....	Page 8-11
------	---	-----------

Paragraph

G2	INSTRUMENT TROUBLESHOOTING.....	8-13
G2-1	DETERMINING WHICH ASSEMBLY IS FAULTY.....	8-13
G2-2	A1 ASSEMBLY REPLACEMENT PROCEDURE.....	8-16

Table

G2-1	A2 FIBER OPTIC ASSEMBLY: FIELD REPLACABLE PARTS.....	8-14
------	--	------

Figure

G2-1	ASSEMBLY RETAINING SCREWS.....	8-15
------	--------------------------------	------

Paragraph

A1	HP-IB EXTENDER MAIN ASSEMBLY.....	8-17
A1-1	INTRODUCTION.....	8-17
A1-2	CIRCUIT DESCRIPTION.....	8-17
A1-3	TROUBLESHOOTING PROCEDURE.....	8-18

Table

A1-1	UI0 HP-IB LOOPBACK TESTING SEQUENCE.....	8-20
------	--	------

Figure

A1-1	A1 COMPONENT LOCATION.....	8-22
A1-2	UI0 PIN LOCATION.....	8-22
A1-3	A1 POWER SUPPLY.....	8-23
A1-4	A1 COMPONENT LOCATION.....	8-24
A1-5	UI0 PIN LOCATION.....	8-24
A1-6	A1 EXTENDER LOGIC AND DRIVER/RECEIVERS.....	8-25

Paragraph

A2	FIBER OPTIC ASSEMBLY .....	8-27
A2-1	INTRODUCTION .....	8-27
A2-2	CIRCUIT DESCRIPTION .....	8-27
A2-3	TROUBLESHOOTING PROCEDURE.....	8-28

Table

A2-1	LOOPED BACK TEST SIGNALS.....	Page 8-29
------	-------------------------------	-----------

Figure

A2-1	A2 COMPONENT LOCATION.....	8-32
A2-2	FIBER OPTIC DRIVER/RECEIVERS .....	8-33

Paragraph

A10	EXTENDED POWER FAIL ASSEMBLY.....	8-35
A10-1	INTRODUCTION.....	8-35
A10-2	CIRCUIT DESCRIPTION .....	8-35
A10-3	TROUBLESHOOTING PROCEDURE.....	8-35

Figure

A10-1	POWER FAIL TIMER .....	8-34
A10-2	A10 COMPONENT LOCATION.....	8-34

**APPENDIX A**

LINE VOLTAGE SELECTION.....	A-1
-----------------------------	-----

Figure

A-1	LINE VOLTAGE AND FUSE SELECTION .....	A-0
-----	---------------------------------------	-----

**APPENDIX B**

RACK MOUNTING 37024A/B EXTENDERS.....	B-1
RACK MOUNTING WITH HP SYSTEM 2 CABINET PRODUCTS .....	B-3

Figure

B-1	REMOVING THE FRONT PANEL TRIM .....	B-0
B-2	INVERTING THE FRONT PANEL TRIM .....	B-0
B-3	MOUNTING IN A 19 INCH RACK. ....	B-2
B-4	SYSTEM 2 CABINET RACK MOUNTING. ....	B-2

# General Information

---

## 1-1 Introduction

This manual contains information to install, operate, test and service your 37204A/B HP-IB Extender. 37204A/B Extenders provide single-point and multi-point extension of the Hewlett Packard Interface Bus (HP-IB), and allow the distance between devices using this interface to be increased well beyond the limits imposed by direct HP-IB cabling.

HP-IB is Hewlett Packard's implementation of the IEEE 488 and IEC 625 Interface standards.

## 1-2 Models Covered

This manual covers the 37204A including options 001, 002, and the 37204B. Functionally, the only difference between the 37204A and 37204B is that the 37204B's power fail reset lasts approximately 1.5s compared with less than 0.1s for the 37204A. The extended reset of the 37204B is required by certain supported configurations of HP 3000 computers to ensure proper power fail recovery in the event of a momentary power loss.

Unless specifically stated otherwise, the information in this manual applies to both the A and B versions of the 37204 HP-IB Extenders.

## 1-3 Options

Options 001 and 002 add fiber optic capability to the 37204A. Fiber optic cable removes the metallic connection between Extenders, providing complete electrical isolation. Typical benefits are: excellent lightning protection out of doors; and the avoidance of sparks in explosive environments.

Option 001 - Adds fiber optic capability to Port A.

Option 002 - Adds fiber optic capability to Ports A and B.

Note : Options 001 and 002 are not available on the 37204B.

## 1-4 Serial Number/Manual Changes

Attached to the rear of the 37204A/B is a serial number plate. The first 4 digits and the letter are the serial number prefix, and are changed only when a change is made to the Extender. The remaining digits are assigned sequentially and are unique to each Extender. The title page of this manual lists the serial prefixes of the Extenders covered. Extenders manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. In this case, the manual is accompanied by a Manual Change which documents the differences between the Extender and this manual.

## 1-5 Specifications

<b>Maximum Distance:</b>	1250 meters per link, coax or fiber optic.
<b>Maximum Speed:</b>	60k bytes/s.
<b>Power Requirements:</b>	100/120/220/240 Volts ac +/-10%. 48 to 66Hz. 10VA max.
<b>Temperature Ranges:</b>	0°C to 55°C (Operating). -40°C to 75°C (Storage).
<b>Dimensions:</b>	Height 71mm, width 212mm, depth 254mm
<b>Weight:</b>	1.72kg.

## 1-6 Safety Considerations

### WARNING

**TO PREVENT PERSONAL INJURY, OBSERVE ALL  
SAFETY PRECAUTIONS AND WARNINGS STATED ON  
THE INSTRUMENT AND IN THIS MANUAL.**

The 37204A/B is a safety class I instrument, designed and tested according to international safety standards. It is provided with a protective ground (earth) terminal. A Safety Summary page at the beginning of this manual provides general safety information.

## 1-7 Warranty Conversion

Option W03 converts the standard 12-month bench warranty (see inside of front cover) into a 90-day on-site warranty. Contact your nearest Hewlett-Packard office for details of the conversion and if it is available in your country.

## 1-8 Extended Warranty

Option W30 extends the standard, return-to-HP, 12-month bench warranty for a further 2 years.

## 1-9 Recommended Test Equipment

Equipment required to service the 37204A is listed in Table 1-1. Other equipment may be substituted if it meets or exceeds the critical specifications listed in the table.

**Table 1-1 Recommended Test Equipment**

Instrument	Critical Specifications	Recommended Model	Use*
Oscilloscope	100MHz bw	HP 1740A	T
Frequency Counter	Frequency range 10Hz to 30MHz	HP 5382A	T
Digital Multimeter	$\pm 0.1V$ at $\pm 5V$	HP 3435A	T
Desktop Computer configured with BASIC 2.0 or above	Unique	HP 9000 Ser 200/300	P
Interface Card	Unique	HP 98624A	P
Functional Test Disc (Basic)	Unique	HP 37204-10001	P
Logic Probe	TTL Compatible	HP 545A	T

\* A = Adjustments, P = Performance Tests, T = Troubleshooting

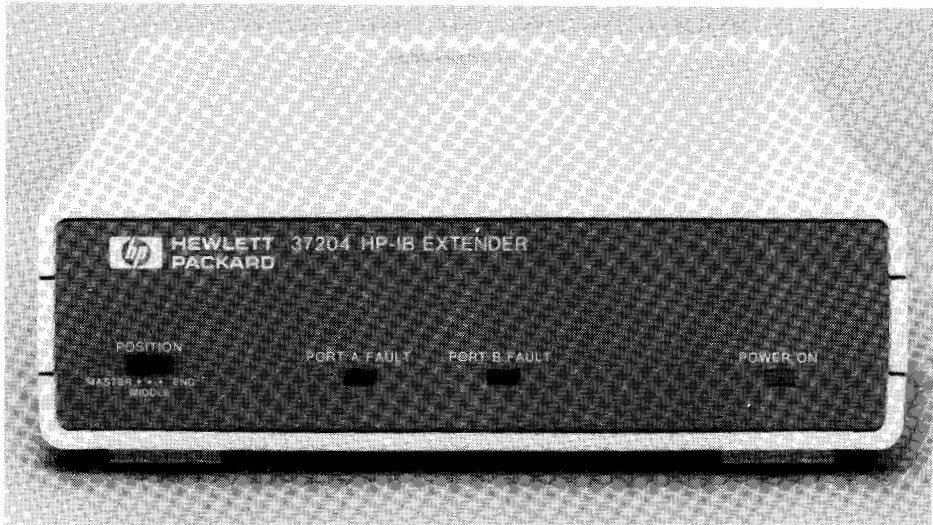


Figure 2-1 37204A/B HP-IB Extender Front Panel

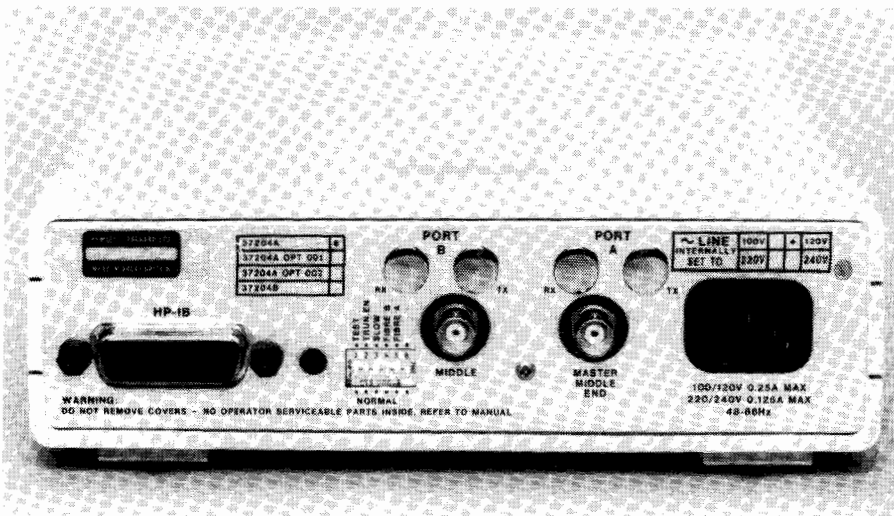


Figure 2-2 37204A/B HP-IB Extender Rear Panel



# Installation

---

## 2-1 Introduction

Procedures for the installation of your 37204A/B HP-IB Extender are given in this section. If any difficulty is encountered, contact your nearest Hewlett Packard office.

## 2-2 Initial Inspection

Your Extender was carefully checked before dispatch and was shipped in a purpose-designed carton. However, if the carton shows obvious signs of damage, check the contents for completeness (see Installation Sheet 37204-90001) and/or damage. If there is any damage or missing parts, retain the shipping carton for the carrier's inspection and inform your nearest Hewlett Packard office immediately. The Hewlett Packard office will arrange for repair or replacement of your Extender without waiting for the settlement of any claim against the carrier.

## 2-3 AC Line Voltage

This is marked above the power cord inlet and should match the destination specified in your order. To reset, see Appendix A.

## 2-4 Power Cord

If the cord supplied is not suitable, get a replacement from your nearest HP office.

## 2-5 Rack Mounting

See Appendix B.



## 2-6 Planning the HP-IB Extender Chain

- Install an Extender at each node where HP-IB devices are clustered.
- Locate the controller at any convenient node (but see para 3-2 if truncation is enabled).
- Maximum length of cable per link is:
  - Fiber optic : 1250 meters (4000 ft)
  - Coax (NORMAL mode) : 250 meters (800 ft)
  - Coax (SLOW speed) : 1250 meters (4000 ft)
- Extra long links: insert Extenders (with no HP-IB devices attached) at intermediate positions, keeping the max. length between nodes as above.
- An Extender chain can contain up to 30 Extenders.

### 2-6-1 Connection of HP-IB Devices to Extenders

- Maximum number of HP-IB devices at each Extender site: 14.
- Total length of HP-IB cable at each site: less than or equal to 2m (6.6 ft) times the number of directly connected devices, subject to a maximum length of 20m (65.6 ft).
- HP-IB interconnecting cable:

Length	Part Number
0.5m	HP 10833D
1m	HP 10833A
2m	HP 10833B
4m	HP 10833C

## 2-7 Setting Switches

### 2-7-1 Front Panel POSITION Switch

If there are only two Extenders in the chain, set one to MASTER and the other to END. If there are more than two, set the in-between Extenders to MIDDLE.

### 2-7-2 Rear Panel Configuration Switches

These switches set the operating configuration. The rightmost switch is unused.

**Table 2-1 Rear Panel Configuration Switches**

TEST	Set to NORMAL position. TEST position runs Extender self test at power up.
TRUN.EN	Set to TRUN.EN if HP-IB truncation feature is wanted (see para 3-2).
SLOW	Sets the speed of the serial data link between Extenders. Select SLOW at all Extenders if any coaxial link exceeds 250m.
FIBER A	Set to FIBER A (up) if using fiber at PORT A. Set to NORMAL (down) if using coax at PORT A.
FIBER B	Set to FIBER B (up) if using fiber at PORT B. Set to NORMAL (down) if using coax at PORT B.

## **2-8 Cable Link Between Extenders**

### **2-8-1 Coaxial Cable**

- Specification :            Impedance: 75 ohm  
                                     Loss per 100 meter: 6.9 dB at 100MHz  
                                     Connector: 75 ohm BNC

Belden 9248 with Trompeter UPL 20-41 connectors are suitable.

- Higher loss cable is OK if the total attenuation does not exceed,  
    17.25dB @ 100 MHz for NORMAL speed  
    86.25dB @ 100 MHz for SLOW speed.
- The effect of splices can usually be ignored.

### **2-8-2 Fiber Optic Cable**

- HP supply duplex cable with HFBR 4000 connectors fitted.  
    For lengths up to 100m, order:  
    1m: 39201B 5m: 39202B 10m: 39203B 30m: 39204B 50m: 39205B 100m: 39206B  
    For lengths over 100m, contact your local Hewlett Packard office.
- Splices introduce a loss equivalent to about 200m of cable.
- The 1250m maximum length includes an allowance for a single splice (for repair of a damaged cable).

### **2-8-3 Cable Connection Between Extenders**

Cable only to PORT A for MASTER and END Extenders. Cable as you please to PORT A and B for MIDDLE Extenders. (MASTER, END and MIDDLE are defined by the setting of the POSITION switch.)

**Note:** Coax serves as a 2-way path so only one connector per port. Fiber requires separate go and return paths so two connectors per port.

#### **CAUTION**

To avoid damaging the fiber optic components,

- screw the optical connectors down only fingertight (0.05 to 0.1Nm).
- avoid rotating the barrel on the connector as you tighten (or release) the connector.

## **2-9 System Power Up**

### **2-9-1 Continuous Monitoring of Link Integrity**


Once powered up, the Extenders communicate with each other even with no HP-IB devices connected. Observe the PORT FAULT lamps. The lamps blink once during power up then remain off thereafter provided communication between Extenders is without error.

### **2-9-2 In Case of Difficulty**

If you encounter a problem (either with the link or with HP-IB operation), disconnect each Extender from the system and run self test (para 8-9 and 8-10). Self test is thorough but takes hardly any time to run.

Test the coaxial interfaces first (para 8-10-1) because this also tests the extender circuitry. If you do not have a loopback cable (5061-2694) to test the fiber optic interfaces, check, when powered up, that both PORT FAULT lamps are off, confirming that the fiber interfaces and the fiber optic links are working correctly.

SINGLE POINT EXTENSION

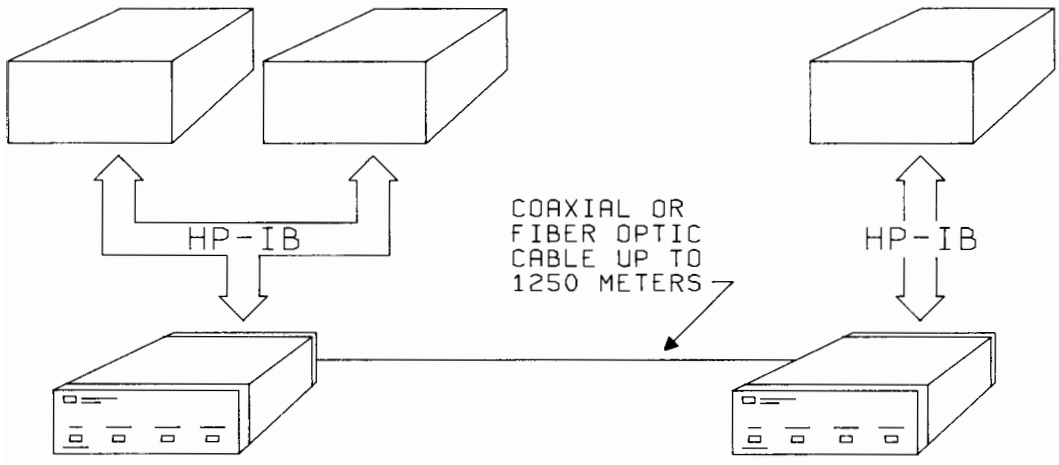

MULTI-DROP EXTENSION

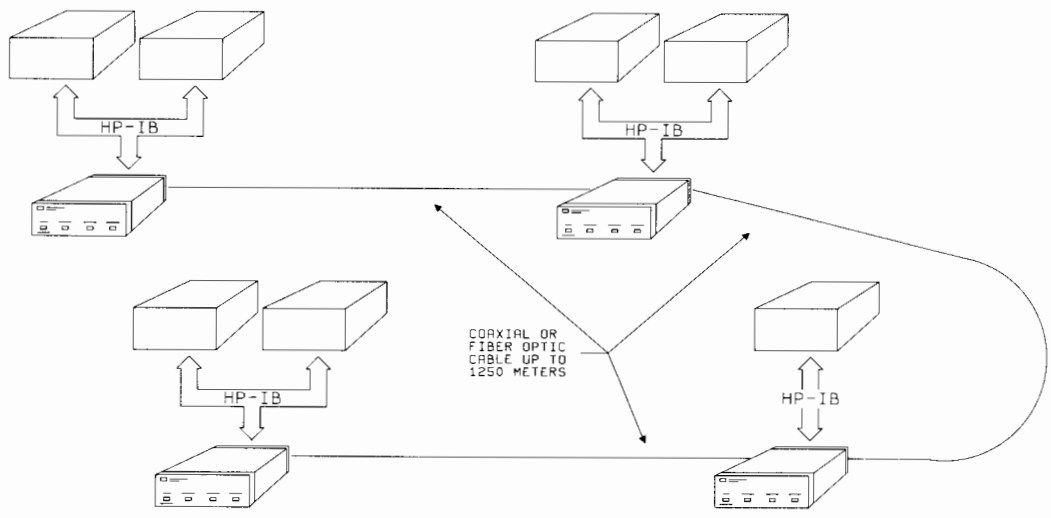


Figure 2-3 37204A/B Extender Configurations



# Operation

---

## 3-1 Considerations for Operation

### 3-1-1 Transparency

The 37204A/B supports all HP-IB devices which comply with IEEE 488-1978.

**Note:** For remote devices, the Extenders may slow the response to a parallel poll, see para 3-1-3.

If you find that HP-IB devices work without Extenders but not with Extenders, suspect non compliance of a device or a software error, eg a timeout too short.

Once installed, extenders operate automatically and transparently. Usually,

- programs can remain unchanged.
- performance is no different from a directly-connected system.

### 3-1-2 Extender is a Listen Always Device

Data from a talker reaches all sites in the extended system even though there are no addressed listeners.

### 3-1-3 Parallel Poll Response

Transmission delays in the extended network increase the response to parallel polling beyond the 2  $\mu$ s specified in IEEE-488. (The response of devices on the controller's local bus is not affected.)

Factors adding to response time	NORMAL speed		SLOW speed
First Extender link	add 22 us		add 220 us
Each additional link	add 24 us		add 240 us
Propagation delay in the cabling :coax	add 1.7 us per 100m		
:fiber	add 2.0 us per 100m		

## 3-2 Truncation

Truncation is selected on the rear panel (see Table 2-1) and allows a partial HP-IB system to continue operating even with a failed Extender link. Without truncation, loss of communication between Extenders hangs the entire network because Extenders handshake every HP-IB transaction at all nodes.


The controller triggers truncation of a failed link by asserting IFC. Any Extender (with truncation enabled) which does not see messages being echoed back truncates the chain at the failing port (in the direction away from the master). Truncation remains active until the next time IFC is asserted at which time the echo check is repeated.

**Note: Only communication loss between Extenders causes truncation and not HP-IB hang-ups or loss of power in any HP-IB device.**

If the failed link recovers, the controller can remove truncation but only by asserting IFC as many times as there are Extenders in the chain. Assertions must be separate by the following minimum delays:

NORMAL speed: 2 ms; SLOW speed: 20 ms; fiber link: 3s.

Truncation enabled only at the master Extender always truncates the chain at the master. Truncation may also be enabled at all Extenders but, in this case, **fiber links are not allowed.**

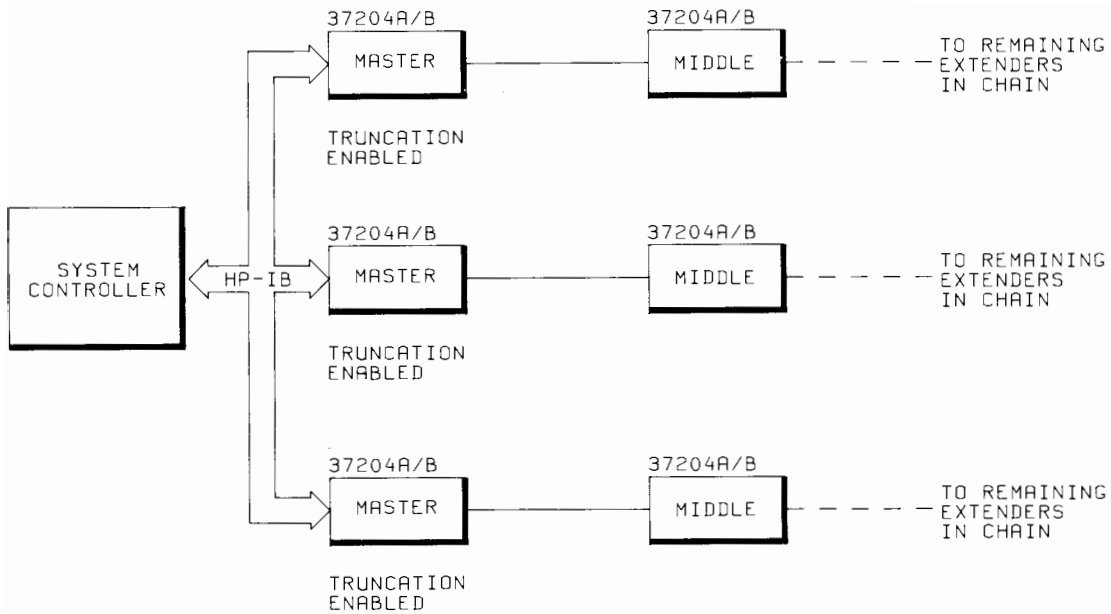

Without truncation, failure in an Extender chain hangs everything. With truncation, the failing chain is truncated at the master Extender, allowing the rest of the system to operate normally.

Figure 3-1 Truncation in Star Networks

### 3-3 Data Throughput

The maximum data transfer rate of an HP-IB Extender network is difficult to calculate with precision. It depends, for example, on the response times of the devices in the system, the number of Extender nodes and the distance between nodes. Some points:

1. Each Extender link increases the handshake time for a single byte by approximately 16us (NORMAL speed) or 160us (SLOW speed).
2. The delay introduced by the cabling between Extenders is calculated at 0.017us/meter for co-axial cable and 0.020us/meter for fiber optic cable.



3. To predict the data rate in an extended system, find the time required to handshake a single byte in the un-extended system and add to this the additional time introduced by the Extenders and cabling. (The rate of the extended system is then the inverse of this sum.)

#### Example 1

Two devices with a data transfer rate of 50,000 bytes/s are connected via a pair of HP 37204A/B Extenders and 200 meters of co-axial cable.

$$\begin{aligned} \text{Time required for single byte transfer} \\ \text{without Extenders} &= 1/50,000 \text{ s} \\ &= 20\text{us} \\ \\ \text{Data transfer time of the Extenders} &= (16 \times 1) + (0.017 \times 200)\text{us} \\ &= 19\text{us} \\ \\ \text{Total data transfer time} &= 19 + 20\text{us} \\ &= 39\text{us} \\ \\ \text{Therefore predicted transfer data} \\ \text{rate} &= 1/39 \times 10^{-6} \text{ bytes/s} \\ &= 25\text{k bytes/s, approximately.} \end{aligned}$$

#### Example 2

Data Transfer rate in an "un-extended" system is 20,000 bytes/s. The system is extended by means of 4 chained Extenders. The combined length of cable between Extenders is 250 meters.

$$\begin{aligned} \text{Time required for a single byte} \\ \text{transfer without Extenders} &= 1/20,000 \text{ s} \\ &= 50\text{us} \end{aligned}$$

$$\begin{aligned}\text{Data transfer time of the Extenders} &= (16 \times 3) + (0.017 \times 250)\mu\text{s} \\ &= 52.25\mu\text{s}\end{aligned}$$

$$\begin{aligned}\text{Total data transfer time} &= 50 + 52.25\mu\text{s} \\ &= 102.25\mu\text{s}\end{aligned}$$

$$\begin{aligned}\text{Therefore predicted transfer data rate} &= 1/102.25 \times 10^{-6} \text{ bytes/s} \\ &= 10\text{k bytes/s, approximately.}\end{aligned}$$

**Note:** In some instances, the handshake time contributed by a device is itself influenced by the speed of the devices in the system.



# Performance Verification

---

## 4-1 Introduction

The performance verification test described in this section checks out a 37204A/B Extender chain to ensure that it is capable of providing transparent HP-IB extension.

**Note :** Self test is thorough and easy to use. For most purposes, it is an adequate check on the 37204A/B, making the performance tests detailed in this section unnecessary. See paras 8-9 and 8-10.

## 4-2 Equipment Required

1. 37204A/B Extender chain under test.
2. HP 9000 Series 200/300 computer configured with BASIC 2.0 or above and,  
Internal HP-IB Interface  
HP98624A HP-IB Interface Card
3. Test program (available on a 3 1/2 inch floppy disc, HP Part No. 37204-10001).

## 4-3 Computer HP-IB Interfaces

The computer requires two separate HP-IB Interfaces configured as follows:

	Interface 1	Interface 2
Select Code:	7	8
HP-IB Address:	21	22
System Controller:	ON	OFF


## 4-4 Test Configuration

Run the performance test to verify either single point HP-IB extension (two 37204A/Bs), or multi-point HP-IB extension (three or more 37204A/Bs). 37204As and 37204Bs are functionally similar and an Extender chain may contain both types of Extender.

1. Cable the 37204A/B Extenders together using co-axial or fiber optic cable as appropriate. Connect to the master and end Extenders at their A PORTs. It does not matter which way around the cable connections are made to the middle Extenders.
2. Set the front panel POSITION switches to MASTER, END and MIDDLE as appropriate.
3. Set all the rear panel switches to NORMAL. If fiber optic cable is used, set the appropriate rear panel switches to FIBER.
4. Power up the Extenders and check that all POWER lamps are illuminated and that all PORT FAULT lamps are off. If a PORT FAULT lamp is on at any Extender, check for a faulty Extender or cable link (refer to Section 8).
5. Connect the computer HP-IB interface with select code 7 (System Controller) to the master 37204A/B.
6. Connect the other HP-IB interface to any other 37204A/B in the chain. It does not matter if some Extenders in the chain are not connected to an HP-IB device.

## 4-5 Performance Verification Test Program

The program name is P203/4. Run the program to get instructions.

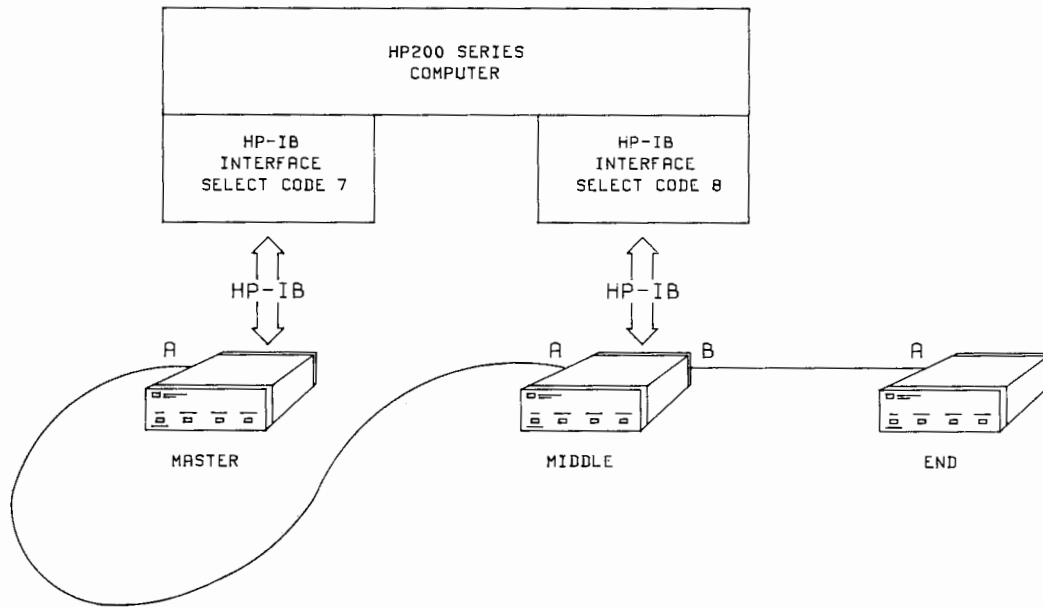

**Figure 4-1 Performance Test Typical Configuration**



# Adjustments

---

There are no adjustments on this instrument.







# Replaceable Parts

---

## 6-1 Introduction

This section contains information on replaceable parts for the 37204A/B HP-IB Extender. Parts are listed in alphanumeric order. A check digit (CD) is given for each part number. This digit is numerically derived from the part number and is used by Hewlett Packard to check the validity of part numbers. Against the first occurrence of each part number in the parts listing is given the total quantity (QTY) of that part used.

## 6-2 Ordering Information

To order a listed part, quote the HP part number, indicate the quantity required and send the order to your nearest Hewlett Packard office. To order a part not listed, send a description of the part together with the model and serial number to your nearest Hewlett Packard office.

Table 6-1 Exchange Assembly

Assembly Name	New Assembly Part No.	Exchange Assembly Part No.
HP-IB Extenders Assembly	37204-60001	37204-69001

**Table 6-2 Replaceable Parts 37204A/B Main List**

Reference Designator	HP Part Number	C D	Qty	Description
MP1	37204-00001	0	1	Front Panel
MP2	37204-00002	1	1	Rear Panel
MP3	37204-60021	0	1	Top Cover (fitted with magnetic screen)
MP4	37204-00005	4	1	Bottom Cover
MP5	37204-40001	4	2	End Moldings
MP6	0403-0179	0	4	Feet

**Table 6-3 Replaceable Parts Assembly A1**

Reference Designator	HP Part Number	C D	Qty	Description
A1	37204-60001	6	1	Board Assembly
C1	0160-4574	3	2	C Fxd 1000pF 10% 100V
C2	0160-4574	3		C Fxd 1000pF 10% 100V
C3	0180-3802	8	1	C Fxd 10,000uF 25V AL
C4	0180-0374	3	1	C Fxd 10uF 20V TA
C5	0160-3879	7	2	C Fxd 0.01uF 20% 100V
C6	0160-3879	7		C Fxd 0.01uF 20% 100V
C7	0160-4835	7	15	C Fxd 0.1uF 10% 50V
C8	0160-4835	7		C Fxd 0.1uF 10% 50V
C9	0160-4835	7		C Fxd 0.1uF 10% 50V
C10	0160-4835	7		C Fxd 0.1uF 10% 50V
C11	0160-4835	7		C Fxd 0.1uF 10% 50V
C12	0160-4835	7		C Fxd 0.1uF 10% 50V
C13	0160-4835	7		C Fxd 0.1uF 10% 50V
C14	0160-4835	7		C Fxd 0.1uF 10% 50V

Table 6-3 Replaceable Parts Assembly A1 (Continued)

Reference Designator	HP Part Number	C D	Qty	Description
C15	0160-4835	7		C Fxd 0.1uF 10% 50V
C16	0160-4835	7		C Fxd 0.1uF 10% 50V
C17	0160-4835	7		C Fxd 0.1uF 10% 50V
C18	0160-4835	7		C Fxd 0.1uF 10% 50V
C19	0160-4835	7		C Fxd 0.1uF 10% 50V
C20	0160-4835	7		C Fxd 0.1uF 10% 50V
C21	9135-0150	7	1	C Fxd 0.15uF + 2 X 4700pF
C22	0160-4835	7		C Fxd 0.1uF 10% 50V
C23	0160-3874	2	1	C Fxd 10pF 5% 200V
CR1	1901-0662	3	2	DIO PWR RECT 5A 100V
CR2	1901-0662	3		DIO PWR RECT 5A 100V
CR3	0837-0204	1	1	VARISTOR 24V
CR4	1902-3097	6	1	ZNR 5.23V 2%
CR5	1990-0618	6	2	LED (Red)
CR6	1990-0618	6		LED (Red)
CR7	1990-0943	0	1	LED (Green)
F1	2110-0269	0	2	FUSE HLDR (Clip)
	5040-3081	4	1	FUSE HLDR (Cover)
	2110-0318	0	1	FUSE 0.125A 250V Timed (220/240V)
	2110-0201		1	FUSE 0.250A 250V Timed (100/120V)
J1	1251-7651	5	1	HP-IB Connector
J4	1251-4743	0	1	Power Connector
J5	1200-1277	2	1	A2 / A10 Board Connector
J6	1250-2001	7	2	BNC Connector (Port B)
J7	1250-2001	7		BNC Connector (Port A)
J8	1251-4631	5	3	LED Connector
J9	1251-4631	5		LED Connector
J10	1251-4631	5		LED Connector
MP1	37204-00016	7	1	HEATSINK

**Table 6-3 Replaceable Parts Assembly A1 (Continued)**

Reference Designator	HP Part Number	C D	Qty	Description
R1	0698-0082	7	3	R Fxd 464 ohm 1% 0.125W
R2	0698-0082	7		R Fxd 464 ohm 1% 0.125W
R3	0698-0082	7		R Fxd 464 ohm 1% 0.125W
R4	0757-0442	9	2	R Fxd 10K ohm 1% 0.125W
R5	0757-0442	9		R Fxd 10K ohm 1% 0.125W
S1	3101-0493	4	1	MASTER-MIDDLE-END switch
S2	3101-2844	3	1	DIP Switch (6 switches)
S3	3101-2616	7	2	Switch, Voltage Select
S4	3101-2616	7		Switch, Voltage Select
T1	37204-80001	8	2	XFMR, Pulse
T2	37204-80001	8		XFMR, Pulse
T3	9100-4474	3	1	XFMR, Power
	37212-00020	3	1	Magnetic Screen
U1	1820-1689	4	4	ICD MC3446
U2	1820-1689	4		ICD MC3446
U3	1820-1689	4		ICD MC3446
U4	1820-1689	4		ICD MC3446
U5	1820-0535	7	2	ICD SN75451
U6	1820-0535	7		ICD SN75451
U7	1820-4138	4	2	ICD SN75175
U8	1820-4138	4		ICD SN75175
U9	1826-0122	0	1	ICR 7805
U10	37204-80003	0	1	ICD Gate Array
	1251-0600	0	1	Socket for U10*
U11	1810-0162	5	1	R Netwk 13 X 4.7K ohm
U12	37204-80002	9	1	R Netwk Special

\* On later versions of the A1 assembly, U10 is soldered in position and not mounted on a socket.

Table 6-4 Replaceable Parts A2 Assembly

Reference Designator	HP Part Number	C D	Qty	Description
A2	37204-60002	7	1	Fiber Optic Board Assembly
C1	0160-4835	7	2	C Fxd 0.1uF 10% 50V
C2	0180-2815	1	1	C Fxd 100uF 10V TA
C3	0180-2816	2	4	C Fxd 68uF 10V TA
C4	0180-2816	2		C Fxd 68uF 10V TA
C5	0180-2816	2		C Fxd 68uF 10V TA
C6	0180-2816	2		C Fxd 68uF 10V TA
C7	0160-4835	7		C Fxd 0.1uF 10% 50V
C8	0160-3874	2		C Fxd 0.01uF
J2	1200-0926	6	4	5 Pin socket for OP1
J3	1200-0926	6		5 Pin Socket for OP2
J4	1200-0926	6		5 Pin Socket for OP3
J5	1200-0926	6		5 Pin Socket for OP4
L1	9140-0399	7	4	Ind 2.2uH 5%
L2	9140-0399	7		Ind 2.2uH 5%
L3	9140-0399	7		Ind 2.2uH 5%
L4	9140-0399	7		Ind 2.2uH 5%
LK1	1251-4670	2	1	Post, 3 Pin
	1258-0209	9	1	Shorting Link
R1	0757-0459	8	1	R Fxd 56.2K 1% 0.125W
R2	0757-0442	9	2	R Fxd 10K 1% 0.125W
R3	0757-0442	9		R Fxd 10K 1% 0.125W
R4	0757-0438	3	1	R Fxd 5.11K
U1	1820-1423	4	1	ICD 74LS123
U2	1820-1204	9	1	ICD 74LS20
U3	1820-1197	9	1	ICD 74LS00
U4	1820-1430	3	1	ICD 74LS161
U5	1820-1210	7	1	ICD 74LS51

**Table 6-4 Replaceable Parts A2 Assembly (Continued)**

Reference Designator	HP Part Number	C D	Qty	Description
U6	1820-1196	8	1	ICD 74LS174
U7	1820-1144	6	1	ICD 74LS02
W1	8120-4738	0	1	Ribbon Cable 14 Way
The following 37204A Main List parts are required for options 001/002.				
These parts are not included in the 37204-60002 Assembly.				
MP8	0515-0536	0	3	Screw M3 X 6 (secures board to pillars)
MP10	0520-0129	8	4	Screw 2-56 X 0.312 } secures fiber
MP11	2190-0103	9	4	Washer Lk Int No 2 } module to board
For Option 002 increase quantity of MP10 and MP11 to 8				
OP1	1005-0021	8		Fiber Optic TX (Port B)
OP2	1005-0005	8		Fiber Optic RX (Port B)
OP3	1005-0021	8		Fiber Optic TX (Port A)
OP4	1005-0005	8		Fiber Optic RX (Port A)

**Table 6-5 Replaceable Parts A10 Assembly**

Reference Designator	HP Part Number	C D	Qty	Description
A2	37204-60010	7	1	Extended Power Fail Assembly
C1	0180-2207	5	1	C Fxd 100uF 10V TA
C2	0160-4835	7	4	C Fxd 0.1uF 10% 50V
C3	0160-4835	7		C Fxd 0.1uF 10% 50V
C4	0160-4835	7		C Fxd 0.1uF 10% 50V
C5	0160-4835	7		C Fxd 0.1uF 10% 50V
R1	0698-0083	8	3	R Fxd 1.96K ohm 1% 0.125W
R2	0698-0083	8		R Fxd 1.96K ohm 1% 0.125W
R3	0757-0465	6	1	R Fxd 100K ohm 1% 0.125W
R4	0698-0083	8		R Fxd 1.96K ohm 1% 0.125W
R5	0757-0346	2	1	R Fxd 10 ohm 1% 0.125W
R6	0698-3136	8	1	R Fx 17.8K ohm 1% 0.125W
R7	0757-0442	9	1	R Fxd 10K ohm 1% 0.125W
R8	0698-3153	9	1	R Fxd 3.83K ohm 1% 0.125W
R9	0698-3162	0	1	R Fxd 46.4K ohm 1% 0.125W
U1	1826-0175	3	1	ICL 319N
U2	1820-0535	7	1	ICD 75451
U3	1820-3673	0	1	ICD 74HC123
W1	8120-4738	3	1	Ribbon Cable 14 way
MP8	0515-0536	0	3	Screw M3 X 6 (secures board to pillars)

Note: MP8 is not included in the 37204-60010 Assembly.





# Manual Changes

---

## 7-1 Introduction

This section normally contains information for adapting this manual to instruments for which the manual content does not apply directly. Since this manual does apply directly to instruments having Serial Numbers listed on the title page, no change information is given here.

Refer to para entitled SERIAL NUMBER/MANUAL CHANGES in section 1 for additional important information about Serial Numbers coverage.



# Service

---

## 8-1 Introduction

This section provides fault isolation, service and repair information for the 37204A/B HP-IB Extender.

## 8-2 Preventive Maintenance

There is no specific preventive maintenance procedure for the 37204A/B. However, if the cable link between Extenders passes through areas of poor environmental condition, check the cable, etc, periodically for damage.

## 8-3 Fault Isolation

Start with General Service Sheet G1:

1. Use G1-1 to resolve if the problem is caused by an HP-IB device connected to the Extender chain or lies within the 37204A/B Extender chain itself.
2. Use G1-2 to find out which item in the Extender chain is faulty: Extender or cable link.

Use G2-1 to find out which assembly is faulty on the Extender; and, when this is resolved, use A1, A2 or A10 sheets to find the faulty component.

## 8-4 Safety Requirements

This section contains information and warnings which must be followed for your protection and to avoid damage to the equipment.

### **WARNING**

**PROCEDURES DESCRIBED IN THIS SECTION ARE PERFORMED WITH PROTECTIVE COVERS REMOVED AND POWER SUPPLIED TO THE INSTRUMENT. SERVICING SHOULD ONLY BE PERFORMED BY TRAINED PERSONNEL WHO ARE AWARE OF THE HAZARDS INVOLVED.**

## 8-5 Recommended Test Equipment

Table 1-1 lists test equipment required to maintain the 37204A/B is listed. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended models.

## 8-6 Repair

Once a faulty 37204A/B has been identified, you can choose to repair it to component level or simply replace the failing assembly.

For assembly level repair, refer to General Service Sheet G2. For component level repair, refer to the appropriate Assembly Service Sheet (A1, A2 or A10).

## 8-7 Co-Axial Cable Repair

Repair damaged or faulty co-axial cable links between Extenders by cutting out the damaged portion of cable and splicing in a new section.

## 8-8 Fiber Optic Cable Repair

You require special tools to repair fiber optic cable. (HP Part No. HFBR-0100 is a

complete tooling kit including connectors and consumables.) If you do not wish to repair a cable yourself, ask your nearest Hewlett Packard Service office for assistance.

Ensure that the ferrule tip of the fiber optic cable and the fiber optic connector are kept clean. Fit protective covers over any unused connectors. If the connector ferrule becomes dirty, wipe it clean with a swab moistened with iso-propyl alcohol.

## **8-9 Description Of Self Test**

### **8-9-1 Introduction**

Self test runs a thorough check on Extender performance and also provides signals used in troubleshooting. Figure 8-1 shows all the functional blocks and signal paths involved in self test.

Self test forces U10 to exercise and check all signal paths which carry either HP-IB data or serial message frames. Correct self test operation is indicated by both PORT FAULT lamps flashing on briefly at power-on, then remaining off. Subsequent lighting of a PORT FAULT lamp indicates a self test failure. A fault lamp may remain lit even after the fault has disappeared or been removed. Recycling power resets self test.

### **8-9-2 Co-Axial Ports**

U10 outputs serial data frames to the A and B port alternately. The loop-backs built into the co-axial ports (loop-backs 1 and 2 in Figure 8-1) return the message frames to U10. Any received data errors or absence of looped-back data cause self test to fail. If a port fails, U10 transmits continuously to the failing port until a good message is received and no message frames get sent to the other port.

The serial message frames sent to each port are approximately 2us long and repeated every 15us in NORMAL speed (20us long, repeated every 150us in SLOW speed).

### **8-9-3 HP-IB Interface**

The HP-IB output lines from U10 are looped back to U10 via the driver/receiver pairs of transceivers U1 through U4 (loop-back paths 3 through 18 in Figure 8-1). The message frames used to test the co-axial ports also exercise all active HP-IB interface lines, driving these lines high and low. The user must check both co-axial loop-back paths before checking the HP-IB interface lines.

A fault in one of the transceiver loop-back paths may cause other HP-IB interface lines from U10 to stay stuck at either a high or a low level. For this reason, the user must check HP-IB loop-back paths in the order shown in Figure 8-1 because the first stuck loop-back path identifies the faulty path.

### **8-9-4 Fiber Optic Interface**

The co-axial ports must pass self test before you can test the fiber optic ports.

For self test of a fiber optic port, set the rear panel switch to FIBER, connect the fiber optic transmitter to receiver via an external looping cable and recycle power. The fiber optic loops are 1f and 2f in Figure 8-1.

**Note:** The duration of the lamp flash (which indicates a pass) is longer when one or more fiber ports are selected - approximately 2.6s.

## **8-10 Running Self Test**

Self test exercises all the main functions of the 37204A/B including co-axial, fiber optic and HP-IB interfaces.

### **8-10-1 Testing the COAX Ports**

1. Disconnect the Extender from the Extender network. On the rear panel, set the TEST switch to TEST and the FIBER switches to NORMAL.
2. Apply power. Check that the front panel POWER lamp lights. If not, check the internal line fuse. See Appendix B for voltage selection/fuse information.
3. Recycle power on the 37204A/B. Check that both PORT FAULT lamps flash on briefly then remain off.

37204A: Both PORT FAULT lamps flash almost immediately after power is re-applied.

37204B: There is a distinct pause, 1.5s long, after power is re-applied before the PORT FAULT LAMPS flash. If the lamps flash but the pause is substantially longer or shorter than 1.5s, suspect the Extended Power Fail Assembly (A10).

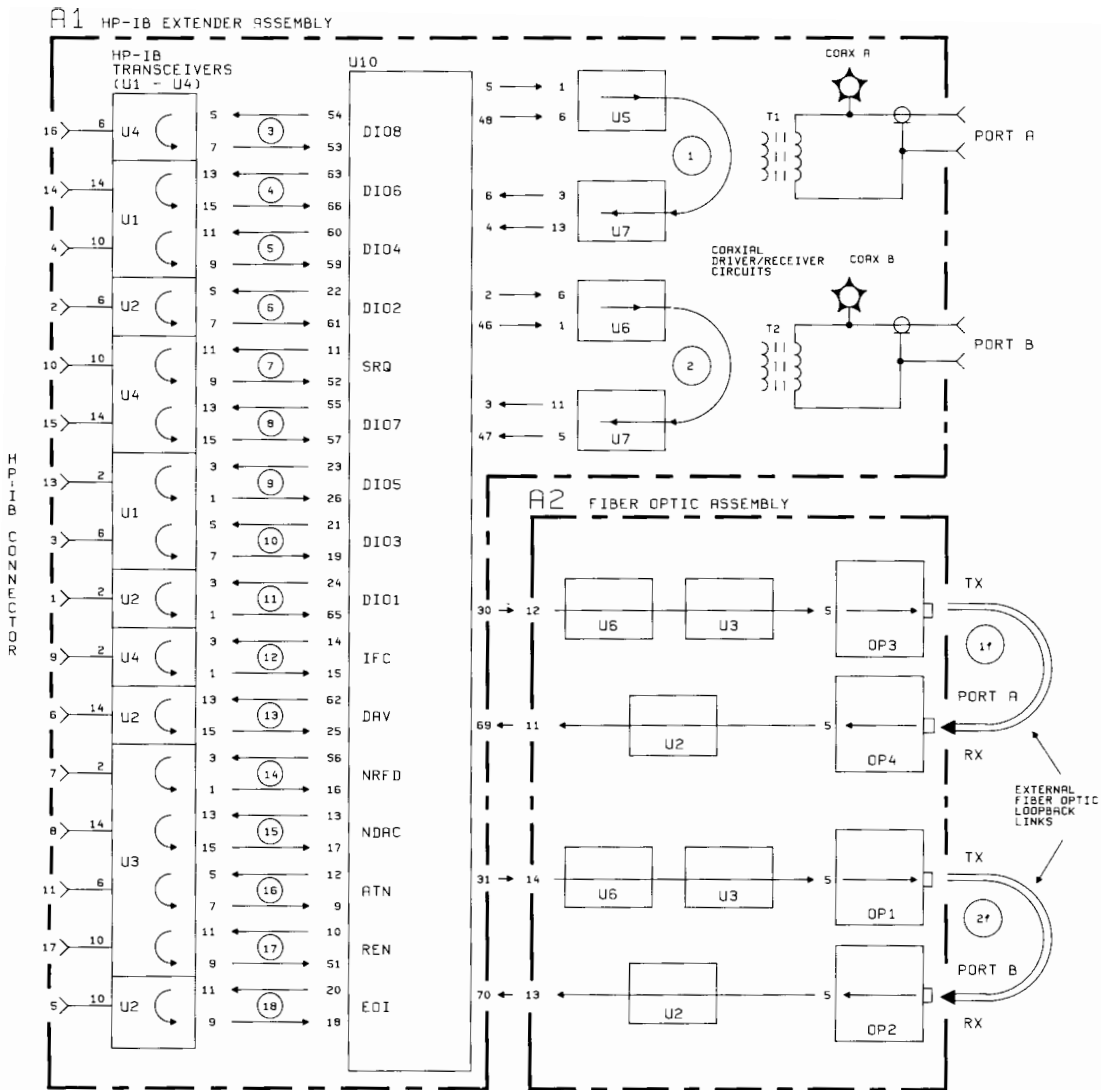


Figure 8-1 Block Diagram of 37204A Showing Self Test Loop-back Paths



4. If either PORT FAULT lamp does not flash, flashes after the initial turn-on flash, or remains on, suspect the A1 assembly.
5. On Extenders without fiber optic ports, self test is complete. Reset the TEST switch to NORMAL.

### **8-10-2 Testing The Fiber Optic Ports (Option 001/002 Only)**

1. Set the rear panel switch to FIBER on the port under test. If the Extender has two fiber ports, set the other port to NORMAL.
2. Connect a fiber optic loop-back cable between TX and RX on the selected fiber optic port. (A plastic fiber loop-back cable, HP Part No. 5061-2694 is suitable. The cable fits inside the inner sleeve of the fiber optic port. Make sure it is pushed fully home.)
3. Recycle power. Check that both PORT FAULT lamps light for about 2.5s, then go off, and remain off. If either lamp fails to come on, remains on, or flashes again, suspect the fiber optic port under test.
4. If the Extender has a second fiber optic port, reset the rear panel FIBER switches: port just tested to NORMAL; port not tested to FIBER. Repeat from step 2.
5. Reset the TEST switch to NORMAL and the FIBER switches to their original states.

# GENERAL SERVICE SHEET G1

## SYSTEM TROUBLESHOOTING

### G1-1 Faulty Extender Chain or HP-IB Device?

This procedure will help you determine if the problem is within the Extender chain or caused by a device connected to the Extender chain.

**Note:** Sometimes HP-IB/IEEE 488 devices work correctly when directly connected but not when linked via 37204A/B Extenders. Do not assume that the problem is caused by the Extender chain. It could well be poor implementation of the IEEE 488-1978 standard in one of the devices connected to the Extender chain.



#### G1-1-1 All PORT FAULT lamps Off

In this case, communication between Extenders is OK but the HP-IB interface on an Extender could be faulty. To check, run self test (para 8-10) on all Extenders.

#### G1-1-2 One or More PORT FAULT Lamps On

1. *Truncation feature not enabled.* In this case, look no further than the master Extender. If a lamp is on or flashing, suspect a fault in the Extender chain and proceed to para G1-2.
2. *Truncation feature enabled on all Extenders.* Locate the truncating Extender (Figure G1-1):
  - Extenders from the master up to (but not including) the truncating Extenders have all PORT FAULT lamps off.
  - The truncating Extender and the end Extender have one PORT FAULT lamp on and the other off.
  - Extenders beyond the truncating Extender up to the end Extender have all PORT FAULT lamps on.

Run self test (para 8-10) on the truncating Extender and its neighbor nearest to the end Extender. If both Extenders pass, suspect the cable link between the Extenders. If either Extender fails, proceed to para G2-1.

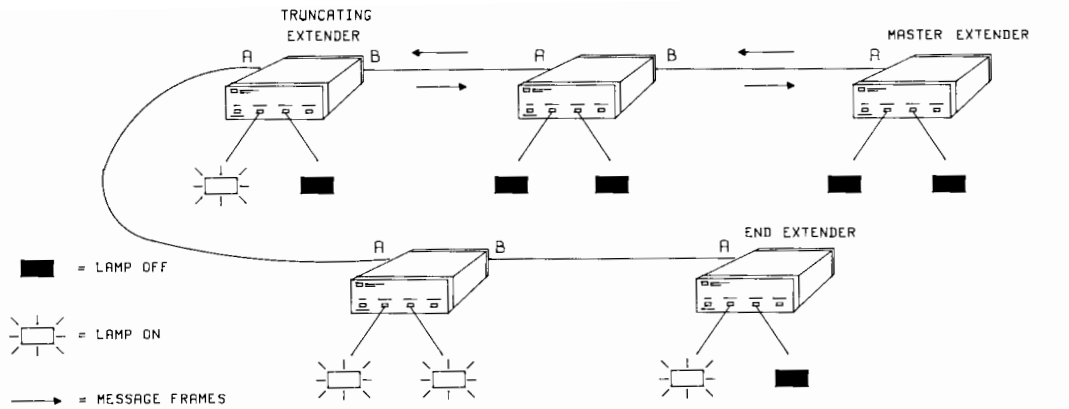


Figure G1-1 Locating a Truncating Extender

## G1-2 Troubleshooting Within The Extender Chain

### G1-2-1 Background

In an Extender chain, message frames propagate from the master Extender along the Extender chain to the end Extender, then return in the reverse direction to the master. Only one message frame is allowed in the Extender chain at any one time: the master Extender waits until the frame is returned before generating a new frame. *The message path is thus a loop, beginning and ending at the master.*

If no message is returned within the master's timeout period, the master lights its PORT A FAULT lamp and re-transmits the original message. The PORT A FAULT lamp will remain on until message frames are again received back at the master. Non-return of a message frame indicates that the message frame has been lost. There are two possible causes:

1. There is a break in the message path, for example, faulty Extender, incorrectly set POSITION switches on the Extenders, a powered-down Extender, or a broken cable between Extenders.


2. A message frame has been corrupted in transmission and rejected by the receiving Extender, so that no frame is forwarded to the next Extender.

The status of the PORT FAULT lamps on the remaining Extenders indicates the location of the fault in the system. On these Extenders, a PORT FAULT lamp lights if,

1. No message frames have been received at that port for 100ms.
2. A corrupted message frame has been received.

The master timeout (1.6ms) is much shorter than the 100ms timeout of the other Extenders in the chain. Thus, Extender ports located before a break in the chain receive a message frame every 1.6ms and have their PORT FAULT lamps off, whilst Extender ports located after the break will have their PORT FAULT lamps on.

If an occasional message frame is corrupted, the master PORT A FAULT lamp flashes (no frame returned) and the PORT FAULT lamp on the Extender receiving the faulty message frame also flashes. Other port fault lamps in the chain may remain off. See Figure G1-2.

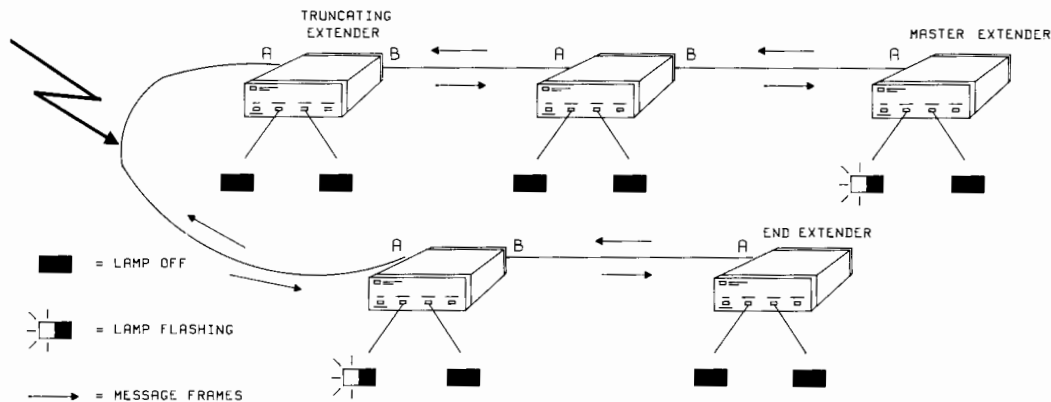

**Figure G1-2 PORT FAULT Lamp Indications caused by Intermittent Errors**


## G1-2-2 Locating The Faulty Extender or Cable Link

### Procedure:

1. Disconnect the system controller and all HP-IB devices from the Extender chain. Recycle power on all Extenders.

**Note: Step 1 is essential if the truncation feature is enabled: by preventing the system controller from asserting IFC, truncation cannot be initiated. Recycling power clears any existing truncation.**

2. Determine for each Extender which port (A or B) runs back towards the master Extender and which runs out towards the end Extender.
3. Refer to Figure G1-3. Working out in strict order from the master (which should have PORT A FAULT lamp on or flashing), check the status, on each Extender, of the port running back to the master.
  - If the PORT FAULT lamp is off, move on to the next Extender. (For the moment (ie until step 5), ignore the status of the other PORT FAULT lamp.)
  - If the PORT FAULT lamp is on or flashing, go to step 4.
4. A PORT FAULT lamp lit indicates that communication is broken between the present Extender and the previous Extender visited. (A flashing PORT FAULT lamp indicates occasionally missing or corrupted message frames.) Suspect either of the Extenders or the cable link between the Extenders. To determine which, run self test (para 8-10) on the two Extenders. If both pass, suspect the cable link.
5. If the steps taken so far have not isolated the fault, use the same procedure but work back from the end Extender. This ensures that the complete loop which frames have to take is checked out and is particularly important for fiber optic links where the go/return paths are separate.

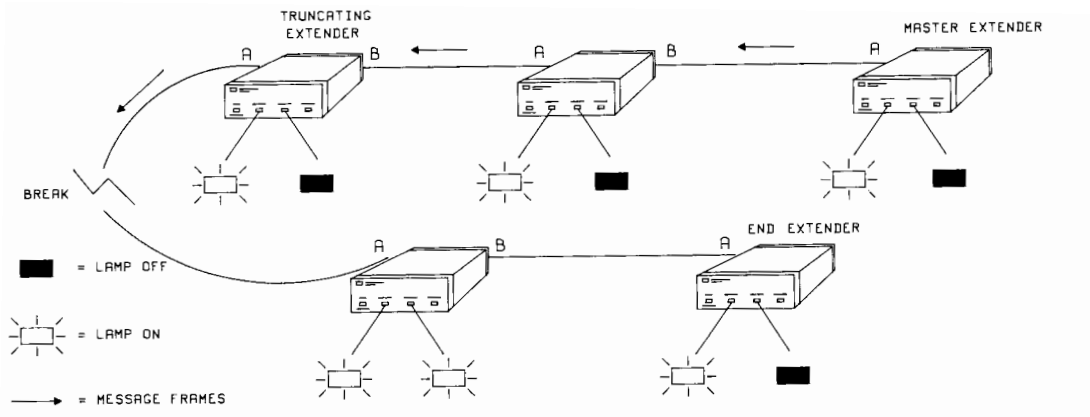

**Figure G1-3 PORT FAULT Lamp Indications caused by a Continuous Failure**





# GENERAL SERVICE SHEET G2

## INSTRUMENT TROUBLESHOOTING

### G2-1 Determining Which Assembly is Faulty

Use this procedure for on-site repair of a faulty 37204A/B when component level troubleshooting and repair procedures are not practical, or as a first step in component level troubleshooting on a particular assembly.

The 37204A/B is configured according to model and option as follows:

Model	Assemblies fitted
37204A	A1
37204A Option 001	A1 + A2
37204A Option 002	A1 + A2
37204B	A1 + A10

Procedure:

1. Run the 37204A/B self test (para 8-10) and note at which stage the test fails.
2. If self test fails at para 8-10-1 and A10 is fitted and suspected as possibly faulty, proceed to step 5. However, if A10 is not fitted or A1 is clearly faulty, replace A1 as described in para G2-2.
3. If a 37204A option 001/002 fails self test at para 8-10-2, suspect the A2 fiber optic assembly. Since it is not reckoned economic to replace a complete A2 assembly, further fault isolation is recommended (step 4).
4. The A2 Fiber Optic Assembly comprises the parts listed in Table G2-1. Identify the faulty module by substituting a known good part and re-running self test after each substitution.

**Note:** The fiber optic transmitter and receiver modules plug into sockets on the A2 Assembly and are retained in position by screws through the underside of the pc board. Leads on a replacement fiber optic module may have to be trimmed back to fit into the socket. Use the original part to determine the correct length.



**Table G2-1 A2 Fiber Optic Assembly: Field Replaceable Parts**


Field Replaceable Part	Part Number	Option 001 QTY	Option 002 Qty
Option PC Board	37204-60001	1	1
Fiber Optic Transmitter	1005-0021	1	2
Fiber Optic Receiver	1005-0005	1	2

5. If self test clearly indicates a failure of the A10 assembly, replace A10. Otherwise, disconnect the ribbon cable from A10 assembly to A1 assembly and re-run self test. If self test passes, A10 assembly is faulty. If self test fails, A1 assembly is faulty. Replace A1 assembly as described in para G2-2.

PC SECURING  
SCREW

REAR PANEL  
SECURING  
SCREW

HP-IB  
CONNECTOR  
SCREWS

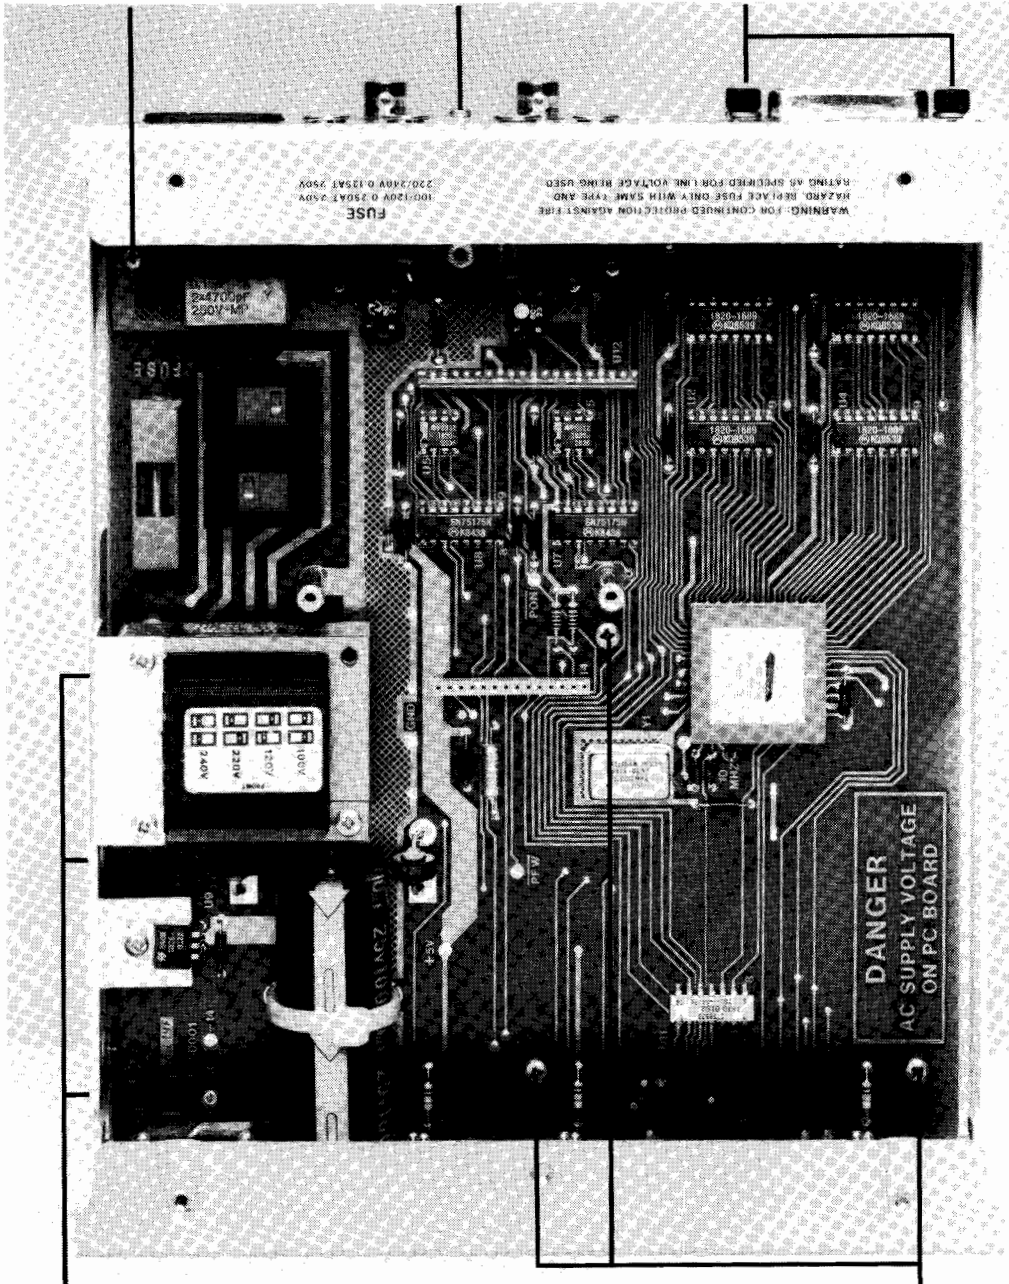

HEATSINK  
SECURING  
SCREWS

PC SECURING  
SCREWS

Figure G2-1 Assembly Retaining Screws

## G2-2 A1 Assembly Replacement Procedure

The 37204A and 37204B HP-IB Extenders use a common A1 assembly which is available either as a new or exchange part.

	New Part Number	Exchange Part Number
HP-IB Extender Assembly	37204-60001	37204-69001

### Procedure:

1. Disconnect all cabling to the Extender.
2. Remove the plastic trim from the front and rear panels. Release the trim by pushing outwards on one of the sides and the sliding trim forward. See Figure B-1, Appendix B.
3. Undo 8 cross-head screws and remove the top cover.
4. Remove the Fiber Optic (A2) assembly or Extended Power Fail (A10) assembly from A1 and retain for re-fitting onto the replacement A1 assembly.
5. Remove the 2 screws securing the HP-IB connector to the rear panel. Undo 1 cross-head screw securing the A1 assembly to the rear panel.
6. Disconnect the safety earth from the power cord socket to the rear panel.
7. Remove 3 screws securing the heatsink to the left-hand side of the Extender.
9. Undo 4 screws and remove A1 assembly from the bottom cover.

Replacement is the reverse of disassembly. Ensure that:

1. The two voltage selection switches on the replacement board are set for the correct voltage, and that the fuse is of the correct value (use the fuse from the original board if necessary). Refer to Appendix B for information on voltage selection.
2. Replace the top cover with the magnetic shield positioned over the power supply transformer.

# ASSEMBLY SERVICE SHEET A1

## HP-IB EXTENDER MAIN ASSEMBLY

### A1-1 Introduction

This service sheet provides component level repair information for A1 assembly. The schematic diagrams for the power supply and the Extender logic are provided on separate sheets.

### A1-2 Circuit Description

Regulator U9 produces +5V. If the unregulated supply to U9 falls below 7.7V, the POWER FAIL signal at U8(3) and the POWER-ON signal at U8(5) are pulled low.

The RESET signal to U8(6) is an input from the optional Extended Power Fail assembly A10. When this line is pulled low during an extended reset, the POWER-ON signal is pulled low forcing the DISABLE HP-IB DRIVERS signal at U8(11) high.

All the logical functions of the HP-IB Extender are performed within U10 which obtains timing from the 30MHz oscillator Y1. Transceivers U1 through U4 provide buffering between U10 and the HP-IB signals at connector J1.

Since identical driver/receiver circuits interface U10 with the A and B co-axial ports, only Port A circuit is described here.

The co-axial port uses alternate mark inversion (AMI) encoding (i.e "1's" are sent alternately as positive and negative going pulses). Separate open collector drivers (U5) driven by U10(48) and U10(5) provide the +ve and -ve drive through transformer T1 which isolates the co-axial port from its driver/receiver. The co-axial shield is isolated from ground and allowed to float. However, varistor CR3 limits the maximum voltage on the co-ax shield to 24V.

Signals received from the co-axial port are detected using a pair of comparators (U7), one for each direction of received signal swing (+ve or -ve). The outputs from the comparators are taken directly to U10(4) and U10(6). Typically, with no signal input, the voltages at the + and - inputs of comparator U7 are 4.7V and 4.0V, respectively.

Connector J5 links A1 to the A2 Fiber Optic or A10 Extended Power Fail assemblies. Edge connector J3 is used during production test and has no other function.

## A1-3 Troubleshooting Procedure


Enter this procedure after running self test (para 8-10) and failing the COAX ports test (para 8-10-1).

General:

1. If an Extended Power Fail (A10) or Fiber Optic (A2) assembly is fitted, disconnect the ribbon cable at J1. It may be convenient to remove the A2 or A10 assembly.
2. Set all rear panel switches to NORMAL (down). Set the front panel POSITION switch to MASTER. Power on the Extender.
3. Check that the voltage on the +5V test pin is  $+5V \pm 0.25V$ . Check that the power supply ripple is less than 50mV peak-to-peak.
4. Check that the  $\overline{\text{PFW}}$  (Power Fail Warning) and  $\overline{\text{PON}}$  (Power ON) test points are both high.
5. Check that the frequency at the 10MHz test point is  $10\text{MHz} \pm 10\text{kHz}$ . If correct, the 30MHz output of Y1 can be assumed OK.

Port A:

6. Check at the COAX A test point for a short (approximately 2us) burst of AMI signal occurring every 1.6ms. The signal waveform has the form

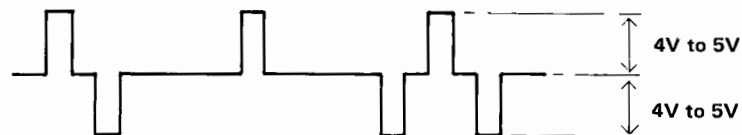

- If the signal is OK, check that U10 is receiving data by looking for bursts of TTL

activity at both U7(3) and U7(13). If this is OK, suspect U10, otherwise suspect the comparator circuit (U7).

- If the signal pulses are of only one polarity, suspect one of the output drivers (U5) or U10. Confirm this by looking for TTL activity at U5 (6,7) and U5 (1,2).
- If no signal is present, suspect a discontinuity in the driver output circuitry (U5 and T1). Also check that MASTER mode is selected correctly on S1.

#### Port B:

7. If step 6 shows correct operation at port A, set the rear panel TEST switch to TEST, recycle power and check out port B in a similar manner to port A. (Look for inputs to U10 at U7(11) and U7(5) and outputs from U10 at U6(1,2) and U6(6,7).)

**Note: Self test sends out data alternately to ports A and B when no fault is found but continuously to one port when found faulty. Thus, if port A passes and port B fails, nothing gets sent again to port A until port B passes; and if port A fails, nothing gets sent to port B.**

8. If the A and B ports pass self test, set the front panel switch to MIDDLE and check that the AMI signal is switched off at the COAX A test point. If not, suspect S1 or U10.

#### HP-IB Interface:

9. Self test exercises, continuously and in a set sequence, all the HP-IB interface lines on U10. Transceivers, U1 through U4, output the signals from U10 to the HP-IB connector (J1) and, at the same time, loop them back to U10. Using an oscilloscope or logic probe, check the operation of the HP-IB lines by looking for TTL activity on all the pins listed in Table A1-1. Work down from the top of the table in strict order.

**Note: 1. The paths through the transceivers are non inverting. If an output from U10 is found to be stuck, check that the transceiver returns the same TTL level to U10 as sent out. If not, suspect the transceiver; otherwise suspect U10.**

2. **The HP-IB handshake lines DAV, NRFD and NDAC have to be considered together. If any one is found to be stuck, check the transceivers in all three handshake lines as described in Note 1 before suspecting U10.**

**Table A1-1 U10 HP-IB Loop-back Testing Sequence**

O/P from U10	Connection to HP-IB Bus	I/P to U10	Interface Signal
U4 (5)	U4 (6)	U4 (7)	DIO 8
U1 (13)	U1 (14)	U1 (15)	DIO 6
U1 (11)	U1 (10)	U1 (9)	DIO 4
U2 (5)	U2 (6)	U2 (7)	DIO 2
U4 (11)	U4 (10)	U4 (9)	SRQ
U4 (13)	U4 (14)	U4 (15)	DIO 7
U1 (3)	U1 (2)	U1 (1)	DIO 8
U1 (5)	U1 (6)	U1 (7)	DIO 3
U2 (3)	U2 (2)	U2 (1)	DIO 1
U4 (3)	U4 (2)	U4 (1)	IFC
U2 (13)	U2 (14)	U2 (15)	DAV
U3 (3)	U3 (2)	U3 (1)	NRFD
U3 (13)	U3 (14)	U3 (15)	NDAC
U3 (5)	U3 (6)	U3 (7)	ATN
U3 (11)	U3 (10)	U3 (9)	REN
U2 (11)	U2 (10)	U2(9)	EOI

19. If the above checks do not pinpoint the problem, replace U10 and repeat self test. If U10 is installed in a socket, remove it by gently easing up each side of U10 in turn with a small flat bladed screwdriver.





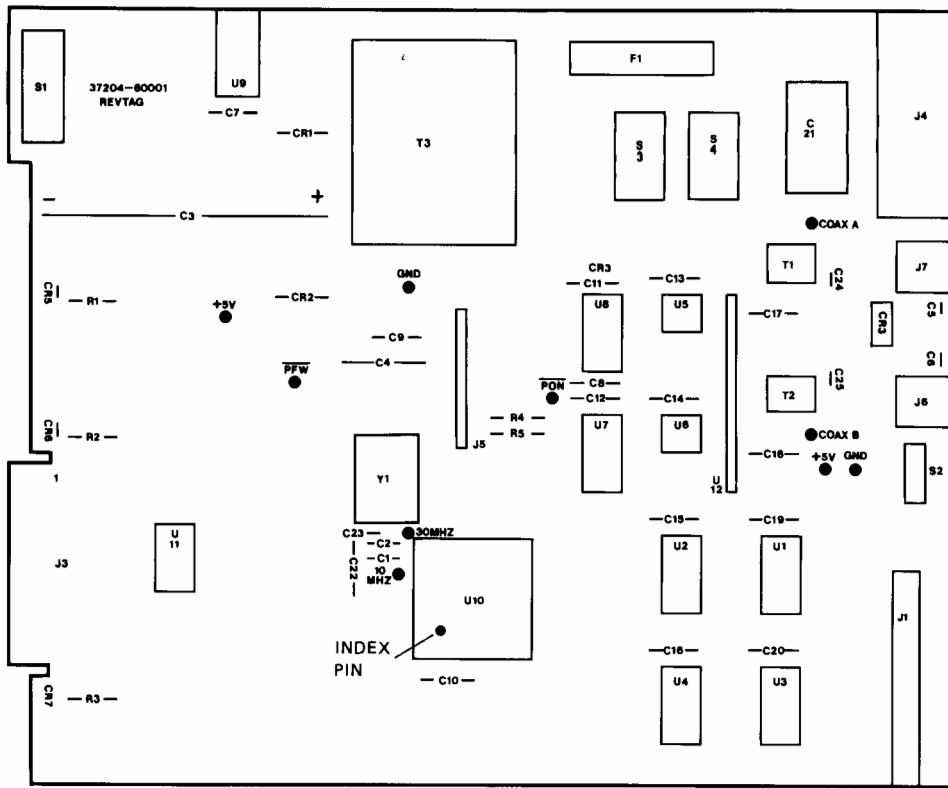


Figure A1-1 A1 Component Location


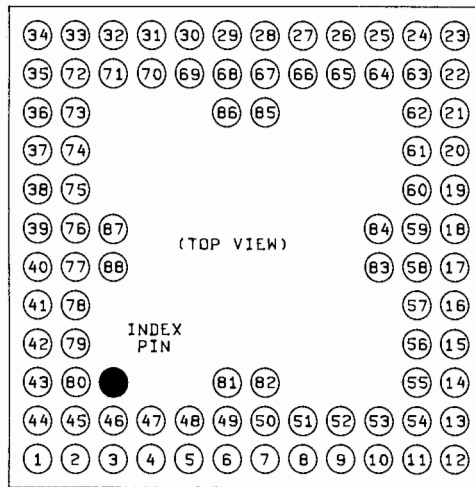


Figure A1-2 U10 Pin Location

**A1 HP-IB EXTENDER ASSEMBLY (PART 1) 37204-60001**

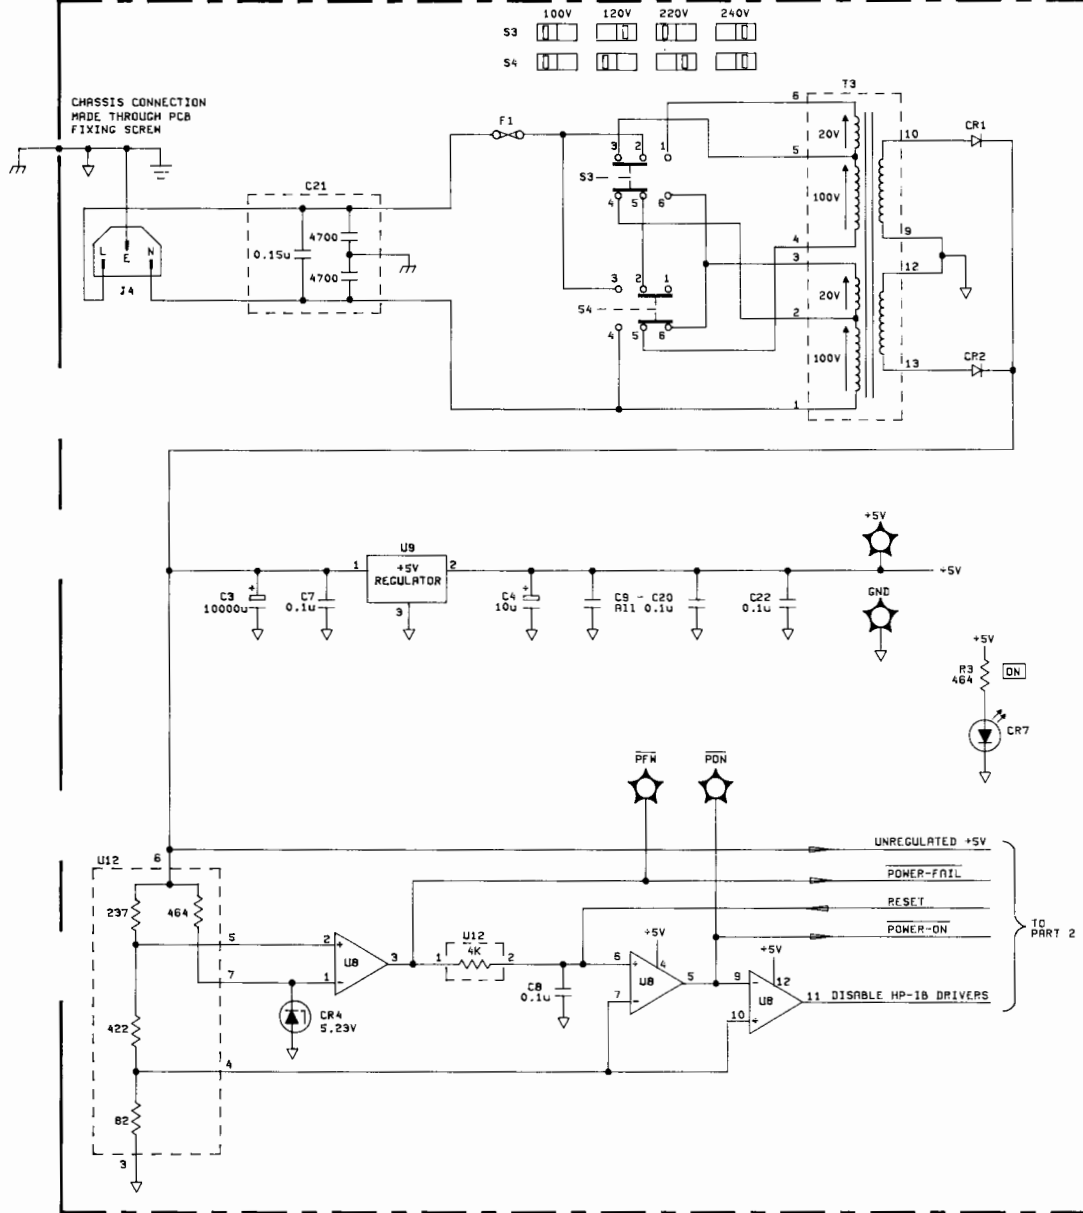

**Figure A1-3 A1 Power Supply**

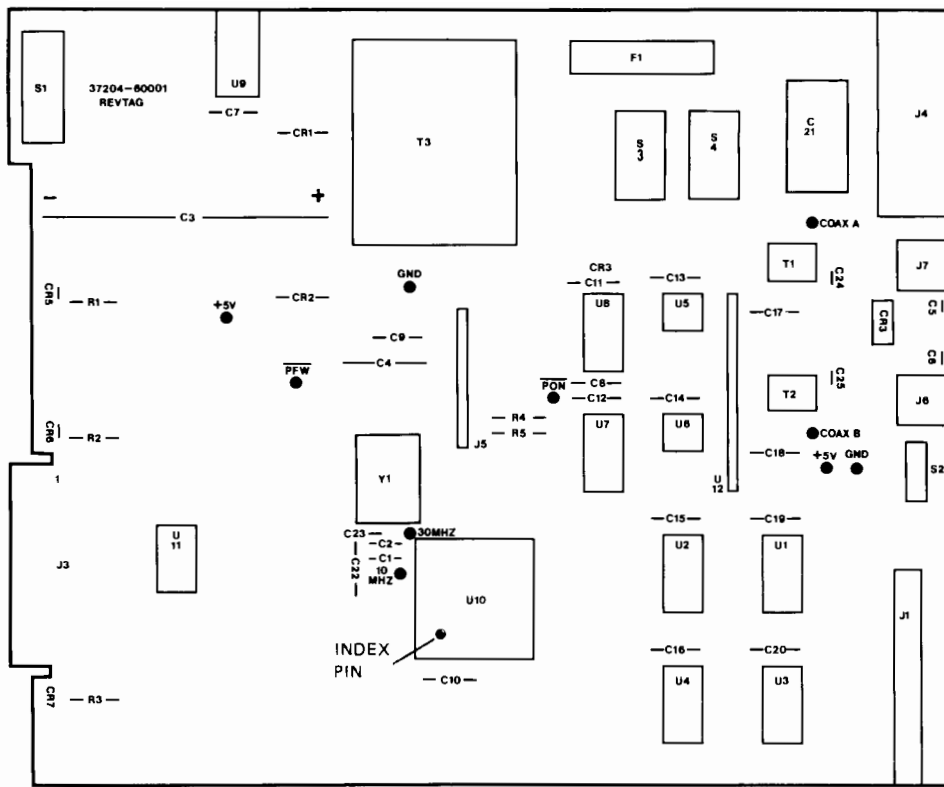


Figure A1-4 A1 Component Location

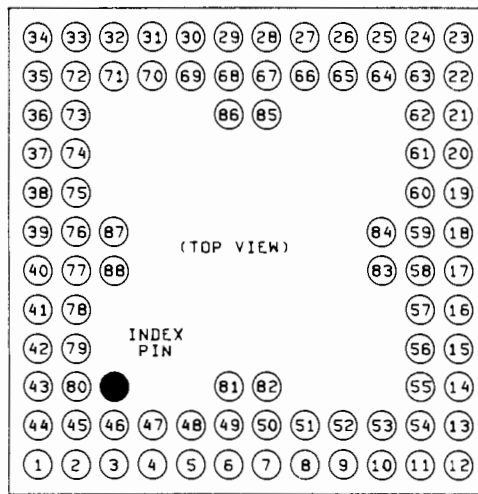


Figure A1-5 U10 Pin Location

A1 HP-1B EXTENDER ASSEMBLY (PART 2) 37204-50001

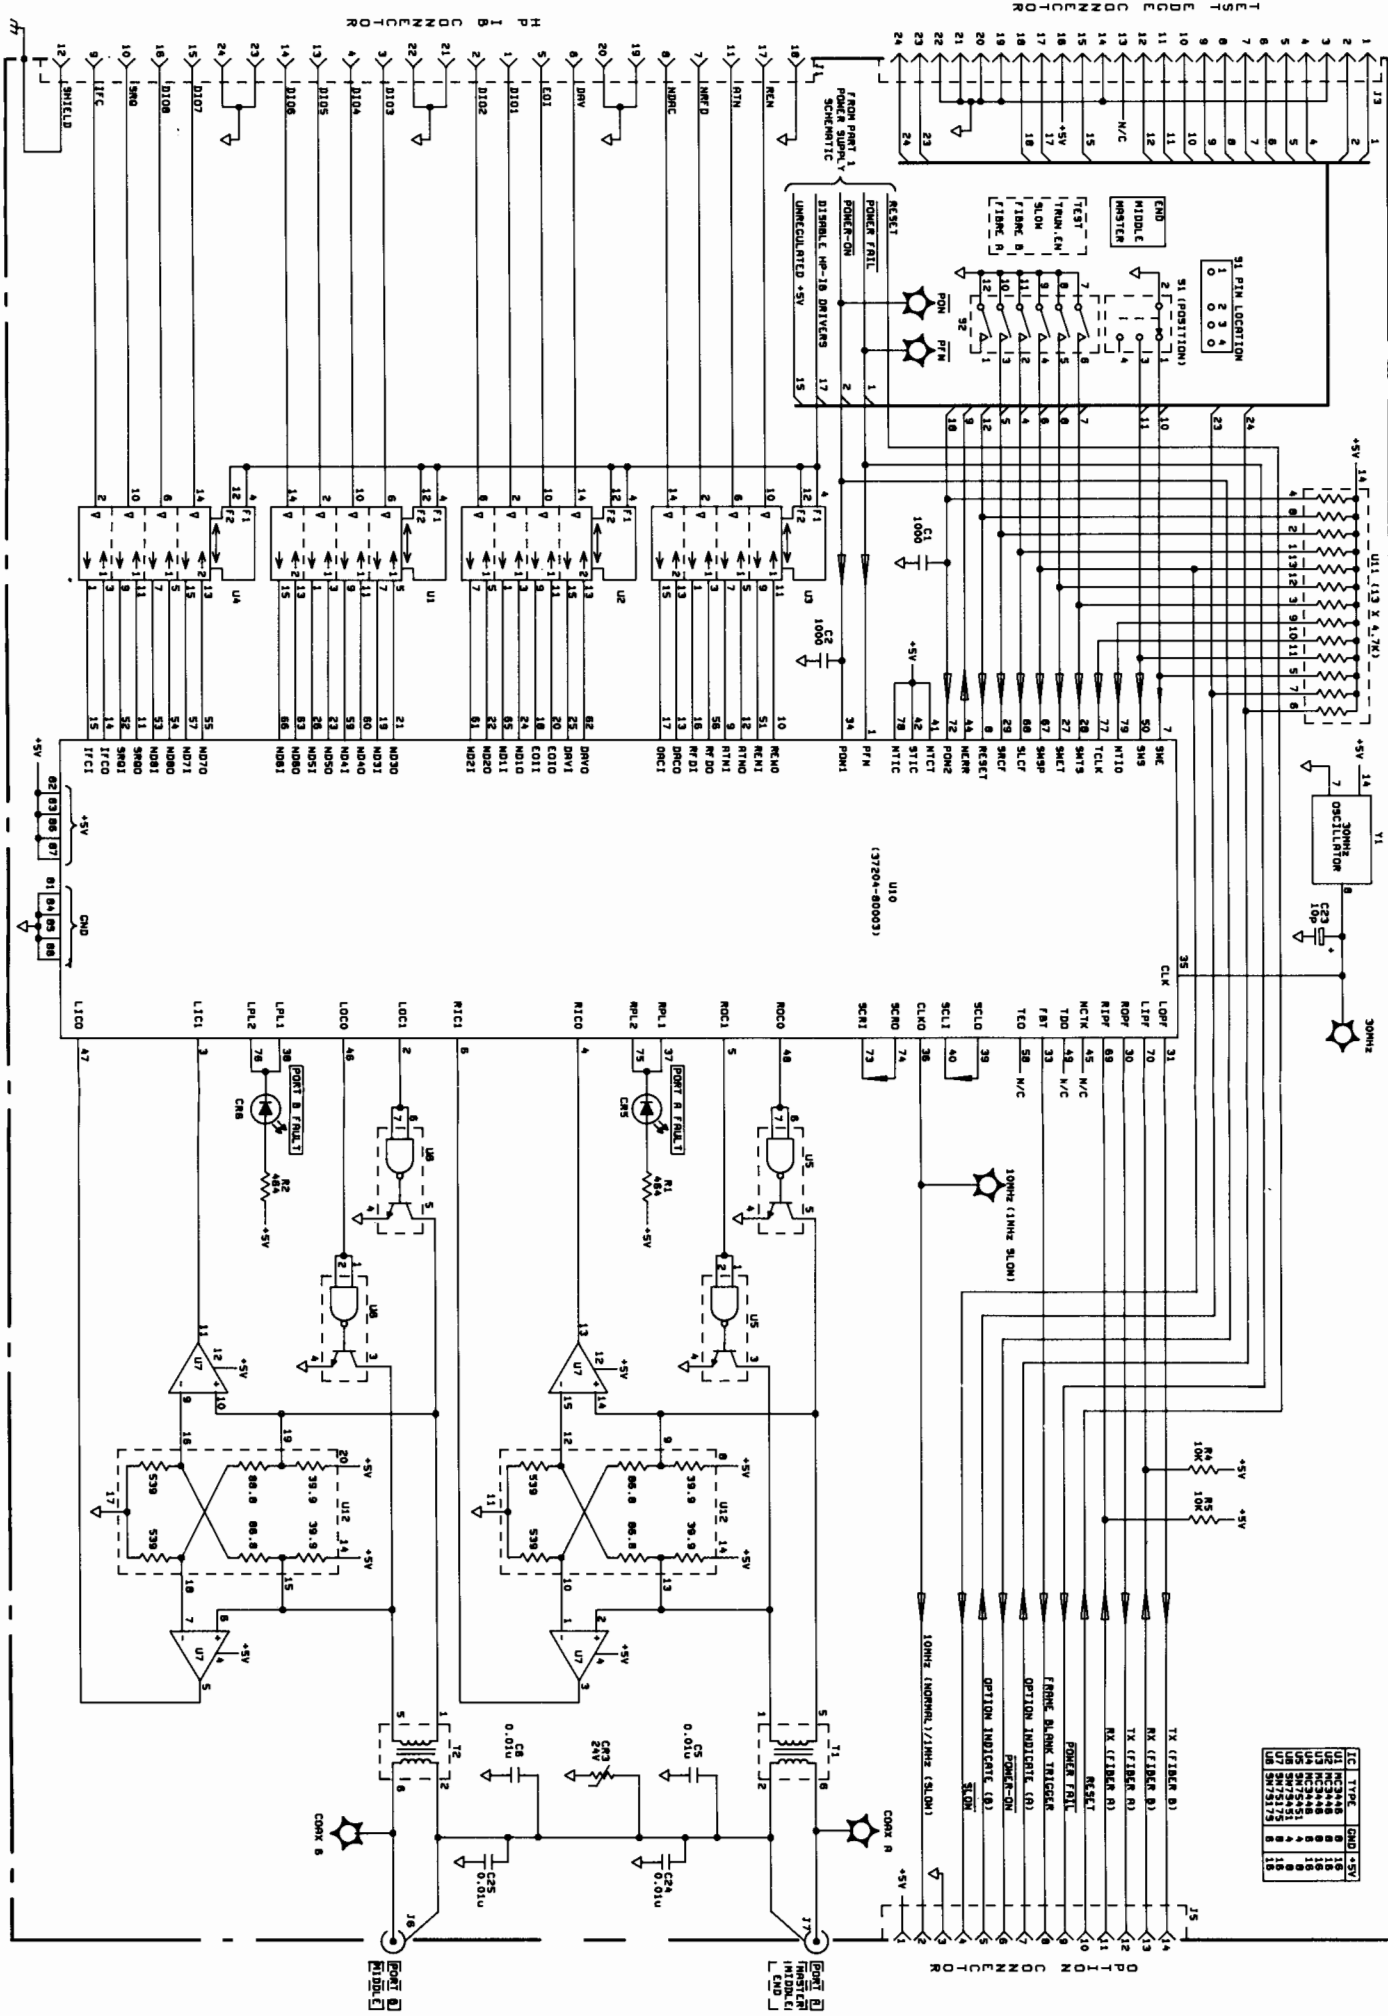


Figure A1-6 A1 Extender Logic and Driver/Receivers



## **ASSEMBLY SERVICE SHEET A2 FIBER OPTIC ASSEMBLY**

### **A2-1 Introduction**

This service sheet provides component level repair information for the A2 assembly. The assembly may have one (option 001) or two (option 002) fiber optic ports fitted.

### **A2-2 Circuit Description**

Separate, plug-in, fiber optic modules provide the fiber/electrical conversion on A2 Assembly (2 transmitter and 2 receiver modules).

The setting of the FIBER switches on the rear panel determines which or both of the transmit/receive signal pairs are routed from A1 to A2 assemblies.

Since ports A and B have identical transmit/receive circuits, only port A circuit is described here.

The transmit signals arriving at J1(12) are delayed by two clock pulses (via two D-type flip flops in tandem) and inverted before being input at pin 5 of the fiber optic transmitter.

The MONITOR output (pin 2) of a fiber optic receiver goes low if the received light level falls below a safe level. The signal is gated with the received signal (U2 pin 10) to disable the received signal line if the MONITOR output goes low. However, the MONITOR output may take up to 2s to react to a sudden drop in the light level. During this period, random data could be output by the fiber optic receiver. An interlock prevents this from being interpreted as valid data. Whenever a corrupted data frame is detected by A1 U10, FRAME BLANK TRIGGER triggers monostable U1A which disables the received data path in U2 for 2.6s, allowing sufficient time for the MONITOR line to go low.

The remaining circuitry on the A2 assembly ensures that pin 1 (MODE) on the fiber optic transmitter modules is correctly conditioned. Different conditioning sequences are used for SLOW and NORMAL speeds.

In SLOW speed, monostable U1B is enabled and is continuously triggered at the 1MHz by CLK. The output from the monostable is a continuous train of short-duration, high-going, 1MHz pulses which are applied to the MODE input of the fiber optic transmitters.

In NORMAL speed, the MODE input is pulsed high immediately before the start of each 22-bits-long message frame. This is achieved as follows.

The low-going start pulse at the beginning of each message frame is detected at U5(3) or U5(2) which forces U5(6), and, in turn, MODE on the fiber optic transmitters, to go high. The start pulse also triggers the COUNT 25 LOGIC by setting U5(8) high. Once U6 is clocked, the high at U5(8) is transferred to pin 9 (LOAD) of the binary counter U4 allowing it to count up.

The high at U6(12) forces U5(6) (and thence MODE) low again. MODE remains low until U6(12) returns to low 25 clock pulses later. Since the message frame is 22 bits long, MODE is not pulsed again until the start of the next message frame.

Link LK1 is used during factory tests to determine the option status of the 37204A/B under test. The setting of this link has no effect on Extender operation and can be ignored.

## **A2-3 Troubleshooting Procedure**

Enter this procedure after running self test (para 8-10), passing the COAX port tests (para 8-10-1) but failing the fiber optic port tests (para 8-10-2).

Data Path Through Fiber Ports:

1. Set the rear panel switch to FIBER on the port failing self test and to NORMAL on the other port. If both fiber ports fail self test, select PORT A and test first; then select PORT B and repeat the tests.
2. Set the rear panel TEST and SLOW switches up and set all other switches to NORMAL. Using optical cable, loop the transmitter to the receiver on the port under test (see para 8-10-2). Recycle power.
3. Use table A2-1 to check the data paths through ports A and B.

**Table A2-1 Looped Back Test Signals**

Signal	Test Point (Port A)	Test Point (Port B)	Correct Test Signal
1	TX (FIBER A)	TX (FIBER B)	TTL activity
2	U6(5)	U6(10)	Signal 1 delayed by 2 clock pulses
3	U3(3)	U3(6)	Signal 2 inverted
4	U2(10)	U2(2)	Signal 3
5	U2(8)	U2(6)	Signal 3 inverted

4. Check that the MODE signal at TP1 is a train of narrow (90ns), high-going pulses at 1MHz. If the signal is missing or wrong, suspect monostable U1B.
5. Recycle power and check that the monostable output at U1(12) is held low for approximately 2.6s after power is applied, then goes high and remains high. If the monostable gets triggered (output low) after the initial 2.6s, AIU10 is detecting errors in the received signal. The problem may be a faulty fiber optic transmitter or receiver module.

**Count 25 Logic:**

6. The Count 25 logic is enabled when  $\overline{\text{SLOW}}$  is active (i.e. J1(4) high). To check the logic, set the rear panel SLOW switch to NORMAL and recycle power. (The optical loop back is not needed for this test and may be removed).
7. Check TP1 for a short high-going pulse (0.2us wide). The pulse should not repeat within 2.5us. If the pulse is missing or otherwise incorrect, set the rear panel TEST switch to NORMAL, the front panel position switch to MIDDLE and recycle power.
8. Check that U5 pins 2, 3, 4, 5, 9, 10, 11 and 12 are all high and that U5 pins 1, 6, 8 and 13 are all low.
9. Reset the rear panel switch to TEST and recycle power.

10. Check that the low-going pulse at the start of each TX message on J1(12) or J1(14) causes a rising edge on U5(6) and U5(8).
11. Trigger an oscilloscope on the rising edge of the signal at U4(9). Check that U4(9) stays high for 2.5us (25 x 1MHz clocks) then goes low. If the signal is incorrect, check the count sequence of U4.






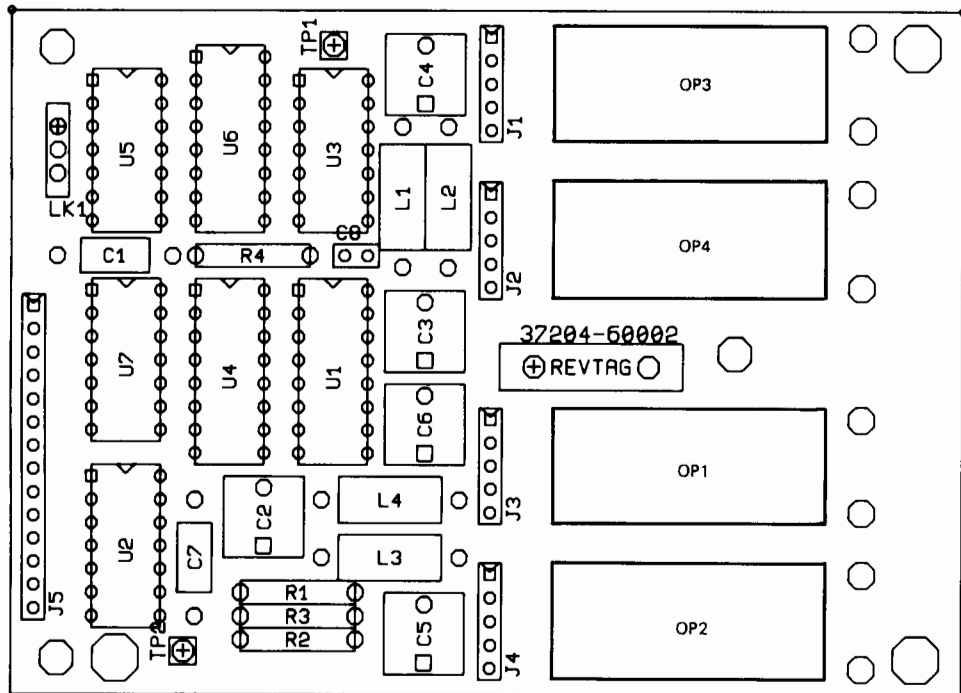



Figure A2-1 A2 Component Location

A2 FIBER OPTIC ASSEMBLY (OPTION 001/2) 37204-60002




A2-2 Fiber Optic Drivers/Receivers

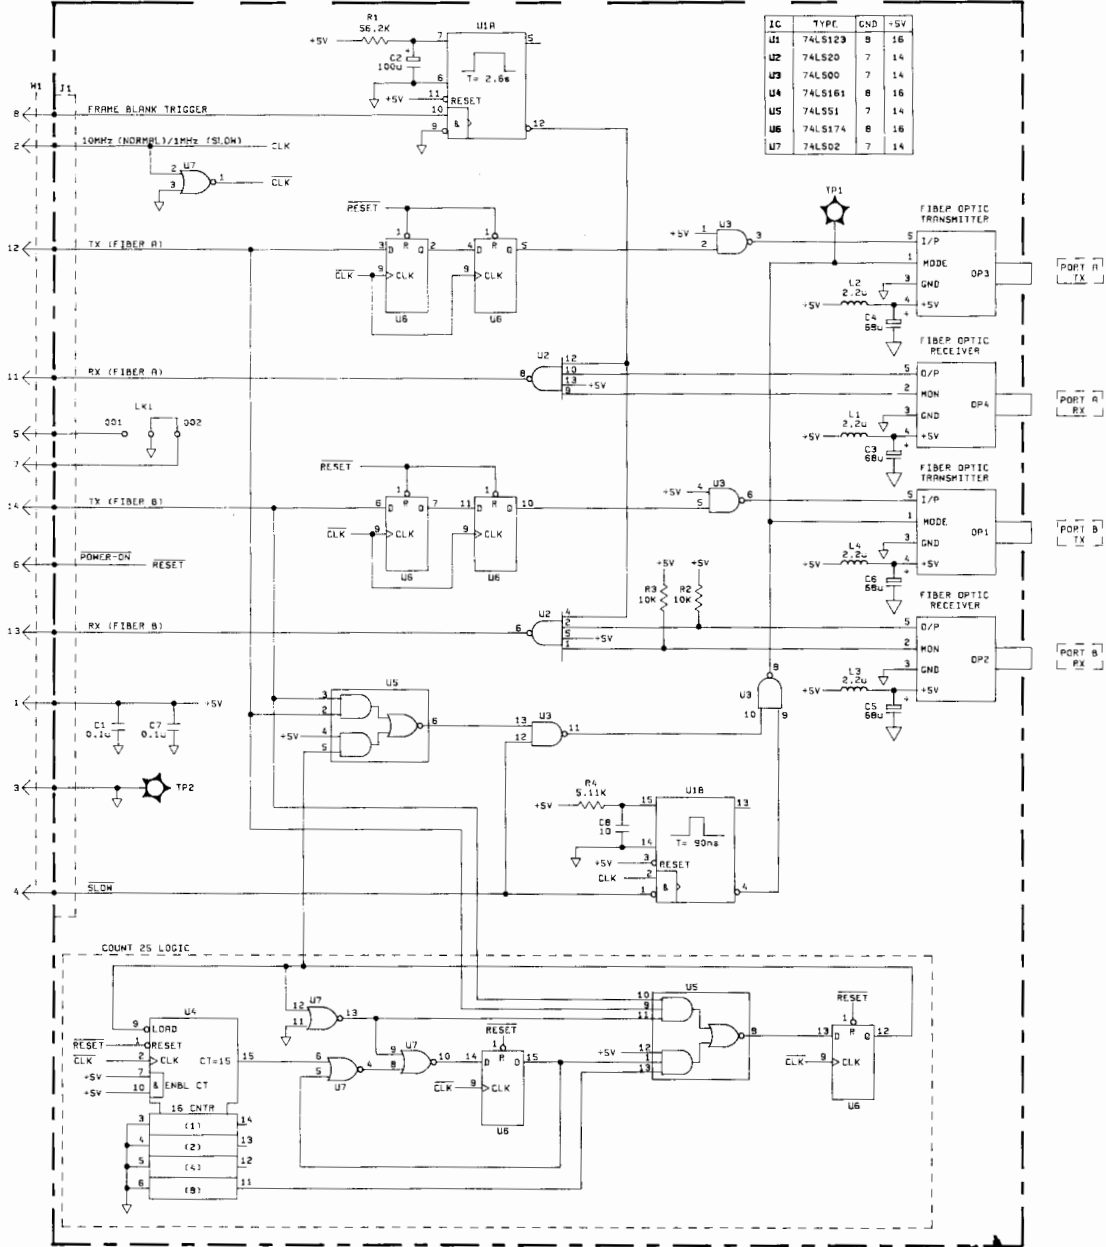

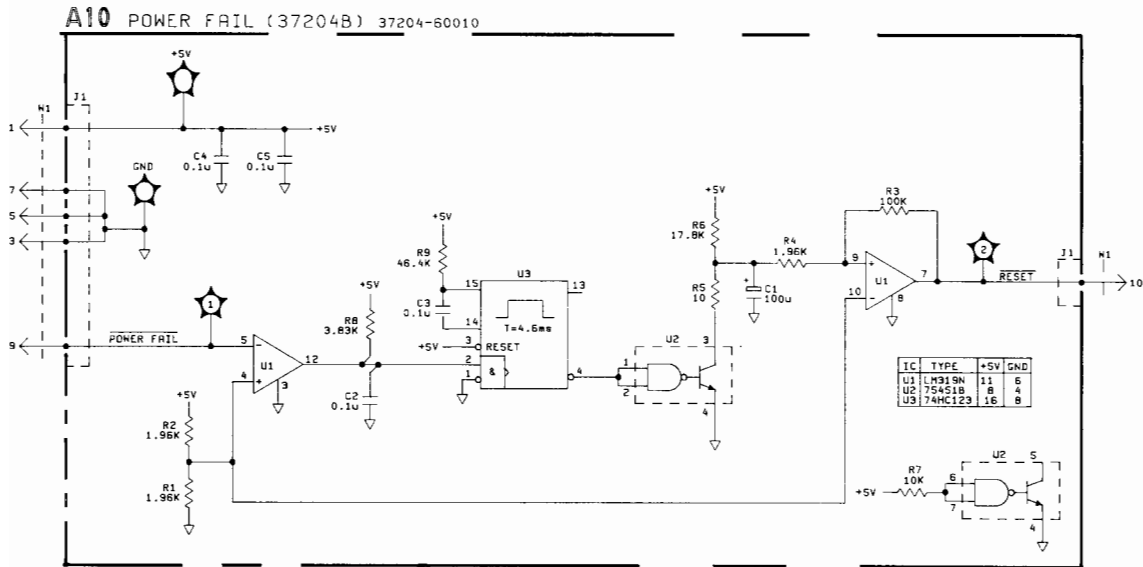

**Figure A10-1 Power Fail Timer**

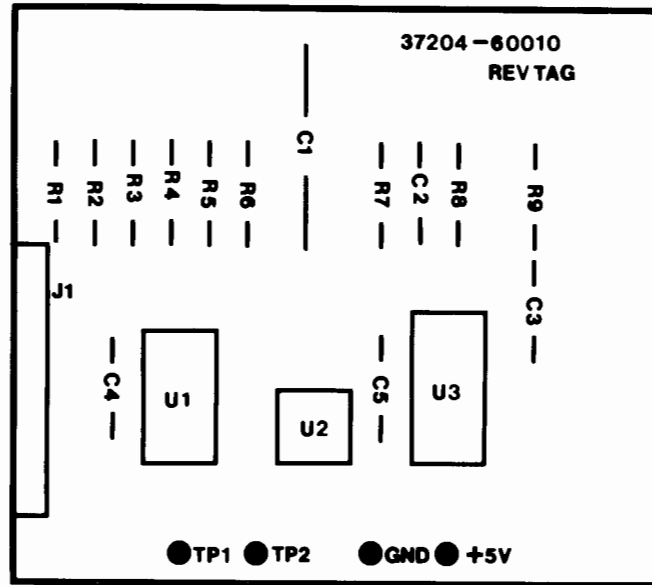

**Figure A10-2 A10 Component Location**

# ASSEMBLY SERVICE SHEET A10

## EXTENDED POWER FAIL ASSEMBLY

### A10-1 Introduction

This service sheet provides component level repair information for the A10 Assembly.

### A10-2 Circuit Description

The Extended Power Fail Reset Assembly (A10) ensures that if a momentary power fail (or brownout) occurs, the RESET signal remains low for between 1s and 2s.

If the signal at TP1 falls below the 2.5V threshold set by R1/R2, monostable U3 is triggered. The resulting low-going pulse at U3(4) discharges C1 through R5. When the monostable returns to its stable state, capacitor C1 recharges through R6. During the recharge period, TP2 is pulled low.

### A10-3 Troubleshooting Procedure

1. Check TP1 and TP2 are >3.5V.
2. Momentarily ground TP1 (Power Fail) and check TP2 goes low for between 1 and 2s.

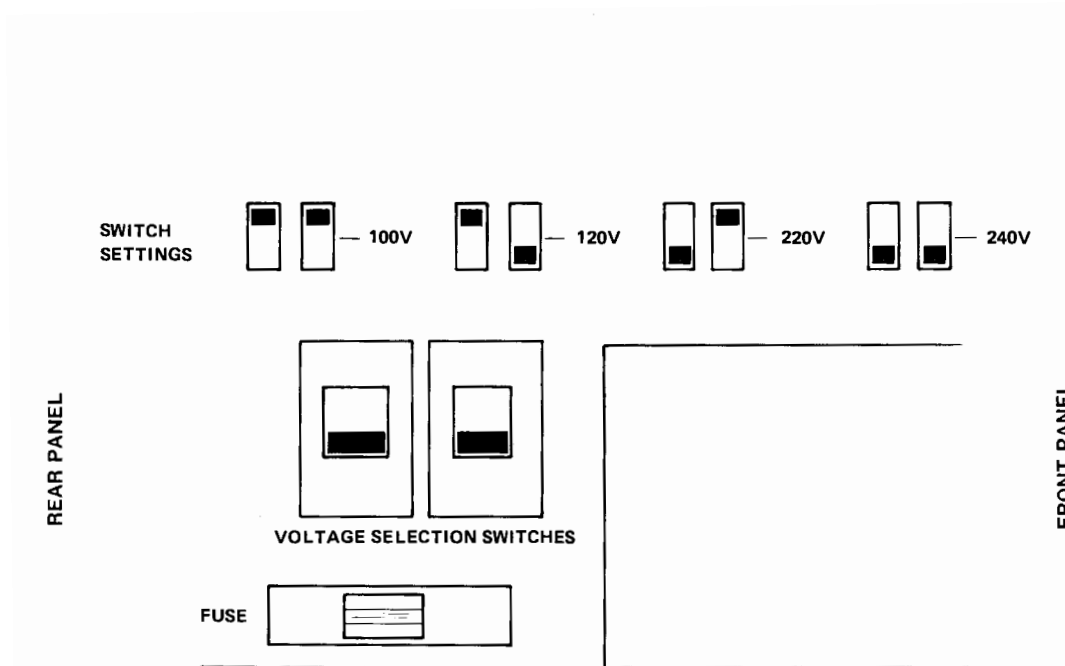


Figure A-1 Line Voltage and Fuse Selection

# APPENDIX A

## LINE VOLTAGE SELECTION

The ac voltage range of the 37204A/B is internally set by two switches. To change the 37204A/B voltage setting:

1. Disconnect the Extender from the ac power supply.
2. Remove the front and rear panel trims (see Figure B-1).
3. Undo 8 cross-head screws and remove the top cover.
4. Set the voltage select switches as required (see table below and Figure A-1)
5. Replace Fuse F1 with a fuse of the correct rating for the voltage range selected.
6. Mark the new voltage range setting on the rear panel above the power cord socket. You can erase the existing marking by wiping with a clean swab soaked in isopropyl alcohol.

Voltage Setting	Operating Range	Fuse	
		Rating	HP P/N
100V	90/105Vac	250mAT	2110-0201
120V	108/126Vac	250mAT	2110-0201
220V	198/231Vac	125mAT	2110-0318
240V	216/252Vac	125mAT	2110-0318

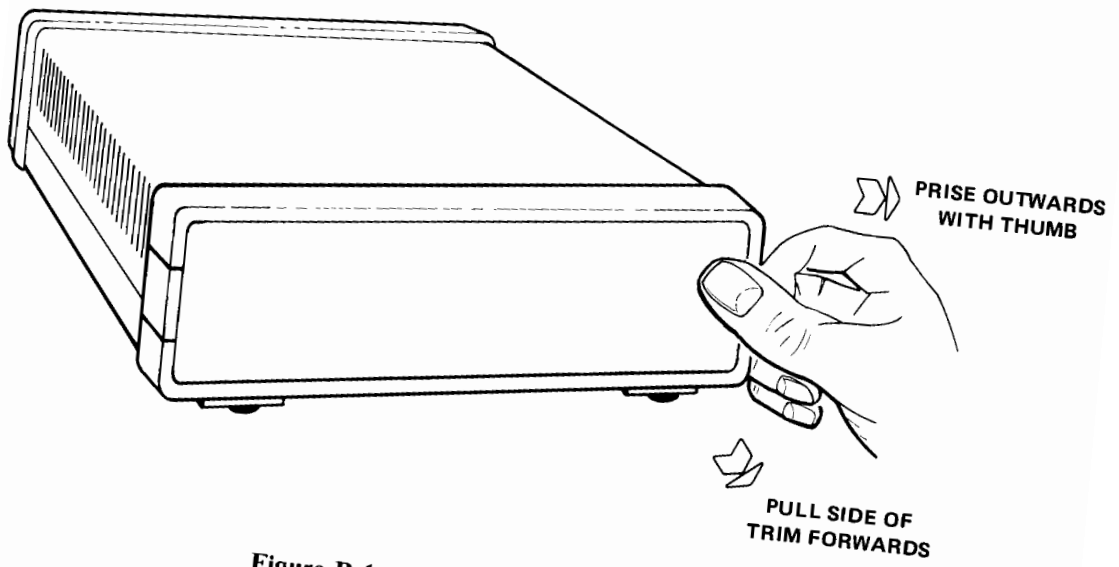


Figure B-1 Removing the Front Panel Trim

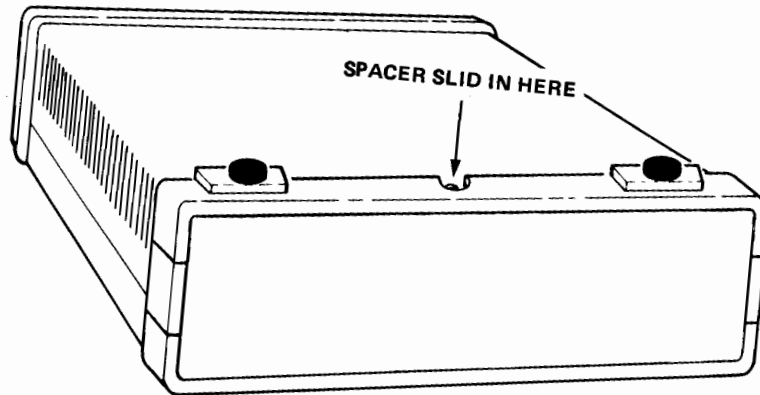


Figure B-2 Inverting the Front Panel Trim



# APPENDIX B


## RACK MOUNTING

### Rack Mounting 37204A/B Extenders

Use kit HP Part No. 5060-4464 to mount one or two 37204A/B Extenders in a standard 19 inch rack. The kit includes a blanking panel in case only one Extender position is used.

Procedure:

1. Remove the plastic trim from the front of the Extender. Release the trim by pushing outwards on one of the sides and sliding the trim forward (Figure B-1).
2. Invert the trim so that the rubber feet are uppermost and replace the trim on the Extender (Figure B-2).
3. Hold the rack mounting panel with the two fixing holes downward and insert the front of the Extender into the cutout. Secure the Extender with two fixing screws through the bottom holes (Figure B-3).
4. Slide the spacer provided into position on the top of the Extender, and secure spacer, Extender and rack mounting panel with a fixing screw (Figure B-3).
5. Repeat for the second Extender or fit the blanking panel supplied into the unused position.
6. Fit the assembly into the rack.

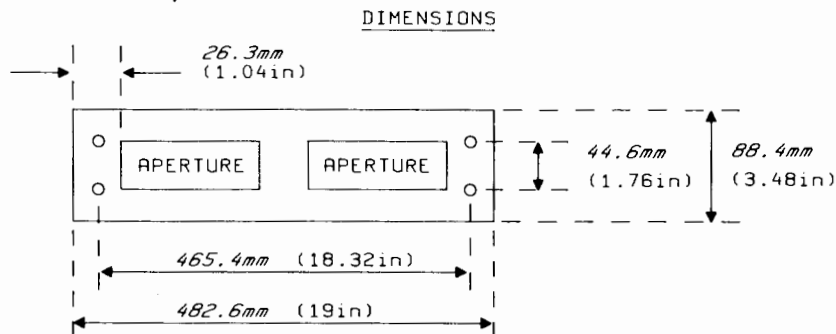

HOLES ARE OBOURD: 7.9 x 11.1mm (0.31 x 0.44in)

APERTURES ARE POSITIONED SYMETRICALLY, EACH 210 x 61mm (8.27 x 2.4in)

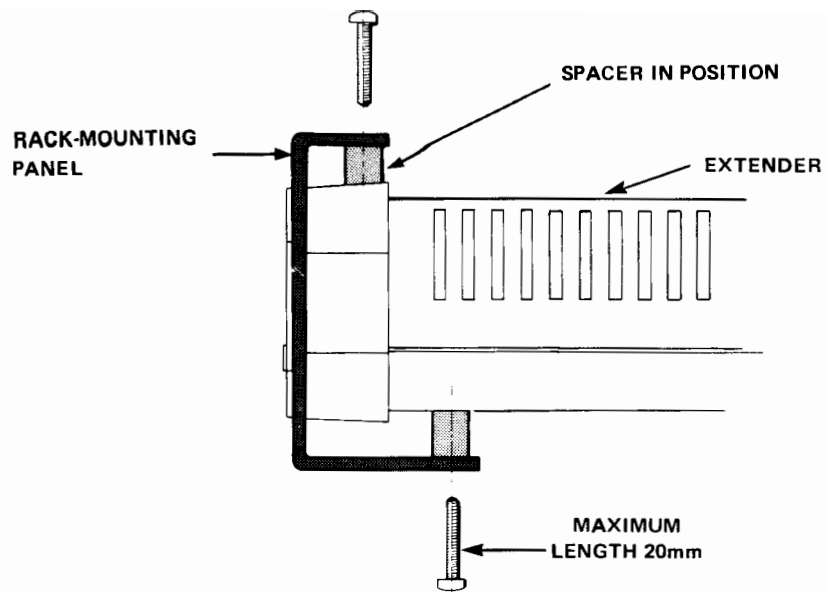


Figure B-3 Mounting in a 19 inch Rack

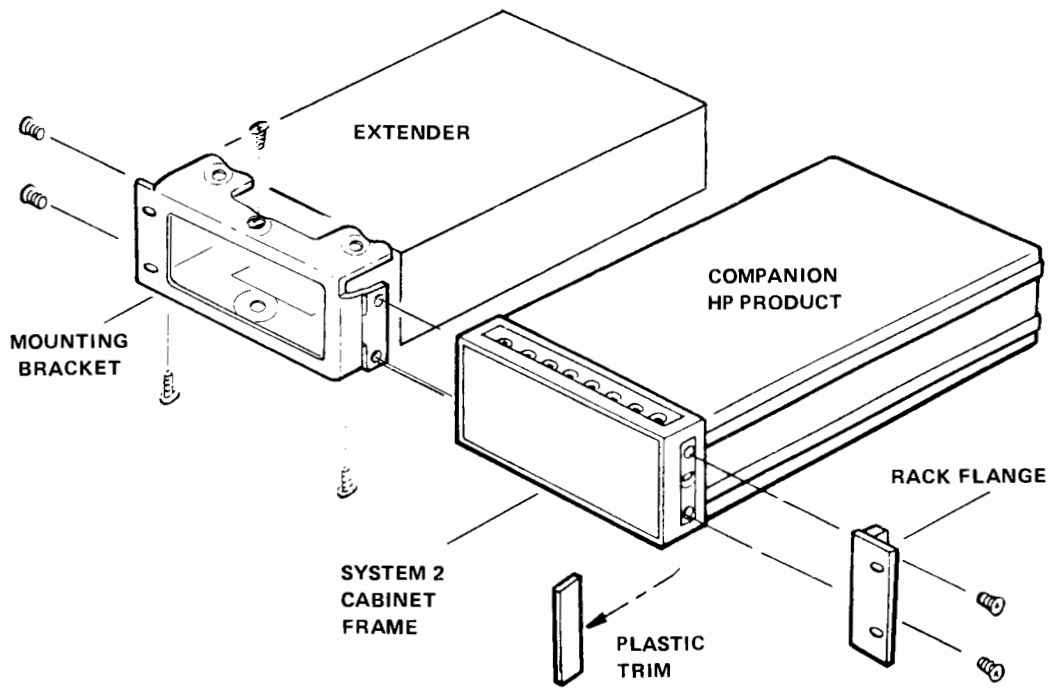


Figure B-4 System 2 Cabinet Rack Mounting


# Rack Mounting With HP System 2 Cabinet Products

Use kit HP Part No. 5060-4463 to mount a single 37204A/B Extender in a standard 19 inch rack alongside a half-rack-width 3 1/2 inch high Hewlett-Packard product.

Procedure (refer to Figure B-4):


1. Remove the plastic trim from the front of the Extender. Release the trim by pushing outwards on one of the sides and sliding the trim forward (Figure B-1).
2. Invert the trim and replace it on the Extender (Figure B-2).
3. On the companion product, prize off the trim strips on both sides of the front casting and discard.
4. Use 2 screws to attach the rack flange to the side of the companion product.
5. Use 2 screws to attach the mounting bracket to the other side of the companion product.
6. Insert the Extender into the mounting bracket and secure with 3 M4X20 screws and 3 spacers, 2 screws at the bottom and 1 on the top.
7. Fit the assembly into the rack.

## DIMENSIONS

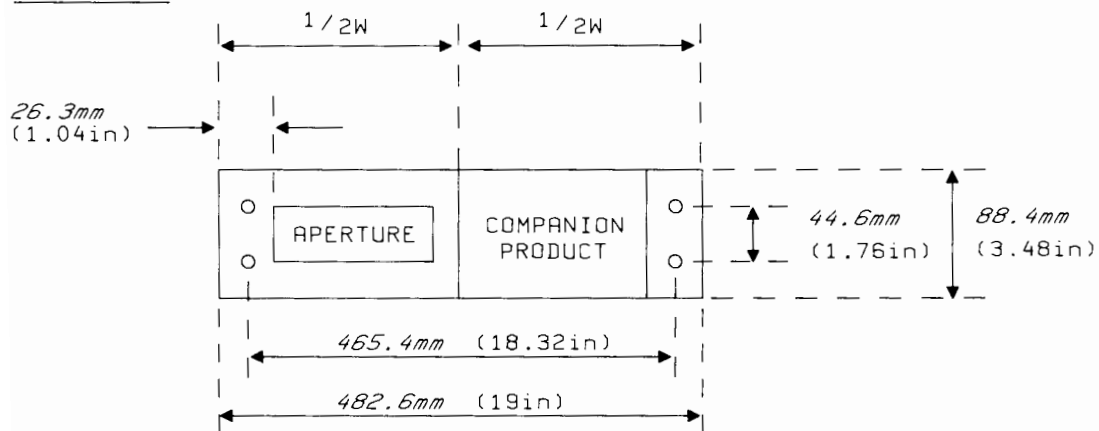


HOLE'S ARE OBROUND:  $7.9 \times 11.1\text{mm}$  (0.31 x 0.44in)

APERTURE:  $210 \times 61\text{mm}$  (8.27 x 2.4in)

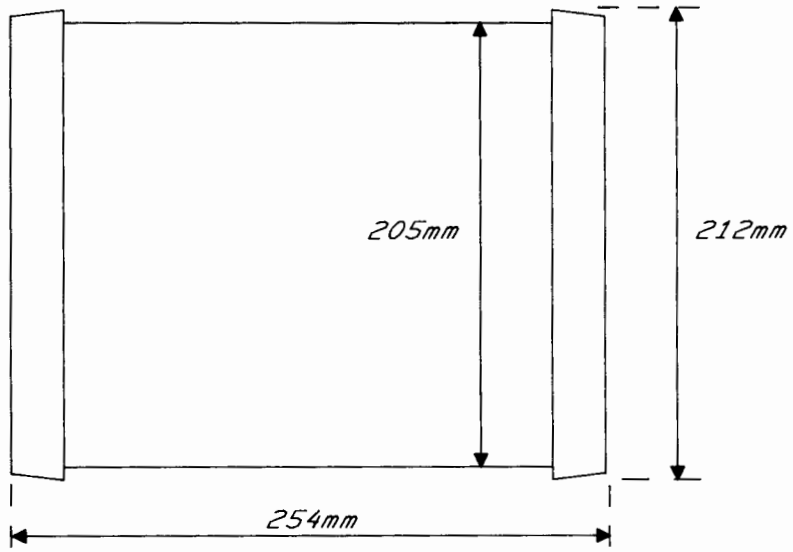


TOP

Weight:  
1.72kg

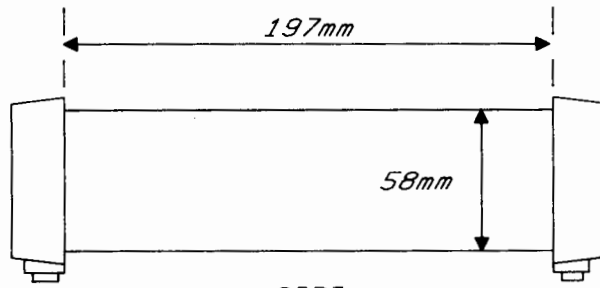

SIDE

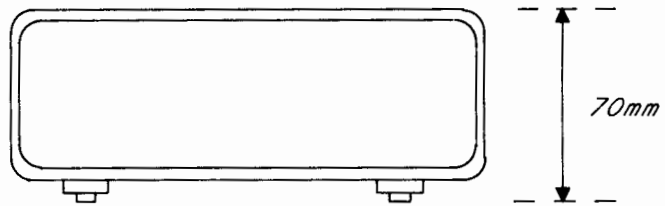

FRONT and REAR

HP 37204A/B: APPROXIMATE PHYSICAL DIMENSIONS