

HP 18263A
"3270" Install and Maintain
BSC 3270, SNA 3270

for the HP 4952A Protocol Analyzer

User's
Guide

HP 4952A Protocol Analyzer



HP 18263A
3270 Installation and Maintenance
BSC 3270, SNA 3270
User's Guide



Manual Part Number 18263-99502
Microfiche Part Number: 18263-98803

Printed in U.S.A. July 1989

Notice

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company. The information contained in this document is subject to change without notice.

If your software application or hardware should fail, contact your local Hewlett-Packard Sales Office. A list of offices can be found in the back of the protocol analyzer operating manual.

Copyright © 1987 Hewlett-Packard Company

**Colorado Telecommunications Division
5070 Centennial Boulevard
Colorado Springs, CO, 80919, U.S.A.**

All rights reserved

Table of Contents

Page	Subject
Chapter 1 - Introduction	
1-2	Equipment Supplied
1-3	Applications
1-5	Features
	General Tests
	Display and Keyboard Tests
	Printer Tests
1-6	Specifications
Chapter 2 - Getting Started	
2-1	Connecting an Interface Pod
2-2	Turning on the Analyzer
	Getting the Top Level Menu
2-3	Making a Working Copy of the Application
	Looking at the Mass Storage Directory
	Loading the Software Application
2-5	Understanding the Main Menu
Chapter 3 - "3270 Network" Testing	
3-1	Application Environment
3-4	Maintenance - Repair
3-5	Installation
3-7	"3270" Compatibility Issues

Chapter 4 - Setup Menus

- 4-2 Using the Test Setup Menu
- 4-4 The Print Screen Setup Menu
- 4-8 Scan Address Menu Use

Chapter 5 - Display Tests

- 5-1 Using the Display Tests Menu
- 5-2 Setting the Address
- 5-3 Scan Address Menu Use
- Exercise Attributes Test
- 5-4 81 Character Stairstep
- 5-7 Alignment Pattern
- 5-8 Control Key Response
- 5-9 Test Results
- 5-10 Examine Data Softkey
- 5-11 Execute Test Softkey
- Print Screen Softkey

Chapter 6 - Printer Tests

- 6-1 Using the Printer Tests Menu
- 6-2 Printer Tests Menu
- 6-3 Scan Address Menu Use
- New line/End of Message
- 6-5 81 Character Stairstep
- 6-7 Test Results
- 6-8 Examine Data Softkey
- Execute Test softkey
- Print Screen Softkey

Chapter 7 - General Tests

- 7-1 Using the General Tests Menu
- 7-2 General Tests Menu
- 7-3 Scan Address Menu Use
- 7-4 Read Controller Status
- 7-5 Read Device Status
- 7-6
 - Execute Test Softkey
 - Print Screen Softkey
 - Examine Data Softkey
 - Two Line Examine Data Display
 - SDLC Frame and Format Display
- 7-7 Looping Device Scan

Appendix A - Error Messages

Appendix B - Duplicating the Master Disc

- B-1 Format a Blank Disc
- B-2 Copy the Master Disc
 - Copying the "3270" Software Applications

Index

Illustrations

Page	Title
1-4	Figure 1-1. Connection Points
2-1	Figure 2-1. Connecting an Interface Pod
2-2	Figure 2-2. Top Level Menu
2-4	Figure 2-3. Top Level "3270" Menu
2-5	Figure 2-4. Main Application Menu
3-3	Figure 3-1. Simplified Network
3-4	Figure 3-2. Test Pattern
	Figure 3-3. 81 Character Stairstep
3-5	Figure 3-4. Printer Verification
3-6	Figure 3-5. Installation of Equipment
4-1	Figure 4-1. "3270" Menu
4-2	Figure 4-2. Test Setup Menu
4-4	Figure 4-3. 4952 Print Screen Setup Menu
4-6	Figure 4-4. "3270" Print Screen Setup Menu
4-8	Figure 4-5. Scan Address Menu
5-2	Figure 5-1. Display Tests Menu
5-3	Figure 5-2. Exercise Display Attributes
5-5	Figure 5-3. 81 Character Stairstep Display
5-6	Figure 5-4. Connection for "3270" Display
5-7	Figure 5-5. Alignment Pattern
5-8	Figure 5-6. Connection for Alignment Pattern
5-10	Figure 5-7. Display Test Results

- 6-2** Figure 6-1. Printer Tests Menu
- 6-4** Figure 6-2. Connection to Printer
- 6-5** Figure 6-3. 81 Character Stairstep Printout
- 6-6** Figure 6-4. Connection to Printer
- 6-7** Figure 6-5. Printer Test Results

- 7-2** Figure 7-1. General Tests Menu
- 7-4** Figure 7-2. Read Controller Status Test Results
- 7-5** Figure 7-3. Read Device Status Test Results
- 7-8** Figure 7-9. Connection to the "3270" Network

- B-2** Figure B-1. Loading a Disc

Conventions

Critical instructions within the text of this publication are preceded by one or more of the following labels.

WARNING All operating procedures, practices, etc., that must be performed in the specified manner to preclude the possibility of personal injury or loss of life are preceded by a "Warning" label.

CAUTION All operating procedures, practices, etc., that must be performed in the specified manner to preclude the possibility of damaging the instrument or destroying programs or software are preceded by a "Caution" label.

NOTE Explanatory comments or supplementary instructions are preceded by a "Note" label.

Printing History

New editions are complete revisions of the manual. Update packages, which are issued between editions, contain additional and replacement pages to be merged into the manual by the customer. The dates on the title page change only when a new edition or a new update is published. No information is incorporated into a reprinting unless it appears as a prior update; the edition does not change when an update is incorporated.

Many product updates and fixes do not require manual changes and, conversely, manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correlation between product updates and manual updates.

Edition 1

February 1987

Introduction

The "3270" Installation and Maintenance Software application for the HP 4952A Protocol Analyzer provides "3270" IBM[™] Network users with a high level tool for maintenance, installation, trouble-shooting and configuration of new devices added to the network. In particular, the package provides many user friendly features to ease all of the work and tests associated with the maintenance of a "3270" network.

This package extends the SNA and BSC capability of the HP 4952A Protocol Analyzer beyond monitoring and simulation to let you easily test the function of controllers and devices connected to a "3270" network. The alignment of displays and the function of keyboards and printers can be confirmed before connection to the host. Address confirmation of all active devices connected to a particular controller or active controllers connected remotely to a front end processor can be done by menu choice and a record obtained for later use.

The "3270" Installation and Maintenance Software package consists of application programs which are specific to the protocol and data code specified.

IBM[™] is a registered trademark of International Business Machines Corporation.

The first application program is an SNA protocol package designed to work with the EBCDIC data code.

The second application is designed for use with a BSC protocol utilizing the EBCDIC data code.

NOTE

The correct application for the specified data code should be loaded initially as the data code and protocol cannot be changed once the application is loaded.

Equipment Supplied

The "3270" Installation and Maintenance application includes the following:

- Master Disc
- Blank Disc
- User's Guide

The master disc contains the "3270" Installation and Maintenance program. A blank disc is provided to make a working copy for day-to-day use. See Appendix B for instructions on duplicating the master disc. The User's Guide provides reference and tutorial information and contains the master and blank discs.

The "3270" Installation and Maintenance software coupled with a HP 4952A will be referred to as the "3270" tester throughout the rest of this manual.

Applications

The "3270" Installation and Maintenance application can be used in a "327X" network from the output of a Front End Processor to the input of a "327X" cluster controller.

The application can be used anywhere SNA or BSC data flows over a datacomm network utilizing RS-232C/V.24, RS449, and V.35 as the physical interface. The effects of the tests performed by the "3270" Installation and Maintenance system extend across the controller to the peripherals connected to it.

This is done by utilizing the addressing capability of the controllers and devices connected to the "3270" network.

Connection of the HP 4952A can be made to a "3270" network as shown in Figure 1-1 at points A & B. Note that the control exercised by the "3270" tester is directed into the controllers and devices connected to them. The direction of control and test capability is indicated by the arrows at the connection points in Figure 1-1.

End-users can use the "3270" tester to install, maintain and troubleshoot networks between cluster controllers and communications controllers within the "327X" network. Active controllers can be polled as well as the devices connected to them.

Installation of new devices or controllers can be simplified through the use of selective or polled address scans of the controllers or devices connected to the controllers. Individual cabling problems can be identified with the same tests without the need for utilizing host computer time or resources.

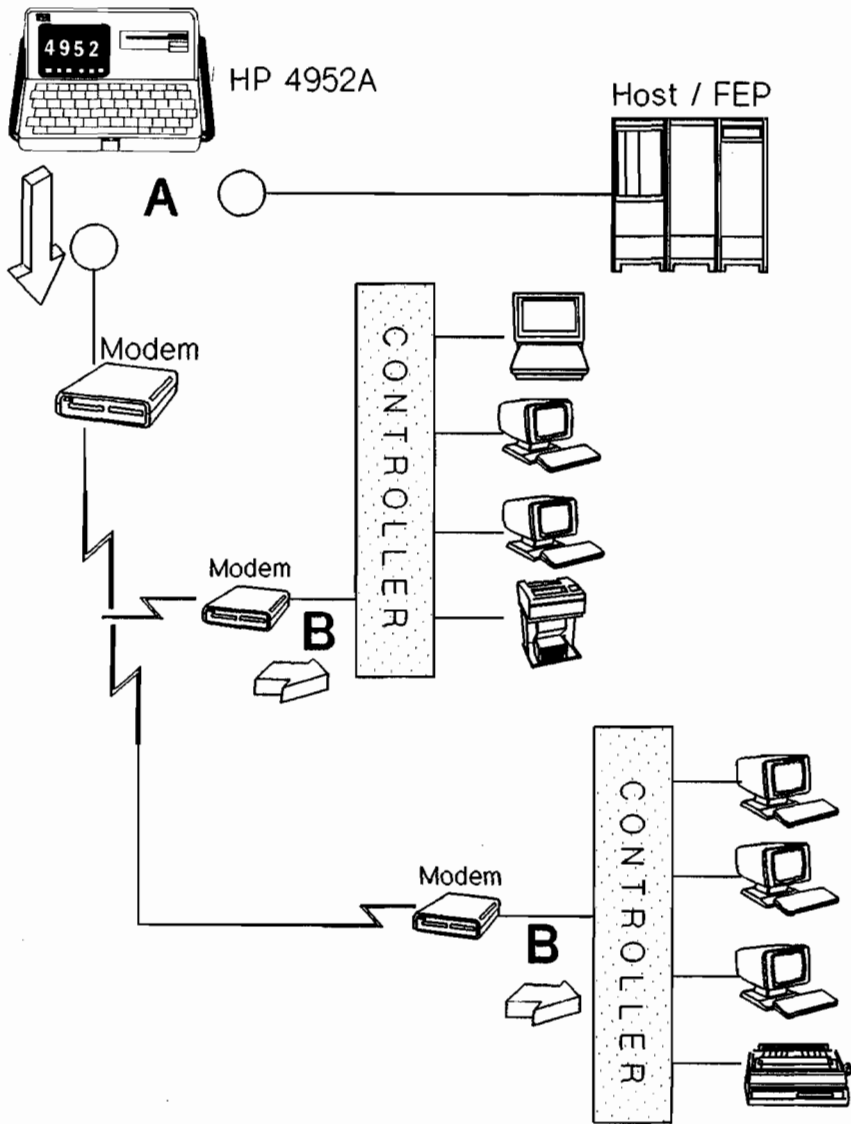


Figure 1-1. Connection Points

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

Features

- Support for both BSC and SNA (FID2) protocols.
- A simplified softkey interface that eases test selection.
- Test results displayed in a friendly manner as well as available in a hardcopy format from an attached printer.

General Tests

- Scan for and list all the active connected controllers.
- Scan for and list all the active devices connected to a specific controller.
- Read and analyze the controller or device status.
- Loop on Device Scan to allow all the active devices connected to a controller to be identified on their display by address.

Display & Keyboard Tests

- Execute display attributes: protected, alpha, numeric, highlight, non-display.
- Provide an 81 character staircase pattern for the display to check all display positions.
- Provide an alignment pattern for the video display.
- Check of control key responses.

Printer Tests

- Utilize new-line and end-of-line message control operations.
- Provide an 81 character staircase pattern for the printer to check all printed positions.

Specifications

Instruments:	This application will run on the HP 4952A with 22 kbytes of application memory.
Physical Interface:	All of the following supported HP 4952A interfaces : RS-232C/V.24, RS-449, V.35
Protocol:	SNA as defined in the IBM "Systems Network Architecture Summary", GA27-3136-5, File No. Gen1-30 (SNA). BSC.
Transmit Rates:	to 19200 bps.
Memory Requirements:	The "3270" Installation and Maintenance Software uses 22 kbytes of application memory.

2

Getting Started

This chapter tells you how to load the "3270" Installation and Maintenance Software application and sample data into your HP 4952A Protocol Analyzer. This manual assumes that you are already familiar with the basic use of the protocol analyzer.

For detailed information concerning operation, voltage and grounding requirements, and power cords refer to the HP 4952A Protocol Analyzer Operating Manual.

Connecting an Interface Pod

Make certain the protocol analyzer is turned off. Connect the interface pod cable from the pod to the connector in the lower center of the HP 4952A back panel.

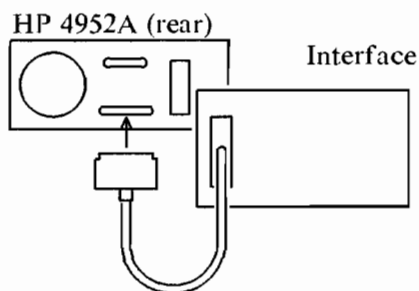


Figure 2-1. Connecting an Interface Pod

Turning on the Analyzer

Turn on the HP 4952A Protocol Analyzer using the line switch on the back panel. The analyzer begins an automatic self test. After the test is completed, the top level menu is displayed. (See Figure 2-2).

If errors have been detected, a list of errors will be displayed. You can go to the top level menu from the error display by pressing [EXIT]. However, if errors have been reported, proper operation in this mode cannot be assumed; contact your Hewlett-Packard Sales and Service office for assistance.

Getting the Top Level Menu

The top level menu gives you access all the features of the HP 4952A.

Whenever you turn on the protocol analyzer the top level menu appears. From lower level displays, you can return to the top level menu by pressing [EXIT] (you may have to press [EXIT] more than once).

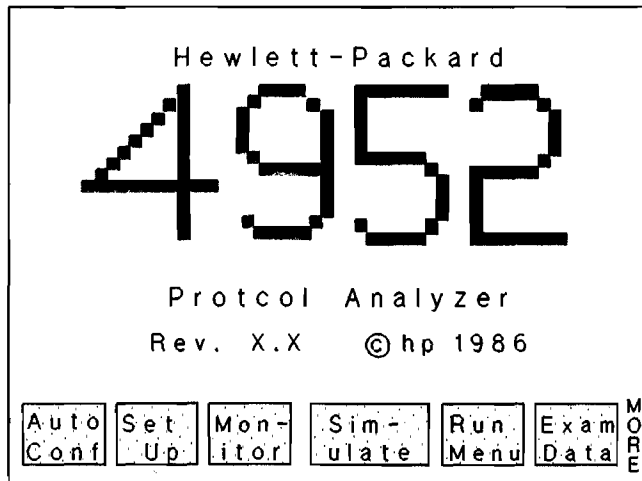


Figure 2-2. Top Level Menu

Making a Working Copy of the Application

The "3270" Installation And Maintenance Software package includes an application disc and a blank disc. The blank disc is provided to make a working copy of the application disc. If you are not familiar with the basic features of the HP 4952A, use the procedure in Appendix B to make a backup copy of the disc.

Hewlett-Packard recommends that you make a working copy of the application disc. Use the copy and retain the master as a backup in case the working copy fails due to wear or accidental erasure. This procedure allows you to make full use of the "3270" tester and not have the application become non-functional at any time. If you should need a copy of your Master Disc, replacement discs can be obtained from Hewlett-Packard.

Looking at the Mass Storage Directory

To see what's on the "3270" Installation And Maintenance Software disc, use the directory feature.

1. Locate your working copy of the disc and insert it in the disc drive.
2. In the top level menu press the <Mass Store> softkey.
3. Press <Directory>. The disc is read and the directory appears.

Loading the Software Application

1. Use the arrow keys or scroll through the directory files to locate the file name you want to use.
2. A choice will have to be made at time for the correct application to be loaded according to the protocol and data code format used on the network - either BSC or SNA.



3. Enter the file name <SNA> using the keyboard or scroll to the file name <SNA> using the cursor or arrow keys.
4. Press <Load>.
5. Press <Execute>. The disc is read and the "3270" Installation And Maintenance Software application program is loaded into the protocol analyzer memory. This takes a few seconds. After loading, the top level "3270" menu appears and then by pressing the MORE key, the top level menu shows the "3270" tester application is active (the third line will vary according to the format that is loaded - SNA or BSC).

```

H e w l e t t   -   P a c k a r d
" 3 2 7 0 "   I n s t a l l   &   M a i n t
S N A

```

```

C o p y r i g h t       1 9 8 7

```

```

          4 9 5 2
P r o t o c o l   A n a l y z e r

```

```

R e v .   x . x       ©   h p   1 9 8 7

```

Re-	Bert	Remote	Mass	3270	Self
Set	Menu	& Print	Store		Test

Figure 2-3. Top Level "3270" Menu

CAUTION

Whenever you turn off the analyzer, or press the <reset> softkey, the application is cleared from memory.

Understanding the Main Menu

Press the <3270> softkey and the main application menu is presented on the protocol analyzer display.

```
          3 2 7 0   M e n u

S e t u p   O p t i o n s :

    T e s t s - s e t   t e s t   p a r a m e t e r s .
    P r i n t - s e t   p a r a m e t e r s
                  f o r   s c r e e n   d u m p s .

T e s t   O p t i o n s :

    D i s p - s e l e c t   a   d i s p l a y   t e s t .
    P r t   - s e l e c t   a   p r i n t e r   t e s t .
    G e n   - s e l e c t   a   g e n e r a l   t e s t .

          S e t u p                3 2 7 0   T e s t s
    T e s t s   P r i n t           D i s p   P r t   G e n
```

Figure 2-5. Main Application Menu

Any of the five main menu choices may be selected at this time.

The <Setup Tests> and <Setup Print> menu choices set the parameters which control the other menus available. Always check and set up both <Setup Tests> and <Setup Print> menus whenever the application is loaded from disc (the master copy can be changed and stored. Once a master copy has been changed and stored, it cannot be changed and re-stored again).

<Setup Tests> This menu allows the software and hardware to be configured for the data communications parameters of the network.

<Setup Print> This menu allows the software and hardware to be configured for data communication parameters and type of printer for all hardcopy output of the "3270" tester. The output can be either test results or just the menu setups in use.

<3270 Tests Disp> This menu provides four pre-defined "3270" display tests. These tests let you select or scan for controller or device addresses.

<3270 Tests Prt> This menu provides two pre-defined printer tests. These tests let you select or scan for controller or device addresses.

<3270 Tests Gen> This menu provides three pre-defined status tests for controllers or devices in the network. These tests let you select or scan for controller or device addresses.

3

"3270" Network Testing

The "3270" Installation and Maintenance package is used in a "327X Network" of IBM equipment for off-line testing and maintenance. This lets you exercise the "3270" components in the network to identify two major areas of concern:

The first is to identify if each device is configured or connected correctly to their respective controller.

The second is to allow you to check the functions of the equipment such as the display, keyboard, or printer function.

These tests are not comprehensive but are intended to test the basic functions of the devices to insure they have been connected and configured correctly.

Note the major highlighted arrows in Figure 3-1 (A & B). Each is a point in the network that could be a tie-in point for the "3270" tester.

Application Environment

The environment or network that the "3270" tester is designed to be used in begins at the point to which a Front End Processor(FEP), such as an IBM 3705 or IBM 3725, is normally connected. The environment extends (through modems or physical layers) to cluster controllers, such as IBM 3274's or IBM 3276's and the devices attached to them. Connection can be made at the modem on the interface cable or at the input to the modem connecting the Front End Processor (FEP) for testing a multiple drop arrangement of cluster controllers or at the modem off of a cluster controller for testing a single leg of the network.

NOTE

The connection should BREAK the current connection of the network from the host - NOT a "Y" cable 'monitor' type connection.

Scan tests can be done at these points to list all of the active controllers and/or devices connected in the environment. See Figure 3-1 for a simplified view of the environment intended for the "3270" tester.

Printouts of the test results can be sent to an active printer on the network or to an auxiliary printer attached to the RS-232/V.24 printer port on the HP 4952A.

An infinite looping scan test can be done to poll each device connected to the controller while displaying the device's address and controller connection on the display device.

Individual display and keyboard tests can be done for maintenance, troubleshooting, and repair/alignment needs. Printers that are connected to the controller can be tested for basic output function or used as a 'test result' printer.

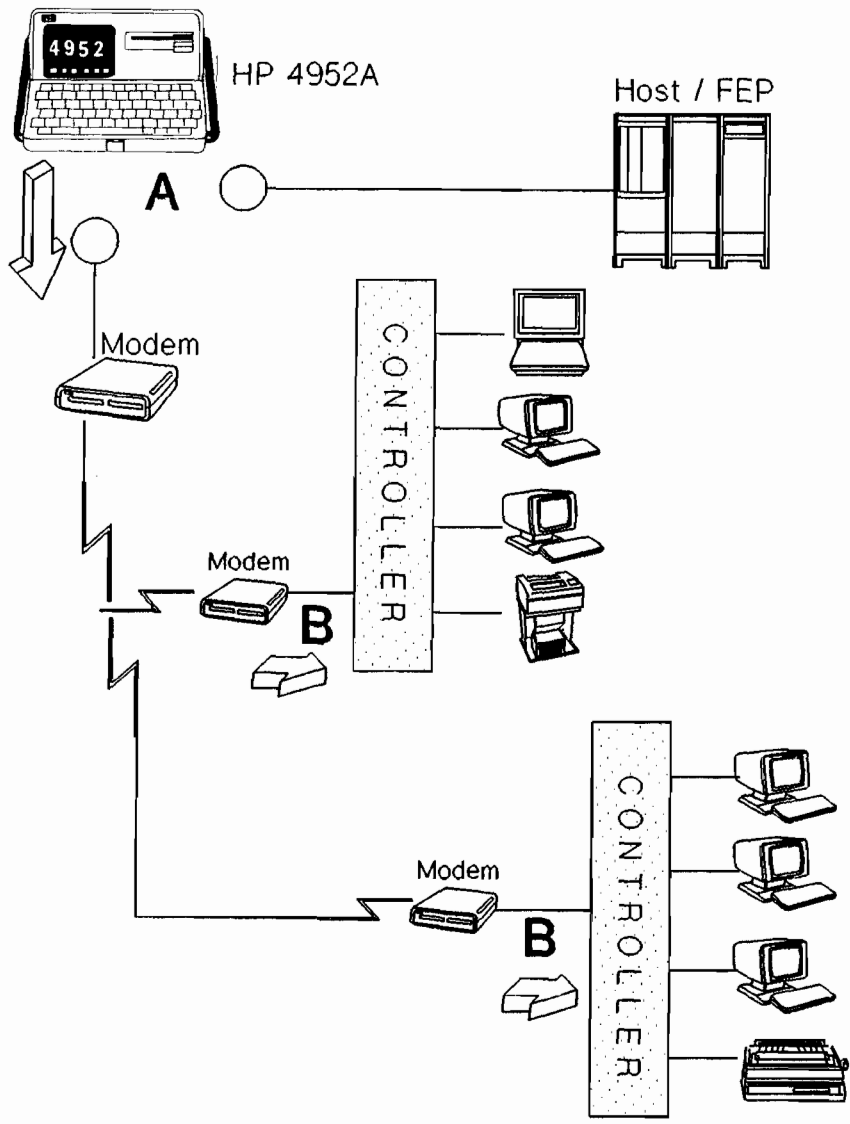


Figure 3-1. Simplified Network

Maintenance - Repair

The "3270" tester can be used as a maintenance tool. The menus allow you to select test patterns for the alignment of displays or testing the display attributes for correct function. An individual device can be selected by address and an alignment pattern sent to allow the maintenance or repair personnel to align the display.

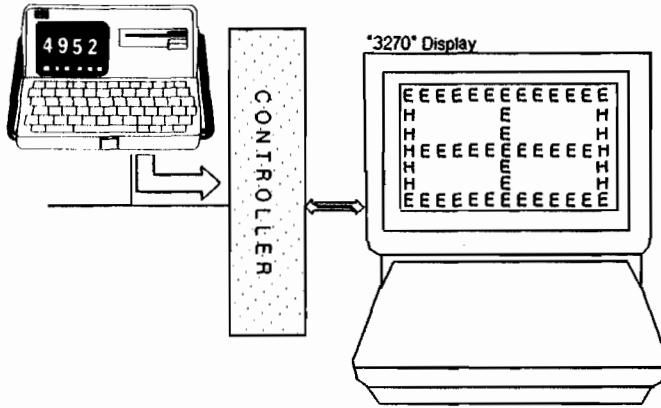


Figure 3-2. Test Pattern

Also available is an 81 character stairstep string test for verification of display position and characters.

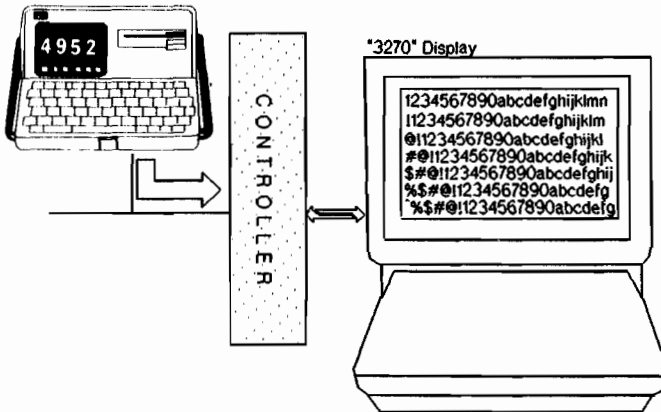


Figure 3-3. 81 Character Stairstep

These capabilities allow the tests to be done "off-line" from the host computer saving valuable host computer time and repeated system generations. These modes can be used by tying into the network as shown in Figure 3-2 & 3-3.

The "3270" tester can be used as a test device for the keyboards connected in the "3270" network. Specific tests are included in the "Display Tests Menu" to allow verification of the control keys PF1-24, PA1-3, CLEAR and ENTER.

The "3270" tester allows the verification of a printer connected to the "3270 network". The printer can then be used to record the other test results done on the network for maintenance or troubleshooting and then produce a 'hardcopy' printout of the installation.

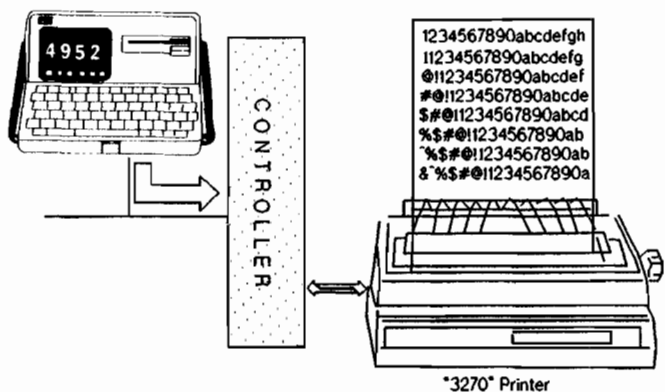


Figure 3-4. Printer Verification

Installation

Installation of new equipment in a "3270" network can be time consuming and frustrating. When a new cluster is set up and connected to a "3270" network, a system generation is performed to add the new terminal addresses to the system terminal address table. System generation requires that the mainframe be taken out of service until the operation is completed. If the wrong addresses are added to the table during

the system generation, the whole operation has to be repeated. The "3270" tester allows you to configure and test IBM "3270" cluster controllers and devices prior to their attachment to the mainframe. This will insure the proper address settings of the terminals so that the system generation is successful the first time.

When terminals or printers are reallocated in a "3270" network, cables can be inadvertently cross wired or connected to the wrong cluster. By connecting the "3270" tester to a particular cluster the <looping device scan> test or the <Scan Ctrl> menus can identify all active controllers or devices connected to a controller. Messages can be sent to all display devices connected to that controller with the address each responds to when accessed. By using the displayed addresses, the improper connections can be repaired in a concise, orderly manner.

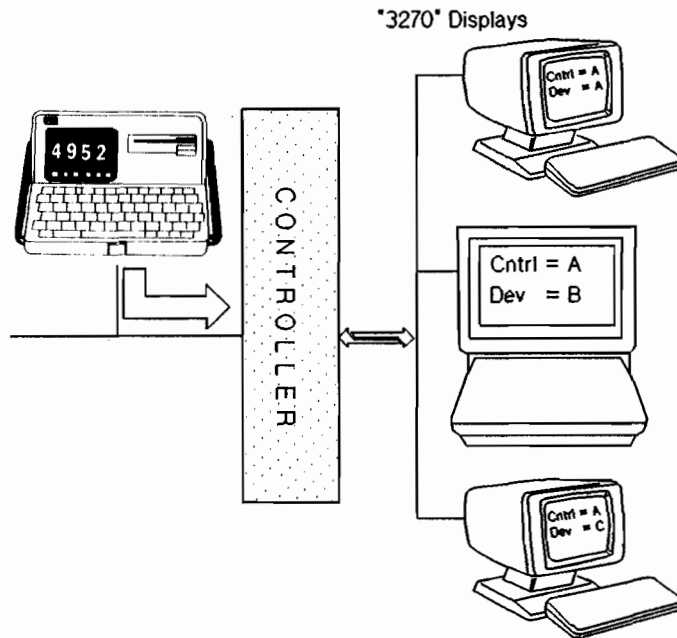


Figure 3-5. Installation of Equipment

"3270" Compatibility Issues

The SNA environment is complex. To insure that all levels of SNA are ready for testing, the "3270" tester will bring the entire 3270 system up and back down during each test sequence. If the 3270 system does not automatically restart each SNA layer, the SNA portion of this package will not work.

For both BSC and SNA environments, vendor variations in protocol implementation may result in the "3270" tester receiving responses that are not recognized, thus causing a test failure.

In both BSC and SNA environments, there is a response timeout parameter. Typically this timeout is defined to be 3000 msec. In real life situations, the vast majority of devices will respond in a much shorter time. To expedite the testing process, the "3270" tester has implemented a 500 msec response timeout. If this timeout value is too short, it can easily be changed in the Setup Test Menu.

NOTE

The "3270" tester is able to exercise the majority of 3270 and compatible products to which it is attached. However, some 3270 compatible products may have difficulty using the full capability of the HP 18263A due to variations in design.

4

Setup Menus

The Setup Menus affect all tests done by the "3270" tester. The data communications parameters, "3270" device response timeout, and the printout of test results are controlled by this menu and should be set before any tests are attempted.

The main menu, labeled '3270 Menu', has two major sets of softkeys. The left softkeys are 'Setup' menus which apply to both the 'Tests' and 'Print' menu. The diagram in Figure 4-1 shows the hierarchy of the menus. Note the Setup menus are shown separately from the main "3270 Menu" yet both Setup Menus affect all other softkey menus and their operation.

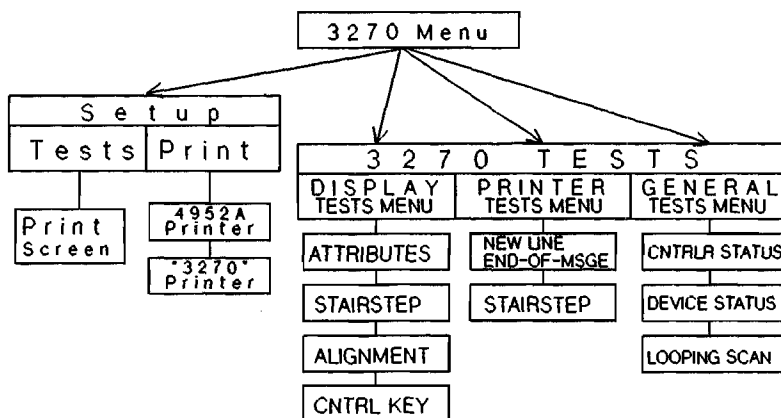


Figure 4-1. "3270" Menu

Using the Test Setup Menu

This menu is accessed from the main "3270 Menu" by the <Setup Tests> softkey. The menu should be displayed as shown below.

```

                T e s t   S e t u p   M e n u

Analyzer attached to:           Controller

Clock source:                   Analyzer
Bits/sec:                       9600
Data Code:                       EBCDIC
Parity:                          None
Mode:                             NRZ
Response Timeout:                500 msec
Timing\Lead Changes:            On

Duplex:                           Full
```

Figure 4-2. Test Setup Menu

Note that the default values for the 'Test Setup Menu' are shown. Each of the inverse video fields are choices to be made by you. As the cursor is scrolled down the display using the cursor control arrows or the return key, the softkeys change to indicate the choices available. Each field is explained as follows:

Analyzer attached to: Controller/Modem

This field designates the equipment the "3270" tester is connected to in the network. If connected to the Controller the HP 4952A is configured as a DCE. If connected to the Modem it is configured as a DTE.

Clock Source: Analyzer/External

This field determines whether the clock source for the interface will be sourced by the HP 4952A or by an external source. If Analyzer is selected, Bits/sec appears which allows the speed of the supplied clock to be selected. If external is selected, the HP 4952A will use the clock supplied on the Transmit/Receive clock lines TC and RC.

Bits/sec 9600/

This field is only available when Analyzer has been selected in the clock source field. It allows the selection of the data rate of the interface clock which is supplied by the analyzer.

Data Code: EBCDIC

This field is fixed.

Parity: None

Always NONE for EBCDIC

Mode: NRZ

This field allows the choice of either NRZ or NRZI communications protocol.

Response Timeout: 500 msec

Default is 500 milliseconds, but you can set it to any range (in milliseconds) from 0 to 9999. This is important when scanning all devices connected to a point in the network. A lower response time will "speed up" the poll of all inactive devices connected to the network.

Timing\Lead Changes

This field allows you to store timing and lead changes information so you can view it in the Examine Data menu. This information defaults to off at speeds above 38.4 kbps.

The Print Screen Setup Menu

This menu lets you communicate with a printer and the address or location of that printer. The parameters chosen are used in all places of the application where the <Print Scrn> softkey function is used. This function is offered with almost every menu in the application so be sure it is configured correctly.

```
      P r i n t   S c r e e n   S e t u p   M e n u

P r i n t e r   a t t a c h e d   t o :           4 9 5 2

      S y s t e m   P a r a m e t e r s   U s e d

" 3 2 7 0 "           4 9 5 2
```

Figure 4-3. 4952 Print Screen Setup Menu

Note the default values for the 'Print Screen Setup Menu'. Some fields are indicated by inverse video characters.

Make the choices applicable to the printer that the "3270" tester is connected to. When the printer is selected for the HP 4952A, the printer setup is defined by the "Remote & Print" softkey selected from the HP 4952A menu. To configure the printer, press the high level softkey "Remote & Print" and then press the softkey "Print Setup". Each field is explained as follows:

NOTE

Printers attached to the HP 4952A remote/printer port for hardcopy output must be attached with a modem eliminator cable (HP 13242G).

Printer attached to: "3270" / 4952

This field designates the printer the "3270" tester will output when the <Print Scrn> softkey is pressed. If the <4952> choice is made a printer should be connected to the 'remote/printer' port on the rear of the HP 4952A. The attached printer should be an ASCII printer, such as an HP 2225D or compatible equipment. If "3270" is the choice for the printer, the following figure will be displayed.

Print Screen Setup Menu

Printer attached to: " 3 2 7 0 "

Controller Address: C₁

Device Address: 0₂

" 3 2 7 0 "

4 9 5 2

Figure 4-4. "3270" Print Screen Setup Menu

Each of the inverse video fields are choices for the "3270" tester. As the cursor is scrolled down the display by the use of the cursor control arrows or the return key on the keyboard, the softkeys will change to indicate the choices available. Each field and softkey is explained.

NOTE

This application assumes that a printer on the network has been tested before use. When you make this choice, you should test that printer before performing any other tests.

Printer attached to: "3270"

This field designates the printer the "3270" tester will output to when the <Print Scrn> softkey is pressed.

Controller Address field
Device Address field

These fields must be given a valid address for a controller and printer on the network to which the "3270" tester is connected. Note the two new softkeys that are displayed on the HP 4952A:

<Addr Text>

This softkey affects both the controller and device address and is a 'toggle' function. The address must be set before any of the tests are selected by softkey or the default addresses will be used and the test performed on the default controller and device.

<Scan Ctrl/Dev>

If the address of the device or controller to be tested is not known, the network can be scanned and displayed utilizing the <Scan Addrs> softkey. The 'Controller Address Menu' and the 'Device Menu of Controller' are accessible through the use of the <Scan Addrs> softkey.

<Scan Address Menu> Use

If the address of the device to be tested is not known, the active devices of a particular controller or the active controllers on a network can be scanned and displayed using the "Scan Menu's". 'Controller Address Menu' and 'Device Menu of Controller' are both accessible through the use of the <Scan Address> softkey. The menu accessed is determined by which address field (controller or device) the cursor is placed on when the <Scan Address> softkey is pressed. Both menus are similar in function and format. The device menu applies to the devices connected to specific controller. The Scan Address Menu is shown below as it appears after a partial or full scan has been run. Each softkey and field are explained following the Scan Address Menu.

D e v i c e M e n u o f C o n t r o l l e r X

Dev	Adr	Dev	Adr	Dev	Adr	Dev	Adr
		H		&		Q	
A		I		J		R	
B		c		K		!	
C		.		L		\$	
D		<		M		*	
E		(N)	
F		+		O		;	
G				P		^	

A d d r s f r o m p r e v i o u s s c a n

Addr	Sel	Part	Full	Print
Hex	Addr	Scan	Scan	Scrn

Figure 4-5. Scan Address Menu

Device Menu	The address displayed as "X" in line 1 is obtained from the Controller Address field in the menu immediately preceding this menu.
Device Address	Lines 3 through 10 contain addresses of the active controllers or devices for which a scan has been made. The cursor should appear on the first address in the list when the menu is first entered.
Scan Message	Two messages can appear on this line. One is "Addr from previous scan". The other is " Addr from aborted prev scan". The second message will appear if a scan of addresses was done previously and was aborted.
<Addr Hex>	Addresses can be viewed in Hexadecimal or Text mode by using the <Addr Text> / <Addr Hex> softkey. This softkey is a 'toggle' function.
<Sel Addr>	The controller or device address indicated by the cursor can be selected as the device to be used for testing by pressing this softkey.
<Part Scan>	This softkey is used to start the polling of devices or controllers to determine which are active. <u>32 addresses</u> are polled based on the EBCDIC polling characters.
<Full Scan>	This softkey is also used to start a poll of devices or controllers to determine the active controllers or devices. <u>254 addresses</u> are polled starting from 01 to FE (hex).
<Print Scrn>	This softkey prints the current display to the printer defined in the 'Print Screen Setup Menu' under the main '3270 Menu'.

Display Tests

The <3270 Tests Disp> menus exercise displays and keyboards connected in a "3270" network. All of the display tests are designed for an eighty column by twenty-four line display.

NOTE

The data communications parameters, "3270" device response timeout, and the printout of test results are controlled by the <Setup Tests/Print> menus and should be set before tests are attempted.

The Display Tests Menu has four available tests:

- Exercise Attributes
- 81 Character Stairstep
- Alignment Pattern
- Control Key Response



Using the Display Tests Menu

This menu is accessed from the main "3270" menu by the <3270 Tests Disp> softkey. the menu displayed is shown on the next page.

Display Tests Menu

```
Test 1 .      EXERCISE ATTRIBUTES  
              ( 1920 Char Display )  
Test 2 .      81 CHARACTER STAIRSTEP  
              ( 1920 Char Display )  
Test 3 .      ALIGNMENT PATTERN  
              ( 1920 Char Display )  
Test 4 .      CONTROL KEY RESPONSE  
              ( PF1 - 24 , PA1 - 3 , Clr , Entr )
```

```
Controller Address      C1  
Device Address          02
```

Test	Test	Test	Test	Addr	Scan
1	2	3	4	Text	Addr

Figure 5-1. Display Tests Menu

Setting the Address

The first step in performing any test of the displays or keyboards is to specify which display or keyboard is to be tested. This is done by selecting the controller and device address at the lower portion of the Display Tests Menu. The choices include any character available on the HP 4952A keyboard including control characters.

The addresses can be viewed in Hexadecimal or in a Text mode by utilizing the <Addr Text> / <Addr Hex> softkey. This softkey affects both the controller and device address and is a 'toggle' function. The address must be set before any tests are selected by softkey or the default address's will be selected and the test performed on the default controller and device.

<Scan Address Menu> Use

If the address of the device to be tested is not known, the active devices of a particular controller or the active controllers on a network can be scanned and displayed using the "Scan Menu's". See Section 4, page 4-8 if you need more information on the use of this test.

Exercise Attributes Test

This test exercises the display attributes and is configured for an 80 column by 24 line display. The test will be performed on the Display that has been selected in the Controller & Device Address field of the 'Display Tests Menu'. Pressing the <Test 1> softkey should produce the display shown below.

E X E R C I S E D I S P L A Y A T T R I B U T E S

> 0123456789	< Protected
> ABCDEFGHIJ	< Alpha
> 0123456789	< Numeric
> ABCDEFGHIJ	< Highlight
>	< Non-Display
> 0123456789	< Modified

Figure 5-2. Exercise Display Attributes

Once the data is displayed, the test is performed by moving the cursor to each of the fields denoted by the '>' and '<' characters and typing in characters other than the designated characters into the fields. Proper operation of the terminal will not allow any other characters to be placed into the fields than the type of characters labeled beside the field.

- The 'Protected' mode should not allow any characters to be over-typed or otherwise changed.
- The 'Alpha' field should allow only alphanumeric type of characters in this field.
- The 'Numeric' field should allow only numeric type of characters in the numeric field.
- When characters are typed into the 'Highlight' field, each character should retain the highlight characteristic.
- Characters should not be displayed when typed into the 'Non-Display' field.
- The 'Modified' mode is not exercised by this test software.

81 Character Stairstep

This test displays a "full display" of known characters. The pattern sent is called a stairstep due to the visual image of the characters 'stepping' to the right in each successive line. This test was designed for an 80 character by 24 line display. The test will be performed on the Display that has been selected in the Controller & Device Address field of the 'Display Tests Menu'. Pressing the <Test 2> softkey should produce a display like the one shown in figure 5-3.

ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()-+<>/?
 \ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()-+<>/
 ?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()-+<>
 /ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()-+<
 >/ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()-+
 </?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()-+
 +</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:()
 -+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:(
)-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*=:
 (-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&,*
 =:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&
 *=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&
 *=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%&
 ,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#%
 %,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@#
 \$%,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!@
 #%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789!
 @#%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456789
 !@#%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz012345678
 9!@#%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz01234567
 89!@#%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz0123456
 789!@#%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz012345
 6789!@#%\$,&,*=:()-+</?ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstu vwxyz01234

Figure 5-3. 81 Character Stairstep Display

Actual connection to the network is illustrated in Figure 5-4.

Connection to the network can take place as illustrated in Figure 5-6.

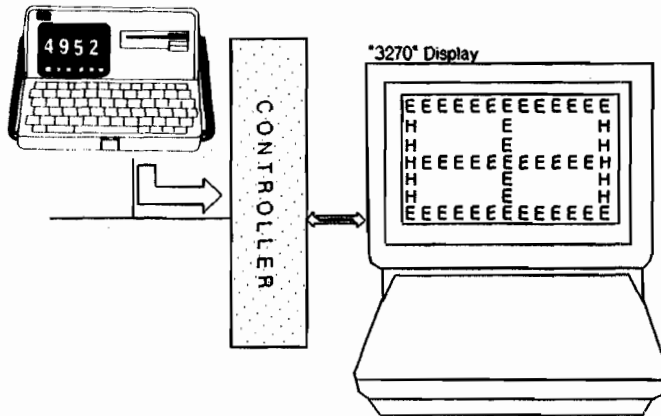


Figure 5-6. Connection for Alignment Pattern

Control Key Response

This test allows you to test the control keys - PA 1 through PA 3, PF 1 through PF 24 and the Clear & Enter keys. This test was designed for an 80 character by 24 line display. The test will be performed on the Display and Keyboard that has been selected in the Controller & Device Address field of the 'Display Tests Menu'. Pressing the <Test 4> softkey produces the display shown below.

P u s h d e s i r e d c o n t r o l k e y .

U s e E N T E R K E Y t o s t o p t e s t .

P F 1 3 K e y P r e s s e d

This test is performed by first specifying an address of a particular terminal and then have someone at that terminal press each control key desired to verify it's correct operation.

When the test is completed to satisfaction, press the ENTER key on the 'test' terminal and line 10 of the terminal should then change to say:

E N T E R K e y P r e s s e d , T e s t C o m p l e t e .

The cursor is placed on line 15 and any other keys on the keyboard can be pressed, however, none of the keys other than the above listed will respond to the display as part of the test.

Pressing keys too rapidly can cause the test display to lock its keyboard. This lockup situation can be cleared by pressing the RESET key on the keyboard being tested.

Test Results

All of the display tests will complete with a test result display similar to the figure that follows. The test result display remains until the EXIT key is pressed.

D I S P L A Y T E S T R E S U L T S

T E S T 1 - E X E R C I S E A T T R I B U T E S

C O N T R O L L E R A D D R E S S :
D E V I C E A D D R E S S :

40
40

O P E R A T I O N S U C C E S S F U L .

E x a m
D a t a

E x e c
T e s t

P r i n t
S c r n

Figure 5-7. Display Test Results

If a test fails, an error message will be shown on the display. An explanation of the error messages can be found in Appendix A.

<Examine Data> Softkey

All of the display tests allow the user to utilize the Examine Data function of the HP 4952A to view the actual data for detailed analysis. The data is shown in two formats:

- o A "Two line" format for the BSC application (see Section 7).
- o An "SDLC Frame & Format" for the SNA application (see Section 7).

<Exec Test> Softkey

This key allows the test just executed to be re-run.

<Print Scrn> Softkey

This softkey allows the current display on the "3270" tester to be printed on the printer selected in the 'Print Screen Setup Menu'.

Printer Tests

The <Printer Tests> menus allow the testing of a "3270" printer.

NOTE

The data communications parameters, "3270" device response timeout, and the printout of test results are controlled by the <Setup Tests/Print> menus and should be set before any printer tests are attempted.

The Printer Tests Menu has two tests available:

- New Line / End-of-Message
- 81 Character Stairstep

Using the Printer Tests Menu

This menu is accessed from the main "3270 Menu" by the <3270 Tests Prt> softkey. The menu displayed is shown on the next page.

Printer Tests Menu

```
Test 1 .      NEW LINE / END - OF - MESSAGE  
              ( Exercise Printer )  
Test 2 .      81 CHARACTER STAIRSTEP  
              ( Exercise Printer )
```

```
Controller Address      C1  
Device Address          02
```

Test	Test	Addr	Scan
1	2	Text	Addr

Figure 6-1. Printer Tests Menu

Printer Tests Menu

The Printer Tests Menu allows two choices of tests :

- New Line End-of-Message
- 81 Character Stairstep

and two 'help' menu choices :

- Address / Text
- Scan Addresses

The first step is to select a controller and device for the test to be performed on. This selection is done in the Controller and Device Address fields at the lower portion of the screen.

Use the cursor arrow keys or the RTN key to go to the appropriate field for a selection of an address. The address is input to the field through the use of the HP 4952A keyboard.

The addresses can be viewed in Hexadecimal or Text mode by utilizing the <Addr Text> / <Addr Hex> softkey. This softkey affects both the controller and device address and is a 'toggle' function. The address must be set before any tests are chosen or the default addresses will be selected and the test is performed on the default controller and device.

Once the controller and device addresses have been chosen, one of the two Printer tests can be selected. Both are intended to test the correct function of a printer connected to a "3270" network. Each can also be used to test a display, but the preferred tests for a display are listed under the "3270 Tests Display Tests" menu.

<Scan Address Menu> Use

If the address of the device to be tested is not known, the active devices of a particular controller or the active controllers on a network can be scanned and displayed using the "Scan Menus". See Section 4, page 4-8 if you need more information on the use of this test.

New Line/End-of-Message

This test checks printing attributes and is configured for an 80 column printer. The test will be performed on a printer selected in the Controller & Device Address field. Pressing the <Test 1> softkey produces the printout shown below.

```
F I R S T   N E W _ L I N E   F U N C T I O N   C H A R A C T E R   H E R E   >  
  
N E W _ L I N E   C H A R A C T E R   H E R E   >  
N E W _ L I N E   H E R E   >  
  
E N D   O F   M E S S A G E   C H A R A C T E R   H E R E   >
```

A possible connection to the network is shown in Figure 6-2.

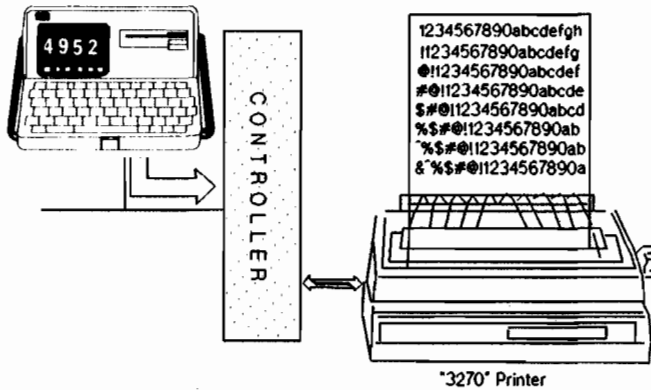


Figure 6-2. Connection to Printer

Once the data is printed, the test has begun. Insure that characters are the only text printed. Another line is sent which is not supposed to print. That line is " (THIS SHOULD NOT PRINT) ". Proper operation of the printer does not allow any other characters to be printed on the printer.

If by chance a display is addressed instead of a printer when this test is run, a passed test message will result and a display similar to the one on the next page will be on the test display.

FIRST_NEW_LINE FIR

ACTER HERE > NEW_LINE CHARACTER HERE > END OF MESSAGE CHARACTER

HERE > (THIS SHOULD NOT PRINT)'

81 Character Stairstep

This test prints a "full page" of known characters. The pattern is called a stairstep due to the visual image of the characters 'stepping' to the right in each successive line. This test was designed for an 80 character line printer. The test will be performed on the printer selected by the Controller & Device Address field of the 'Display Tests Menu'. Depressing the <Test 2> softkey produces a print out similar to the one shown below.

```
ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()-+<>/
? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()-+<>
/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()-+<
>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()-+
<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()-
+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()
+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:()
)-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:
())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*=:
())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&*
=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&
*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&
*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%,&
*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#$$%
,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#
$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@#
$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@
#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!@
#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789!
@#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz012345678
9!@#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz01234567
89!@#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456
789!@#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz012345
6789!@#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz01234
56789!@#$$%,&*=:())-+<>/? ABCDEF GHI JKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123
4
```

Figure 6-3. 81 Character Stairstep Printout

Actual connection to the network is illustrated in Figure 6-4.

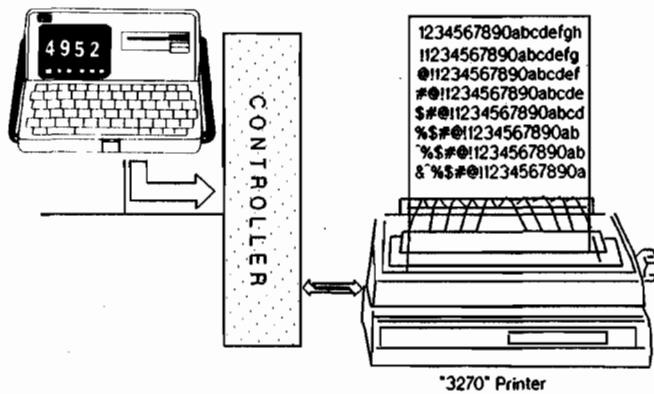


Figure 6-4. Connection to Printer

Test Results

All of the printer tests will complete with a test result display as shown below. The test result display remains until the EXIT key is pressed. Lines 1 and 2 will change with each test result display.

```

P R I N T E R   T E S T   R E S U L T S

T E S T   1   -   N e w   l i n e / E n d   o f   M e s s a g e

C O N T R O L L E R   A D D R E S S   :           40
D E V I C E   A D D R E S S   :           40

O P E R A T I O N   S U C C E S S F U L .

E x a m           E x e c           P r i n t
D a t a           T e s t           S c r n
```

Figure 6-5. Printer Test Results

If the test fails, an error message will be shown on the display. An explanation of the error messages can be found in Appendix A.

<Examine Data> Softkey

Both the "status" tests allow the user to utilize the Examine Data function of the HP 4952A to view the actual "data" for detailed analysis. The data is shown in two formats :

A "Two line" format for the BSC application (see Section 7).

An "SDLC Frame & Format" for the SNA application (see Section 7).

<Exec Test> Softkey

This key allows the test just executed to be re-run.

<Print Scrn> Softkey

This softkey allows the printout of the current display to be printed on the printer as specified in the 'Print Screen Setup Menu'.

7

General Tests

The <General Tests> menus are designed to poll the status of controllers and devices connected to the "3270" network tester or poll and identify each device connected to a specific controller for installation.

NOTE

The data communications parameters, "3270" device response timeout, and the printout of test results are controlled by the <Setup Tests/Print> menus and should be set before tests are attempted.

The General Tests menu has three available tests:

- Read Controller Status
- Read Device Status
- Looping Device Scan

Using the General Tests Menu

This menu is accessed from the main "3270 Menu" by the <3270 Tests Gen> softkey. The menu is displayed on the next page.

General Tests Menu

```
Test 1 .      READ CONTROLLER STATUS
              (General Poll)
Test 2 .      READ DEVICE STATUS
              (Specific Poll)
Test 3 .      LOOPING DEVICE SCAN
              (Message to device)
```

```
Controller Address :      c1
Device Address :         o2
```

Test	Test	Test	Addr	Scan
1	2	3	Text	Addr

Figure 7-1. General Tests Menu

General Tests Menu

The first step in performing this test is to select a controller and device for the test to be performed on. This selection is done in the Controller and Device Address fields at the lower portion of the screen. Use the cursor arrow keys or the RTN key to scroll to the appropriate field for the selection of an address. The address is input to the field through the use of the HP 4952A keyboard.

The addresses can be viewed in Hexadecimal or in a Text mode by utilizing the <Addr Text> / <Addr Hex> softkey. This softkey affects both the controller and device address and is a 'toggle' function. The address must be set before any tests are selected by softkey or the default address will be selected and the test performed on the default controller and device.

Once the controller and device address have been chosen, one of the three General tests can be selected. All are intended to aid testing of the correct function of a device connected to a "3270" network. The Looping Scan test is intended for installation aid and troubleshooting.

<Scan Address Menu> Use

If the address of the device to be tested is not known, the active devices of a particular controller or the active controllers on a network can be scanned and displayed using the "Scan Menus". See Section 4 page 4-8 if you need more information on the use of this test.

Read Controller Status

The Read Controller Status test allows you to poll a specific controller for its status. The Address must be selected. Next, press the <Test 1> key to select this test. Note the menu does not change while the test is running. The only noticeable difference is an inverse blinking video display at the lower portion of the menu with the text 'running' in it. When the test is finished a test result display is placed on the screen with the results of the test. This is shown in the following display.

```

      G e n e r a l   T e s t   R e s u l t s

T E S T   1   -   R E A D   C O N T R O L L E R   S T A T U S

      C O N T R O L L E R   A D D R E S S   :           40
      D E V I C E   A D D R E S S   :           40

C o n t r o l l e r   A v a i l a b l e

E x a m           E x e c           P r i n t
D a t a           T e s t           S c r n
```

Figure 7-2. Read Controller Status Test Results

If the test fails, an error message is shown on the display. An explanation of the error messages can be found in Appendix A.

Read Device Status

This test allows you to poll a specific device for its status. The Address must be selected. Next, press the <Test 2> key to select this test. Note the menu does not change while the test is running. One difference is an inverse blinking video display at the lower portion of the menu with the text 'running' in it. When the test is finished a test result is displayed.

G e n e r a l T e s t R e s u l t s

T E S T 1 - R E A D D E V I C E S T A T U S

C O N T R O L L E R A D D R E S S :
D E V I C E A D D R E S S :

40
40

O p e r a t i o n A b o r t e d

E x a m
D a t a

E x e c
T e s t

P r i n t
S c r n

Figure 7-3. Read Device Status Test Results

If the test fails, an error message is shown on the display. An explanation of the error messages can be found in Appendix A.

<Exec Test> Softkey

This key allows the test just executed to be re-run.

<Print Scrn> Softkey

This softkey allows the printout of the current display to the printer defined in the 'Print Screen Setup Menu'.

<Examine Data> Softkey

Both the Read Controller and Read Device status tests allow the user to select the Examine Data function of the HP 4952A to view the actual data for detailed analysis. The data is shown in two formats :

A "Two line" format for the BSC application.

A "SDLC Frame & Format" for the SNA application.

Two Line Examine Data Display

The Two Line data display format is in alternating inverse and regular video lines. The top (regular video) line is the DTE data as taken from the line. The second line (inverse video) is the DCE data. Note how the DTE data ends on one line and the DCE data begins on the line immediately below. This shows the half-duplex characteristic of the BSC protocol.

SDLC Frame and Format Examine Data Display

After the test is finished, access the Examine Data Menu and the frame information is decoded. Note that at the top of the Examine Data display, up to 57 data characters can be shown.

ADDRESS	Hex address of the secondary channel.
TYPE	Identifies the type of frame from the Control Field.
N(S)	Send Sequence Number of the frame. Normally modulo 8.
P/F	Poll/Final Bit. In the command mode this bit is a P-bit and is normally "0". If the primary requires an immediate response from the secondary, it sets the P-bit to a "1". The subsequent response is identified, since the Final bit is set to a "1".
N(R)	Receive Sequence Number of the frame. Normally modulo 8.
Data	Displays the first nine characters of the information field.
FCS	Indicates the status of the Frame Check Sequence (CRC-CCITT) as either good (GG), bad (BB), or indicates an aborted frame (AA).

Looping Device Scan

This test verifies all devices connected to a specific controller in a "3270" network. The test involves specifying a controller in the general tests menu and then polling all the devices connected to that controller by writing the controller and specific device address to the particular device being polled. This allows you to identify which device is connected to which output of the controller. The poll will be performed on all devices connected to the controller selected in the Controller Address field of the 'General Tests Menu'. Pressing the <Test 3> softkey produces the printout/display on each device similar to the one shown below (The poll message is configured for an 80 column by 24 line output device.)

CONTROLLER ADDRESS: X 'C1'

DEVICE ADDRESS: X 'C2'

The HP 4952A display should change to a display as shown below.

LOOPING SCAN TEST

Press EXIT Key to stop test.

Currently Polling Device:

Scanning

A possible connection to the network is shown in Figure 7-4.

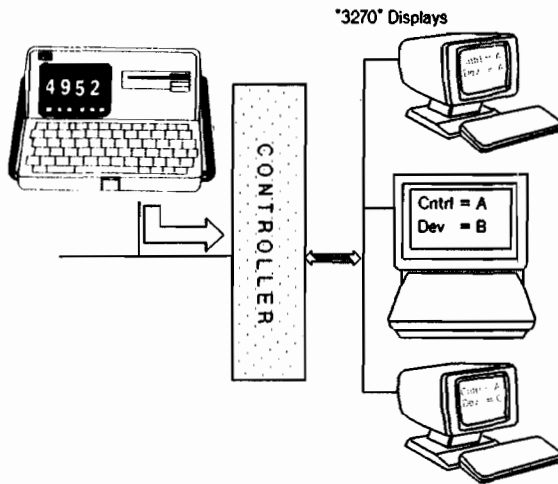


Figure 7-4. Connection to the "3270" Network

Once the display is printed on the polled device, the test has begun. The message shown is the only text that should be printed on each device, and all the devices connected to the controller being tested are displaying the same message with different addresses. One way of checking each display would be a screen print of the 'Scan Address' results for that particular controller done previously and sent to a printer on the network or to the HP 4952A.

This test will continue to run until the EXIT key on the HP 4952A keyboard is pressed. This means once the test is started it continues running until it is manually stopped.

Error Messages

Bad Data Transfer (BSC only)

Cause A message received from the polled device indicating that the last block of data sent by the "3270" tester had a good BCC, but contained unrecognized commands.

Action Make sure that the test is proper for the device. For example, DISPLAY tests should only be run on displays and PRINTER tests should only be performed on printers.

Corrupt Data Received

Cause The polled device returned a data block with a bad BCC/FCS.

Action Re-run the test. If problem persists, most likely a modem problem. Run self tests on both local and remote modems. If this is not the problem, check digital transmission facility with BERT capability.

Device Busy (BSC only)

Cause A message received from the polled device indicating the device was busy and not available.

Action Re-run test

Device Not Available

Cause Device not powered on.

Action Check power to device.

Cause Test/Normal switch set to Test mode.

Action Set Test/Normal switch to normal.

Cause The device address field in the "3270" tester is selected to a port that doesn't have an attached device.

Action Run 'LOOPING DEVICE SCAN' to verify which port the device under test is connected, then put this value into the device address field.

NAK Received (BSC only)

Cause Attempted seven times to transmit a message and the 3270 Negatively AcKnowledged it each time.

Action Most likely a faulty or misconfigured modem. Run self tests on both local and remote modems. If this is not the problem, check digital transmission with BERT capability.

No DTR/DSR

Cause Controller or modem is not powered on.

Action Make sure the power is on.

Cause Bad physical connections.

Action Make sure the interface pod cable is firmly attached to both the HP 4951 and the interface pod. Make sure the connector from the controller or modem is securely attached to the "3270" tester.

Cause Tests 'Setup Menu' not configured properly.

Action See "Test Setup Menu" in Section 4.

No Pod Attached

Cause No interface pod was found when the test was executed.

Action Make sure the interface pod cable is firmly attached to both the HP 4951 and the interface pod, and recycle the power to the instrument. You then have to re-load the application.

No Response

Cause Controller Address field does not contain the address of an active controller.

Action Use "Scan Addr" to identify and select an active controller to test.

Cause Improper protocol selected.

Action If BSC protocol, use BSC_3270 application.
If SNA protocol, use SNA_3270 application.

Cause Tests 'Setup Menu' not configured properly.

Action See "Test Setup Menu" in Section 4.

Operation Aborted

Cause User of the "3270" tester has pressed the EXIT key during the execution of a test.

Action User Aborted, re-run test.

Printer Paper or Cover (BSC only)

Cause A message from the polled printer indicating a printer error. The printer is not available.

Action Make sure paper is in the printer and the cover is firmly on.

Receiver Overrun

Cause Characters are being received too quickly.

Action The device under test is providing a clock greater than 19.2 kbps. The tester will not operate under these conditions.

Unexpected Results

Cause The response from the "3270" device/controller was not expected.

Action Re-run the test. If the test continually fails, there could be a protocol problem.

B

Duplicating the Master Disc

Format a Blank Disc

1. Locate a blank disc and affix a label to it (One blank disc is supplied with the application. A box of ten can be ordered - HP 92192A).
2. Be sure the write-protect tab is pushed in the direction so it will be visible from the front of the disc; otherwise, you will get a write protected error when you attempt to store a file. Insert the disc as shown in Figure B-1.
3. Go to the top level menu, press [MORE] and press <Mass Store>.
4. Press the <Format> softkey.
5. Press <Execute>.
6. When the disc activity is done, remove the formatted disc.

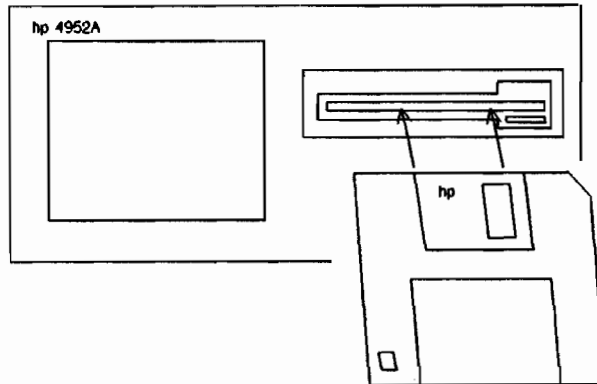


Figure B-1. Loading a Disc

Copy the Master Disc

The master disc contains the "3270" application programs. Each is for a different data code and/or protocol.

It is recommended to copy all of the application programs so the master disc is not used as a training disc or as a normal "working disc" which might allow an application to be inadvertently deleted or copied over.

Copying the "3270" Software Applications

1. Press <Load>.
2. Type in the name of the application you want to copy and press <execute>. When the disc activity stops, press the EXIT key.
3. Remove the master disc and insert the formatted working disc into the disc drive.
4. Press <Store>. Type in a new name if desired (AUTOAPPLIC can be used if you want this application to automatically load every time you insert the disc). Then move the cursor to the comment line and enter SNA_3270, WORKING COPY, or a similar comment which is descriptive of the application you are copying.

5. Press <Execute>. When the disc activity stops, press <EXIT> to return to the top level menu.
6. Repeat steps 1-5 for any other applications that you want to copy (Note only one AUTOAPPLIC file is allowed per disc).

Index

A

<Addr Text> softkey	4-7,5-2, 6-3,7-3
<Addr Hex> softkey	4-9,5-2, 6-3,7-3
alignment pattern	5-7
alpha mode	5-4
applications	1-2,3-1
autoapplic	B-2

B

bits/sec	4-3
----------	-----

C

catalog,mass storage	2-3
copying,applications	B-2
control key response	5-8
<Ctrl> softkey	4-3
controller address	4-9

D

data code	4-3
device address field	4-9
directory,mass storage	2-3
disc,blank	1-2,B-1
disc,master	1-2,B-2

E

end of message test	6-3
equipment supplied	1-2
<Exam Data> softkey	5-10,6-8, 7-6
<Exec Test> softkey	5-11,6-8, 7-6
exercise attributes test	5-3
EXIT key	2-2,7-9, B-2

F

FEP	3-1
features	1-5
format a disc	B-1
frame & format display	5-10,6-8, 7-6
<full scan> softkey	4-9

G

<General Tests>	7-1
General Tests Menu	7-2

H

highlight mode/field	5-4
----------------------	-----

I

installation	3-5
--------------	-----

L

<Load> softkey	2-4
looping device scan test	7-7

M

maintenance	3-4
mode	4-3
memory requirements	1-6
menu figure	4-1

N

new line/end-of-message test	6-3
non-display mode/field	5-4
<NRZI> softkey	4-3
numeric mode/field	5-4

P

PA key	5-8
PF key	5-8
parity	4-7
<part scan> softkey	4-9
pod,connecting	2-1
power	2-1
<print menu> softkey same as	
<print scrn> softkey	4-9,5-11, 6-8,7-6
print screen setup menu	4-4
printer tests menu	6-2
protected mode/field	5-4
protocols	1-6

R

read controller status	7-4
read device status	7-5
repair	3-4
reset key	5-9
response timeout	4-3

S

<Scan Adrrs> softkey	4-79,4-8, 5-3,6-3,7-3
<Scan Ctrl/Dev> softkey	4-7
<Setup Tests> softkey	2-6,4-2
<Setup Print> softkey	2-6
<3270 Tests Disp> Softkey	2-6
<3270 Tests Prt> Softkey	2-6
<3270 Tests Gen> Softkey	2-6
specifications,	1-6
stairstep,81 character	5-4,6-5

T

test results	5-9,6-7
<test 1> softkey	5-3,6-3,7-4
<test 2> softkey	5-4,6-5,7-5
<test 3> softkey	5-7,7-7
<test 4> softkey	5-8
turning on	2-2
top level menu	2-2
two line display	5-10,6-8,7-6

W

working copy	2-3,b-2
--------------	---------

Softkeys

<3270> softkey	2-5
<3270 Tests Disp> Softkey	2-6
<3270 Tests Prt> Softkey	2-6
<3270 Tests Gen> Softkey	2-6
<4952> softkey	4-5
<Addr Text> softkey	4-7,5-2, 6-3,7-3
<Addr Hex> softkey	4-9,5-2, 6-3,7-3

<Ctrl> softkey	4-2,3
<Exam Data> softkey	5-10, 6-8,7-6
<Exec Test> softkey	5-11, 6-8,7-6
<Full Scan> softkey	4-9
<General Tests>	7-1
<Load> softkey	2-4
<Modem> softkey	4-2
<None> softkey	4-3
<NRZI> softkey	4-3
<Part Scan> softkey	4-9
<Print Menu> softkey same as	
<Print Scrn> softkey	4-9, 5-11,6-8,7-6
<Scan Addr> softkey	4-8, 5-3,6-3,7-3
<Scan Ctrl/Dev> softkey	4-7
<Setup Tests> softkey	2-6,4-2
<Setup Print> softkey	2-6
<Test 1> softkey	5-3,6-3,7-4
<Test 2> softkey	5-4,6-5,7-5
<Test 3> softkey	5-7,7-7
<Test 4> softkey	5-8

SALES OFFICES

Arranged alphabetically by country

1

Please send directory corrections to:

Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

ASIA

Hewlett-Packard Asia Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
G.P.O. Box 863, Hong Kong
Tel: 5-8487777
Telex: 76793 HPA HX
Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Fax: (416) 678-9421

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Liebigasse 1
P.O. Box 72
A-1222 **VIENNA**, Austria
Tel: (222) 2500
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
V. D. Hooplaan 241
P.O. Box 999
NL-118 LN 15 **AMSTELVEEN**
The Netherlands
Tel: 20 5479999
Telex: 18919 hpnr

SOUTH EAST EUROPE

Hewlett-Packard S.A.
World Trade Center
110 Avenue Louis-Casali
1215 Cointrin, **GENEVA**, Switzerland
Tel: (022) 98 96 51
Telex: 27225 hpser
Mail Address:
P.O. Box
CH-1217 Meyrin 1
GENEVA
Switzerland

MIDDLE EAST AND CENTRAL AFRICA

Hewlett-Packard S.A.
International Sales Branch
Middle East/Africa
7, rue du Bois-du-Lan
P.O. Box 364
CH-1217 Meyrin 1
GENEVA
Switzerland
Tel: (41/22) 780 7111
Fax: 783 7535

European Operations
Hewlett-Packard S.A.
150, Route du Nant d'Avril
1217 Meyrin 2
GENEVA, Switzerland
Tel: (41/22) 780 8111
Fax: (41/22) 780 8542

UNITED KINGDOM

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, RG113LL
Tel: 0344 773 100
Fax: (44/344) 763526

UNITED STATES OF AMERICA

Customer Information Center
(800) 752-0900
6:00 AM to 5:00 PM Pacific Time

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 670-4300

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollivon Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-5027
Telex: 034-8300
Cable: HEWPACK
Hewlett-Packard Trading S.A.
Bureau de Liaison/Bureau de Sport
Villa des Lions
9, Hal Gallouf
DZ-BORDJ EL BAHR
Tel: 76 02 07
Fax: 281 0387

ANGOLA

Telectra Angola LDA
Empresa Técnica de Equipamentos
16 rue Cons. Julio de Vilhema
LUANDA
Tel: 35515.35516
Telex: 3134

ARGENTINA

Hewlett-Packard Argentina S.A.
Montaneses 2140/50
1428 **BUENOS AIRES**
Tel: (54/1) 781 4059
(54/1) 781-4090

Laboratorio Rodriguez
Corswant S.R.L.
Misiones, 1156 - 1876
Bernal, Oeste
BUENOS AIRES
Tel: 252-3958, 252-4991

Argentina Esanco S.R.L.
A/ASCO 2328
1416 **BUENOS AIRES**
Tel: 541-58-1981, 541-59-2767
Telex: 22796 HEW PAC-AR

AUSTRALIA

Customer Information Centre
Tel: (008) 033821

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
PARKSIDE, S.A. 5063
153 Greenhill Road
ADELAIDE (Parkside) Sales
Tel: (61-8-) 272-5911
Fax: (61/8) 373-1398

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 61-7-300-4133
Telex: 42133
Cable: HEWPARD Brisbane

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
Thynne Street, Fern Hill Park
BRUCE, A.C.T. 2617
P.O. Box 257,
JAMISON, A.C.T. 2614
Tel: 61-62-51-6999
Telex: 62650
Cable: HEWPARD Canberra

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
P.O. Box 221
BLACKBURN, Victoria 3130
Tel: (61/3) 895-2895
Fax: (61/3) 898-7831
Cable: HEWPARD Melbourne

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
Herdsman Business Park
Cnr. Hasler & Gould Strs.
Osborne Park
CLAREMONT, W.A. 6017
Tel: (61/9) 242 1414
Fax: (61/9) 242-1682
Cable: HEWPARD Perth

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Sydney, Australia
Tel: (61/2) 888-4444
Fax: (61/2) 888-9072
Cable: HEWPARD Sydney

AUSTRIA

Hewlett-Packard GmbH
Verkaufsbüro Graz
Grottenhofstrasse 94
A-8052 **GRAZ**
Tel: 43-316-291-5660
Telex: 312375

Hewlett-Packard GmbH
Liebigasse 1
P.O. Box 72
A-1222 **VIENNA**
Tel: (43/222) 2500
Fax: (48/222) 2500 Ext 444

BAHRAIN

Modern Electronic
Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH 11495
SAUDI ARABIA
Tel: (966/1) 4763030
Telex: 595 (0495) 202049

Wael Pharmacy

P.O. Box 648

MANAMA

Tel: 256123

Telex: 8550 WAEL BN

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Bvd de la Woluwe, 100
Woluwedal
1200 **BRUSSELS**
Tel: (32/2) 761.31.11
Fax: (32/2) 763.06.13

BENIN

S.I.T.E.L.
Immeuble le General
Av. General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

BERMUDA

Applied Computer Technologies
Atlantic House Building
P.O. Box HM 2091
Par-La-Ville Road
HAMILTON 5
Tel: 295-1616
Telex: 380 3589/ACT BA

BOLIVIA

Arrellano Ltda
Av. 20 de Octubre #2125
Casilla 1383
LA PAZ
Tel: 368541

Siser Ltda. (Sistemas de
Importacion y Servicios Ltda.)
Gabriel Gonalvez 221
Casilla 4084
LA PAZ
Tel: (591/2) 340962/
363365/343245
Fax: 35-9268

BRAZIL

Hewlett-Packard do Brasil S.A.
Praia de Botafogo 228-A-614
6. AND.-CONJ. 801
Edificio Argentina - Ala A
22250 **RIO DE JANEIRO**, RJ
Tel: (55/21) 552-6422
Telex: 21905 HPBR BR
Cable: HEWPACK Rio de Janeiro

BRUNEI

Komputer Wisman Sdn Bhd
G6, Chandrawash Cmplx,
Jalan Tulong
P.O. Box 1297,
BANDAR SERI BEGAWAN
NEGARA BRUNI DARUSSALAM
Tel: 673-2-2000-70/26711

BURKINA FASSO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

CAMEROON

R.T.I.
175 Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 0906
Telex: 203376
Fax: (1) 45 31 09 18

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (1/403) 235-3100
Fax: (1/403) 272-2299

Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (1/403) 486-6666
Fax: (1/403) 489-8764

SALES OFFICES

Arranged alphabetically by country (cont'd)

CANADA (Cont'd)

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W8
Tel: (1/604) 270-2277
Fax: (1/604) 270-0859

Manitoba

Hewlett-Packard (Canada) Ltd.
1825 Inkster Blvd.
WINNIPEG, Manitoba R2X 1R3
Tel: (204) 694-2777

New Brunswick

Hewlett-Packard (Canada) Ltd.
814 Main Street
MONCTON, New Brunswick E1C 1E6
Tel: (506) 855-2641

Nova Scotia

Hewlett-Packard (Canada) Ltd.
201 Brownlow Avenue
DARTMOUTH, Nova Scotia B3B 1W2
Tel: (1/902) 469-7820
Fax: (1/902) 469-2817
Hewlett-Packard
(Canada) Ltd.
475 Hood Rd., Unit #2
MARKHAM, L3R 8H1
Tel: (416) 479-1770

Ontario

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (1/519) 686-9181
Fax: (1/519) 686-9145
Hewlett-Packard (Canada) Ltd.
6677 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (1/416) 678-9430
Fax: (1/416) 673-7253
Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (1/613) 820-6483
Fax: (1/613) 820-0377
Hewlett-Packard (Canada) Ltd.
3790 Victoria Park Ave.
WILLOWDALE, Ontario M2H 3H7
Tel: (1/416) 499-2550

Quebec

Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (1/514) 697-4232
Fax: (1/514) 697-6941

Saskatchewan

Hewlett-Packard (Canada) Ltd.
#1, 2175 Airport Rd.
SASKATOON, Saskatchewan S7L 7E1
Tel: (306) 242-3702

CHILE

Ricardo Borzutyk
Avanzados Sistemas de
Conocimientos S. A.
Austria 2041
SANTIAGO
America del Sur
Tel: (562) 223-5946/6148

CHINA, People's Republic of

China Hewlett-Packard Co., Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
Tel: (852/5) 8487777
Fax: (852/5) 868 4997
China Hewlett-Packard Co., Ltd.
P.O. Box 9610, Beijing
38 Bei San Huan X1 Road
Shuang Yu Shu, Hai Dian District
BEIJING
Tel: 256-6888
Fax: 256-3207

China Hewlett-Packard Co., Ltd.
23/F Shanghai Union Building
100 Yan An Road
SHANGHAI
Tel: 203-240
Fax: 202-149

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota

CONGO

Sema-Metra
16-18 Rue Barbes
92126 Montrouge Cedex
FRANCE
Tel: (1) 657/300
Telex: 200601 Semetra
Fax: (1) 46 56 96 53

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSÉ
Tel: 9-011-506-243-820
Telex: 3032367 GALGUR CR
Continex S.A.
Avenida 10C
Apartado 746-1000
34-36 **SAN JOSE**
Tel: (506) 33-0933
Telex: 2310 Continex CR
Fax: 21-6905

O. Fischel R. Y. Cia. S.A.
Apartados 434-10174
SAN JOSE
Tel: 23-72-44
Telex: 2379
Cable: OFIR

CYPRUS

Hellamco - M. Cotoyannis
2, Sikelianou St. & Kifissias Av.
P.O. Box 65074
N. Pshyko 15410
ATHENS
Greece
Tel: 647 79 426, 647 79 427
Telex: 224903

Terelera Ltd.
P.O. Box 1152
Valentine House
8 Stassandrou St.
NICOSIA
Tel: 45 628, 62 698
Telex: 5845 Itrx cy

DEMSTAR Ltd.
P.O. Box 2260

NICOSIA
Cyprus
Tel: 44 10 64
Telex: 3085
Fax: 46 46 35

DENMARK

Hewlett-Packard A/S
Kongevejen 25
3460 **BIRKEROD**
Tel: (45/42) 816640
Fax: (45/42) 815810

Hewlett-Packard A/S
Rolphedssvej 32
DK-8240 **RISSKOV,** Aarhus
Tel: 45-06-17-6000
Telex: 37409 hpas dk

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA)

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: 9-011-593-2-450975
Telex: 39322548 CYEDE ED

EGYPT

International Engineering Associates
6 El Gamea Street
Agozua
CAIRO
Tel: 71-21-681 348 0904
Telex: 93830 IEA UN
Cable: INTEGASSO

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: 9-011-503-266-858
Telex: 301 20539 IPESA SAL

ETHIOPIA

R.T.I.
175 rue Blomet
75016 **PARIS**
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

FINLAND

Hewlett-Packard Finland
Field Oy
Niittylanpöku IO
00620 **HELSINKI**
Tel: (90) 757-1011
Telex: 122022 Field SF

Hewlett-Packard Oy
Piispankallontie 17
02200 **ESPOO**
Tel: (358/0) 88721
Fax: (358/0) 887 2277

Hewlett-Packard Oy
Vainonkatu 9 C
40100 **JYVÄSKYLÄ**
Tel: (358/41) 21 85 11

Hewlett-Packard Oy
Valtie 57
90500 **OULU**
Tel: (358/81) 340 144

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 33-42-59-41-02
Telex: 410770F
Hewlett-Packard France
ZA Kergaradec
Rue Fernand Forest
29239 **GOUESNOU** (Brest)
Tel: (98) 41-87-90

Hewlett-Packard France
Chemin des Moulilles
Boite Postale 162
69131 **ECULLY** Cedex (Lyon)
Tel: (33) 72-29-32-93
Telex: 310617F

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 **LES MILLES** Cedex
Aix-en-Provence
Tel: (33/42) 59-41-02
Telex: 410770
Fax: 594872

Hewlett-Packard France
Parc Club des Tanneries
Batiment B4
4, Rue de la Faisanderie
67381 **LINGOLSHEIM** (Strasbourg)
Tel: (88) 76-15-00
Telex: 690141F

Hewlett-Packard France
Parc d'activités Cadéra
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
33700 **MÉRIGNAC** (Bordeaux)
Tel: (33) 56-34-00-84
Telex: 550105F

Hewlett-Packard France
Miniparc-ZIRST
Chemin du Vieux Chêne
38240 **MEYLAN** (Grenoble)
Tel: (76) 90-38-40

Hewlett-Packard France
Ru de l'Hôtelierie
Le Petit Bel Air
44470 **CARQUEFOU** (Nantes)
Tel: 40-30-38-38
Telex: 711085F

Hewlett-Packard France
Parc Tertiaire Héliopolis
Route de Micy
45380 **La CHAPELLE ST MESMIN**
(Orléans)
Tel: 38-43-93-56
Telex: 783 977F

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
1, av. du Canada
91947 **LES ULIS** Cedex (Orsay)
Tel: 69-82-60-60
Telex: 600048F

R.T.I. (Realisations
Telematiques Internationales)
175, rue Blomet
F-75015 **PARIS**
Tel: (33/1) 45310906
Telex: 42/203376

Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautel-Boitel
35000 **RENNES**
Tel: 99-51-42-44
Telex: 740912F

Hewlett-Packard France
45, rue des 3 Soeurs
Centre d'Affaires Paris Nord II
F-93420 Villepinte
B.P. 60020
F-95971 **ROISSY**
CHARLES DE GAULLE Cédex
Tel: (33/48) 91-68-00
Telex: 232366
Fax: 632183

Hewlett-Packard France
P.A.T. Lavatine
3, rue Jacques Monod
BP 185
76136 **MONT-ST-AIGNAN** (Rouen)
Tel: 35-59-19-20
Telex: 770035F

Hewlett-Packard France
Innoparc
BP 167 - Vole n°7
31328 **LABEGE** Cedex (Toulouse)
Tel: 61-39-11-40
Telex: 531639F

Hewlett-Packard France
Les Cardoulines
Batiment B2
Route des Dolines
Parc d'activité de Valbonne
Sophia Antipolis
06560 **VALBONNE** (Nice)
Tel: 93-65-39-40

Hewlett-Packard France
Parc d'activités des Prés
1, Rue Papin Cedex
59658 **VILLENEUVE D'ASCQ**
Tel: 20-91-41-25
Telex: 160124F

FRENCH WEST INDIES (Antilles)

R.T.I.
175, Rue Blomet
75015 PARIS
FRANCE
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GABON

R.T.I. Cameroon
Distribution/Services
B.P. 3899

DOULA, CAMEROON
(Please contact R.T.I. France.)
Tel: (237) 423291
Telex: 970/5385

R.T.I.

175, rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrale Deutschland
Hewlett-Packard-Strasse
Postfach 1641
D-6380 BAD HOMBURG v.d.H
Tel: (06172) 400-0
Telex: 410 844 hpbbg

Hewlett-Packard GmbH
Geschäftsstelle
Keilstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbln d

Hewlett-Packard GmbH
Verbindungsstelle Bonn
Friedrich-Ebert-Allee 26
53000 BONN
Tel: (0228) 234001
Telex: 8869421

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardsstrasse 2
D-7030 BÖBLINGEN
Postfach 1427
Tel: (49/7031) 645
Fax: (49/7031) 645-429

Hewlett-Packard GmbH
Zentralbereich Mktg
Herrenberger Strasse 130
D-7030 BÖBLINGEN
Tel: (49/7031) 14-0
Fax: (49/7031) 14-2999

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-41
Tel: (0231) 45001
Telex: 822858 hepdod

Hewlett-Packard GmbH
Reparaturzentrum Frankfurt
Bernstrasse 117
8000 FRANKFURT/MAIN 60
Tel: (069) 500001-0
Telex: 413249 hpffm

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kapstadtring 5
D-2000 HAMBURG 60
Tel: 49-40-63-804-0
Telex: 021 63 032 hphh d
Hewlett-Packard GmbH
Geschäftsstelle
Heldering 37-39
D-3000 HANNOVER 61
Tel: (49/511) 5706-0
Fax: (49/511) 5706-126

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
D-6800 MANNHEIM
Tel: 49-0621-70-05-0
Telex: 0462105 hpmhm

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 49-0731-70-73-0
Telex: 0712816 HP ULM-D

Hewlett-Packard GmbH
Geschäftsstelle
Emmericher Strasse 13
D-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg

Hewlett-Packard GmbH
Vertriebszentrum Ratingen
Berliner Strasse 111
D-4030 RATINGEN
Postfach 31 12
Tel: (02102) 494-0
Telex: 589 070 hprad

Hewlett-Packard GmbH
Vertriebszentrum Muehen
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: 49-89-61-2070
Telex: 0524985 hpmmh

Hewlett-Packard GmbH
Geschäftsstelle
Ermisallee
7517 WALDBRONN 2
Postfach 1251
Tel: (07243) 602-0
Telex: 782 838 hepk

GREAT BRITAIN See United Kingdom

GREECE

Hewlett-Packard Hellas
32, Kifissias Avenue
15125 Amaraoussion
ATHENS
Greece
Tel: 6828811
Telex: 216588 hpat gr
Fax: 6832978

GUATEMALA

IPESA DE GUATEMALA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 317853, 66471/5
9-011-502-2-316627
Telex: 3055765 IPESA GU

GUINEA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

HONG KONG

Hewlett-Packard Asia, Ltd.
22/F, West Tower Bond Centre
89 Queensway Central
HONG KONG
Tel: (852/5) 848-7777
Fax: (85215) 868-4997
Cable: HEWPACK HONG KONG

ICELAND

Hewlett-Packard Iceland
Hoefdabakka 9
112 REYKJAVIK
Tel: 354-1-67-1000
Telex: 37409
Fax: 354-1-673031

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs
and maintenance service is done
through Computer Maintenance Corp.

Blue Star Ltd.
B. D. Patel House
Near Sardar Patel Colony
ANMEDABAD 380 014
Tel: 403531, 403532
Telex: 0121-234
Cable: BLUE FROST

Blue Star Ltd.
40/4 Lavelle Road
BANGALORE 560 001
Tel: 57881, 867780
Telex: 0845-430 BSLBIN
Cable: BLUESTAR

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-8155
Telex: 011-71193 BSSS IN
Cable: FROSTBLUE

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BARODA, 390 005
Tel: 65235, 65236
Cable: BLUE STAR

Blue Star Ltd.
7 Hare Street
P. O. Box 506
CALCUTTA 700 001
Tel: 230131, 230132
Telex: 031-61120 BSNF IN
Cable: BLUESTAR

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 682547
Telex: 031-2463
Cable: BLUEFROST

Blue Star Ltd.
2-2-47/1106 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057, 72058
Telex: 0155-459
Cable: BLUEFROST

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthunkuzhi
TRIVANDRUM 695 013
Tel: 65799, 65820
Telex: 0884-259
Cable: BLUESTAR

Hewlett-Packard India
Meridian Commercial Complex
6th Floor
8 Windsor Place
Janpath
NEW DELHI 110 001
Tel: 91-11384911
Telex: 31-4935 HPNDIN

INDONESIA

BERCA Indonesia P.T.
P. O. Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA

BERCA Indonesia P.T.
P. O. Box 2497/Jkt
Antara Bldg., 12th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-340417
Telex: 46748 BERSAL IA

BERCA Indonesia P.T.
Jalan Kutai 24
SURABAYA
Tel: 67118
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 609/10/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPARAQ IK

IRELAND

Hewlett-Packard Ireland Ltd.
Temple House, Temple Road
Blackrock, Co. DUBLIN
Tel: (353/1) 883399
Telex: 30439

Hewlett-Packard Ltd.
75 Belfast Rd., Carrickfergus
Belfast BT38 8PH
NORTHERN IRELAND
Tel: 09603-67333
Telex: 747626

ISRAEL

Eidan Electronic Instrument Ltd.
P. O. Box 1270
JERUSALEM 91000
16, Ohaliav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL

Computation and Measurement
Systems (CMS) Ltd.
11 Masad Street
67060
TEL-AVIV
Tel: 388 388
Telex: 33569 Motli IL

ITALY

Hewlett-Packard Italiana Spa
Via G. di Vittorio 10
20094 CORSICO (MI)
Tel: 02/4408351
Fax: 02/4409964

Hewlett-Packard Italiana Spa
Via Nuova Rivoltana 95
20090 LIMITO (MI)
Tel: 02/75761
Fax: 02/7576230

Hewlett-Packard Italiana Spa
Via Emilia 51/C
40011 ANZOLA
DELL'EMILIA (BO)
Tel: 051/731061

Hewlett-Packard Italiana Spa
Via M. Ricci 17 - Palombina Nuova
60100 ANCONA
Tel: 071/883782

Hewlett-Packard Italiana Spa
Traversa 99C Giulio Petroni 19
70124 BARI
Tel: 080/410744
Fax: 080/417891

Hewlett-Packard Italiana Spa
Via Principe Nicolia 43G/C
95126 CATANIA
Tel: 095/371087
Fax: 095/388569

Hewlett-Packard Italiana Spa
Via G. Di Vittorio 9
20063 CERNUSCO S/N (MI)
Tel: 02/923691
Fax: 02/9237746

Hewlett-Packard Italiana Spa
Via Sacco e Vanzetti 1/A
50145 FIRENZE
Tel: 055/318533
Fax: 055/373965

Hewlett-Packard Italiana Spa
Viale Brigate Bisagno 2
16129 GENOVA
Tel: 010/541141
Fax: 010/591733

Hewlett-Packard Italiana Spa
Via Orazio 16
80122 NAPOLI
Tel: 081/7611444
Fax: 081/680164

Hewlett-Packard Italiana Spa
Via Pellizzo 15
35128 PADOVA
Tel: 049/8070166
Fax: 049/773097

Hewlett-Packard Italiana Spa
Via Del Tintoretto 200
00144 ROMA
Tel: 06/54631
Fax: 06/5408710

SALES OFFICES

Arranged alphabetically by country (cont'd)

ITALY (Cont'd)

Hewlett-Packard Italiana Spa
Corso Svizzera 185
10149 TORINO
Tel: 011/744044
Fax: 011/7710815

IVORY COAST

Ste Ivoirienne des Techniques
de l'Informatique
Immeuble C.N.A. - 5e etage
Avenue General de Gaulle
P.O. Box 161

ABIDJAN 01
Tel: 32 12 27
Telex: 22149

Engineering Business Concept (E.B.C.)
Angle Avenue J. Anoma et Bd.
République
08 B.P. 323 **ABIDJAN 08**
Tel: 32 50 24, 41 48 70
Fax: 35 37 90

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nihon-Seimei Akita
Chuo-Dori Bldg.
4-2-7 Naka-dori
AKITA, 010
Tel: (81/188) 36-5021

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (81/462) 25-0031
Fax: (81/462) 25-0064

Yokogawa-Hewlett-Packard Ltd.
3-1 Motochiba-Cho
CHIBA, 280
Tel: (81/472) 25-7701
Fax: (81/472) 21-0382

Yokogawa-Hewlett-Packard Ltd.
Dai-3 Hakata-Kaisai Bldg.
1-3-6 Hakata-eki Minami
Hakata-Ku, **FUKUOKA 812**
Tel: (81/92) 472-8731

Yokogawa-Hewlett-Packard Ltd.
Nihon-Dantai-Seimei-
Koriyama Bldg.
21-10 Toramaru-Cho,
Koriyama **FUKUSHIMA, 963**
Tel: (81/249) 39-7111

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: (81/82) 241-0611
Fax: (81/82) 241-0619

Yokogawa-Hewlett-Packard Ltd.
Issei Bldg.
2-3-17 Takezono, Tsukuba
IBARAGI, 305

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-maru
Mito, **IBARAKI 310**
Tel: (81/292) 25-7470

Yokogawa-Hewlett-Packard Ltd.
Towa Building 2-2-3
Kaigan-dori, Chuo-ku
KOBE, 650
Tel: (81/78) 392-4791
Fax: (81/78) 392-4839

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg.
3-4 Tsukuba

KUMAGAYA, Saitama 360
Tel: (81/485) 24-6563
Fax: (81/485) 24-9050

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614 Higashi-Shiokoji-cho
Karasuma-Nishi-iru, Shiokoji-Dori
Shimogyo-Ku, **KYOTO, 600**
Tel: (81/75) 343-0921
Fax: (81/75) 343-4356

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-Maru
MITO, Ibaraki 310
Tel: (81/292) 25-7470
Fax: (81/292) 31-6589

Yokogawa-Hewlett-Packard Ltd.
Nagano-Tokyo-kaijo Bldg.
1081, Minamiagata-Machi
Nagano-Shi, **NAGANO, 380**
Tel: (81/262) 24-8012
Fax: (81/262) 24-8016

Yokogawa-Hewlett-Packard Ltd.
Nagoya Kokusai Center Building
1-47-1, Nagoya, Nakamura-ku
NAGOYA, AICHI 450
Tel: (81/52) 571-5171
Fax: (81/52) 565-0896

Yokogawa-Hewlett-Packard Ltd.
Sai-Kyo-Ren Building
1-2 Dote-cho
OOMIYA-SHI SAITAMA 330
Tel: (0486) 45-8031

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 5-4-20 Nishi-Nakajima
4-20 Nishinakajima, 5 Chome,
Yodogawa-ku
OSAKA, 532
Tel: (81/6) 304-6021
Fax: (81/6) 304-0216

Yokogawa-Hewlett-Packard Ltd.
1-27-15, Yabe
SAGAMIHARA Kanagawa, 229
Tel: (81/427) 59-1311

Yokogawa-Hewlett-Packard Ltd.
Hamamatsu Motohiro-Cho Daichi
Seimei Bldg 219-21, Motohiro-Cho
Hamamatsu-shi
SHIZUOKA, 430
Tel: (81/534) 56-1771
Fax: (81/534) 552371

Yokogawa-Hewlett-Packard Ltd.
Shinjuku Daichi Seimei Bldg.
Nishi Shinjuku 2-7-1,
Shinjuku-ku, **TOKYO 163**
Tel: (81/3) 348-4611
Fax: (81/3) 348-7969

Yokogawa-Hewlett-Packard Ltd.
9-1, Takakura-cho
Hachioji-shi, **TOKYO, 192**
Tel: 81-426-42-1231

Yokogawa-Hewlett-Packard Ltd.
Tokyo-Nissam-Minato Bldg.
1-6-34 Konan, Minato-Ku
TOKYO 108
Tel: (81/3) 458-5411

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3-chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK

Yokogawa Hokushin Electric Corp.
(YEW)
Shinjuku-NS Bldg. 10F
9-32 Nokacho 2 Chome
Shinjuku-ku
TOKYO, 163
Tel: (03) 349-1859
Telex: J27584

Yokogawa-Hewlett-Packard Ltd.
Toyoda-Tokyo-Kaijo Bldg.
1-179 Miyuki-Hon-Cho
TOYODA 473
Tel: (81/565) 27-5611

Yokogawa-Hewlett-Packard Ltd.
Chiyo-dasei-Utsunomiya Bldg.
2-3-1, Ohdori, **UTSUNOMIYA, Tochigi**
Shi 320
Tel: (81/286) 33-1153
Fax: (81/286) 33-1175

Yokogawa-Hewlett-Packard Ltd.
No. 2 Yasuda Bldg.
2-32-12, Tsuruyo-cho
Kanagawa-ku, **YOKOHAMA 221**
Tel: (81/45) 312-1252
Fax: (81/45) 311-8328

KENYA

ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 33 1955
Telex: 22639

KOREA

Samsung Hewlett-Packard Co. Ltd.
Dongbang Yeouido Building
36-1 Yeouid Do-Dong
Yongdeungpo-Ku
SEOUL, 150
Tel: (82/2) 784-4666, 784-2666
Fax: (82/2) 784-7084
Telex: 25166 SAMSAN K

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830
SAFAT 13009
Tel: 242 49 10, 241 17 26
Telex: 22461 AREEG KT
Cable: VISCOUNT

LEBANON

Computer Information Systems S.A.L.
Chammas Building
P.O. Box 11-6274
DORA BEIRUT
Tel: 89 31 13, 58 18 35
Telex: 42309 chacis le
Fax: 58 18 34

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Bvd de la Woluwe, 100
Woluwedal
B-1200 **BRUSSELS**
Tel: (32/2) 761-3111
Telex: 23-494 paloben bru

MADAGASCAR

R.T.I.
175, Rue Blomet
75015 Paris
FRANCE
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MALAWI

Systron (Private) Ltd.
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Zimbabwe
Tel: 739881/739885
Telex: 4122
Fax: 70 20 08

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
9th Floor
Chung Khai Bank Building
46, Jalan Raja Laut
50350 **KUALA LUMPUR, MALAYSIA**
Tel: (60/3) 298-6555
Fax: (60/3) 291-5495

Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, **SARAWAK**
Tel: 36299
Telex: 70904 PROMAL MA
Cable: PROTELENG

MALTA

R.T.I.
175, Rue Blomet
75015 Paris
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MAURITANIA

R.T.I.
175, Rue Blomet
75015 Paris
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MAURITIUS

R.T.I.
175, Rue Blomet
75015 Paris
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MEXICO

Hewlett-Packard de Mexico,
S.A. de C.V.
Rio No No. 4049 Desp. 12
Fracc. Cordoba
JUAREZ, Mexico
Tel: 161-3-15-62

Hewlett-Packard de Mexico,
S.A. de C.V.
Condominio Kadereyta
Circuito del Mezon No. 186 Desp. 6
Col. Del Prado - 76030
ORO, Mexico
Tel: 463-6-02-71

Hewlett-Packard de Mexico,
S.A. de C.V.
Monti Morelos No. 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco
Tel: (52/36) 31 46 00
Telex: 0684 186 ECOMEX

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 **MEXICO, D.F.**
Tel: (52/5) 596 79 33
Fax: (52/5) 596 42 08 (Ext 3231)

Hewlett-Packard de Mexico,
S.A. de C.V.
Czda. del Valle
409 Ote. 4th Piso
Colonia del Valle
Municipio de Garcia
66220 **NUEVO LEON**
Tel: 83-78-42-40
Telex: 382410 HPMY

Hewlett-Packard Co.
Latin America Region
Customer Support Center
7208 N.W. 31st St.
MIAMI, FL 33122
United States
Tel: (305) 599-0465
Telex: 441603 HPMIAMI
Fax: 599-0277

Hewlett-Packard de Mexico,
S.A. de C.V.
B.V. Independencia No. 2000 Ote.
Ote Zerpiso
Co 1 Estrella
27010 **TORREON, COA.**
Tel: (52/171) 8 22 01

MOROCCO

Sicotel
Complexe des Habous
Tour C, avenue des Far
CASABLANCA 01
Tel: 31 22 70
Telex: 27604

R.T.I.
175, Rue Blomet
75015 Paris
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18
Socofren Maroc
164, Boulevard D' Anfa
CASABLANCA
Tel: 38 08 84, 36 01 77
Telex: 23940

NETHERLANDS

Hewlett-Packard Nederland
Starbaan 16
1187 XR **AMSTELVEEN**
Tel: (31/20) 54769 11
Telex: 13 216 HEPA NL
Fax: (31/20) 471825

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2900AA CAPELLE A/D IJSEL
Tel: 31-20-51-6444
Telex: 21261 HEPAC NL

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: 31-40-32-6911
Telex: 51484 hepae nl
Fax: (31/40) 446546

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: (64/9) 605-651
Fax: (64/9) 600-507

Hewlett-Packard (N.Z.) Ltd.
186-190 Willis Street
P.O. Box 9443
WELLINGTON
Tel: (64/4) 820-400
Fax: (64/4) 843-380

NIGER

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
PO Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

NIGERIA

Management Information Systems Ltd.
3 Gerrard Road, Ikoji
LAGOS
Tel: 68 08 87
Telex: 23582
Fax: 68 54 87

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norway A/S
Oesterrndalen 16-18
P.O. Box 34
N-1345 OESTERAAAS
Tel: (47/2) 24-6090
Telex: 76621 HPNAS N

Hewlett-Packard Norway A/S
Boemertgt. 42
Box 2470
N-5037 SOLHEIMSVIK
Tel: (5/29) 10 72

OMAN

Suhail & Saud Bahwan
P.O. Box 169

MUSCAT/SULTANATE OF OMAN
Tel: 79 37 41
Telex: 3585 mb
Fax: 79 61 58

Imtac LLC
P.O. Box 9196

MINA AL FAHAL/SULTANATE OF OMAN
Tel: 70-77-27, 70-77-23
Telex: 3865 Tawoos On

PAKISTAN

Mushko & Company Ltd.
House No. 16, Street No. 16
Sector F-6/3
ISLAMABAD
Tel: 824545
Telex: 54001 Muski PK
Cable: FEMUS Islamabad

Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi

PANAMA

Electronico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929

PANAMA CITY
Tel: 9-011-507-636613
Telex: 368 3483 ELECTRON PG

PERU

Cia Electro Médica S.A. (ERMED)
Los Flamencos 145, Ofc. 301/2
San Isidro
Casilla 1030
LIMA 1 Peru
Tel: 9-011-511-4-414325, 41-3705
Telex: 39425257 PE PB SIS

PHILIPPINES

The Online Advanced Systems Corp.
2nd Floor, Electra House
115-117 Esteban Street
P.O. Box 1510
Legaspi Village, Makati
Metro MANILA
Tel: 815-38-10 (up to 15)
Telex: 63274 ONLINE PN

PORTUGAL

Mundinter Intercambio
Mundial de Comercio
Avenida Antonio 2761
LISBON
Tel: 53 21 31, 53 21 37
Telex: 16691

CPC Instrumentacao
Torre de Santo Antonio
rue Gregorio Lopes, Lote
Resteio
1400 LISBON
Tel: 617343/44/45/46
Telex: 27432/26054
Fax: 617345

C. P.C.S.I.
Rua de Costa Cabral 575
4200 PORTO
Tel: 493122
Telex: 26054, 27432
Fax: 48 87 21

PUERTO RICO

Hewlett-Packard Puerto Rico
Box 4048
Aguadilla, PR 00605
Tel: (809) 891-5235

Hewlett-Packard Puerto Rico
101 Munoz Rivera Avenue
Esu. Calle Ochoa
HATO REY, 00918
Tel: (809) 754-7800

QATAR

Qatar Datamation Systems
P.O. Box 350
DOHA
Tel: 41 32 82
Tlx: 4833
Fax: 42 63 78

REUNION ISLAND

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (33/1) 45310906
Telex: 42/203376

RWANDA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (33/1) 45310906
Telex: 42/203376
Fax: (1) 45 31 09 18

SAUDI ARABIA

Modern Electronics Establishment
P.O. Box 281
Thuobah
AL-KHOBAR 31952
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR

Modern Electronics Establishment
P.O. Box 1228
Redac Plaza, 6th Floor
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH

Modern Electronics Establishment
P.O. Box 22015
RIYADH 11495
Tel: 4763030
Telex: 402040 MEERYD SJ

SCOTLAND

See United Kingdom

SENEGAL

25C
10, rue Tolbiac
B.P. 3716
DAKAR R.P.
(Please contact R.T.I. France.)
Tel: (221) 222248
Telex: 906/671

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: 45310906
Telex: 203376
Fax: (1) 45 31 09 18

SINGAPORE

Hewlett-Packard Singapore Ltd.
1150 Depot Road
SINGAPORE, 0410
Tel: (65) 273 7388
Fax: (65) 278 8990

SOUTH AFRICA

Hi Performance Systems (Pty.) Ltd.
P.O. Box 120, Howard Place
CAPE TOWN 7450
Tel: (27/21) 53-7954
Fax: (27/21) 53-5119

Hi Performance Systems (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: (27/11) 802-5111
Fax: (27/11) 802-6332

SPAIN

Hewlett-Packard Española, S.A.
Avda. Diagonal, 605
08028-BARCELONA
Tel: (34/3) 401 91 00
Telex: 52603 hpbee
Bilbao (Vizcaya) Sales
Hewlett-Packard Español, S.A.
Avda. Zugazarte, 8
48930 - Las Arenas - VIZCAYA

Hewlett-Packard Española, S.A.
Ctra. N-VI, Km. 16, 500
Las Rozas
E-MADRID
Tel: (34/1) 6370011
Telex: 23515 HPE

Hewlett-Packard Española, S.A.
Avda. S. Francisco Javier, S/N
Planta 10, Edificio Sevilla 2
E-SEVILLA 5, SPAIN
Tel: (34/54/64) 4454
Telex: 72933

Hewlett-Packard Española, S.A.
Isabel La Católica, 8
46004 VALENCIA
Tel: (34/6) 351 59 44
Telex: 63435
Fax: (34/6) 351 59 44

Hewlett-Packard Española, S.A.
Avda. de Zugazarte, 8
48930 - Las Arenas
VIZCAYA
Tel: (34/4) 464 32 55
Telex: 33032

SUDAN

Mediterranean Engineering &
Trading Co., Ltd.
P.O. Box 1025
KHARTOUM
Tel: (249) 41184
Telex: 24052

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

SWEDEN

Hewlett-Packard Sverige AB
Östra Tullgatan 3
20011 MALMÖ
Box 6132
Tel: (46/40) 702 70
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB
Elementvagen 16
S-7022 7 ÖREBRO
Tel: (49/19) 10 48 80
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
P.O. Box 19
S-16493 KISTA
Tel: 46/8/750-200
Telex: (854) 17886
Telefax: (08) 7527781

Hewlett-Packard Sverige AB
Box 266
Topasgatan 1A
S-42123 VÄSTRA-FROLUNDA
(Gothenburg)
Tel: (031) 891000
Telex: (854) 17886 (via Spånga office)

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (41/61) 681 59 20
Fax: (41/61) 681 98 59

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365-1366
CH-1217 YVERIN 1
Tel: (41/22) 7804111
Telex: 27333 HPAG CH

Hewlett-Packard (Schweiz) AG
Allmend
CH-8967 WIDEN
Tel: (41/57) 321 111
Telex: 53933 HPAG CH
Fax: (41/57) 321 475

SYRIA

Middle East Electronics
P.O. Box 2308
Abu Rumaneh
DAMASCUS
Tel: 33 45 92
Telex: 411 771 Meesy

TAIWAN

Hewlett-Packard Taiwan Ltd.
Taipei Office
8th Floor, Hewlett-Packard Building
337 Fu Hsing North Road

TAIPEI

Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei

Hewlett-Packard Taiwan Ltd.
THM Office
2, Huan Nan Road
CHUNG LI, Taoyuan
Tel: (034) 929-666

SALES OFFICES

Arranged alphabetically by country (cont'd)

TAIWAN (Cont'd)

Hewlett-Packard Taiwan Ltd.
Taichung Office
5FL, 67, Sec. 3,
Wen-Hsin Road,
TAICHUNG
Tel: (04) 254-1201

Hewlett-Packard Taiwan Ltd.
Kaohsiung Office
11/F, 456, Chung Hsiao 1st Road
KAOSHIUNG
Tel: (07) 2412318

TANZANIA

Adcom Ltd. Inc. Kenya
P.O. Box 30070

NAIROBI

Kenya
Tel: 33 19 55
Telex: 22639

THAILAND

Unimesa Co. Ltd.
2540 Sukumvit Avenue
Bangna
BANGKOK 10260
Tel: 662-398-6953
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok

TOGO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

Societe Africaine De Promotion
Immeuble Sageb
Rue d'Atakpame
P.O. Box 4150
LOME
Tel: 21-62-88
Telex: 5357

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
Corner McAllister Street &
Eastern Main Road, Laventille
P.O. Box 732
PORT-OF-SPAIN
Tel: 624-4213
Telex: 22561 CARTEL WG
Cable: CARTEL, PORT OF SPAIN

Computer and Controls Ltd.
P.O. Box 51
1 Taylor Street
PORT-OF-SPAIN
Tel: (809) 622-7719/622-7985
Telex: 38722798 COMCON WG
LOGOO AGENCY 1264

TUNISIA

Precision Electronique
5, rue de Chypre
Mutuelleville
1002 TUNIS BELVEDERE
Tunisia
Tel: 78 50 37
Tlx: 13238

TURKEY

E.M.A.H.
Mediha Eldem Sokak No. 41/6
Yenisehir
ANKARA
Tel: 131 4695, 131 9175
Telex: 46912n emsrst
Cable: EMATRADE ANKARA

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S. (Headquarter)
Mesrutiyet Mah. 19 Mayıs Cad.
Nova-Baran Plaza Kat: 11-12
SISLI / ISTANBUL
Tel: 175 29 70
Telex: 39150
Fax: 175 29 92

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S.
Paris Caddesi No 3
Diare 9
06670 ANKARA
Tel: 125 83 13
Telex: 46180
Fax: 125 47 45

UGANDA

Adcom Ltd. Inc. Kenya
P O Box 30070
NAIROBI
Kenya
Tel: 33 19 55
Telex: 22639

**UNITED ARAB
EMIRATES**

Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: 591181
Telex: 48710 EMITAC EM
Cable: EMITAC SHARJAH

Emitac Ltd.
P.O. Box 2711
ABU DHABI
Tel: 8204 19-20
Cable: EMITACH ABUDHABI

Emitac Ltd.
P.O. Box 8391
DUBAI
Tel: 377591

Emitac Ltd.
P.O. Box 473
RAS AL KHAIMAH
Tel: 28133, 21270

UNITED KINGDOM**ENGLAND**

Hewlett-Packard Ltd.
Customer Information Centre
King St. Lane
Winnersh, Wokingham
GB-BERKSHIRE RG11 5AR
Tel: (44/734) 784774
Telex: 847178
Fax: 777285

Hewlett-Packard Ltd.
Miller House
The Ring, **BRACKNELL**
Berkshire RG12 1XN
Tel: (44/344) 424-898
Fax: (44/344) 860015, Ext 56023

Hewlett-Packard Ltd.
Customer Sales & Support
Building 1, Filton Road
Stoke Gifford
BRISTOL, BS12 6QZ
Tel: (44/272) 236000

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 44-272-736 806
Telex: 444302

Hewlett-Packard Ltd.
9 Bridewell Place
LONDON EC4V 6BS
Tel: (44/583) 6565
Fax: (44/583) 6565, Ext 4713

Hewlett-Packard Ltd.
Heathside Park Rd.
Cheadle Heath, Stockport
GB-MANCHESTER SK3 ORB,
Tel: (44/61) 428-0828
Telex: 668088
Fax: 4955009

Hewlett-Packard Ltd.
Harman House
No. 1 George St.
Uxbridge,
GB-MIDDLESEX UB8 1YH
Tel: (44/895) 72020
Telex: 893135
Fax: 73684

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON,
West Yorkshire WF6 1RN
Tel: (44/924) 895-566
Fax: (44/924) 896-691
Telex: 557355

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 44-737-686-55
Telex: 947234

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, **SOLIHULL**, West Midlands
B90 4BL
Tel: 44-21-745-8800
Telex: 339105

Hewlett-Packard Ltd.
Heathside Park Road
Cheadle Heath, Stockport
Cheshire **SK3 ORB**
Tel: (44/61) 428-0828
Fax: (44/61) 495-5009
Telex: 668068

Hewlett-Packard Ltd.
Harman House
No. 1 George Street
UXBRIDGE, Middlesex UB8 1YH
Tel: (44/895) 72020
Fax: (44/895) 73684

Hewlett-Packard Ltd.
King Street Lane
Winnersh, **WOKINGHAM**
Berkshire RG11 5AR
Tel: (44/734) 784774
Fax: (44/734) 777285 Ext 52285

NORTHERN IRELAND

Hewlett-Packard (Ireland) Ltd.
Carrickfergus Industrial Centre
75 Belfast Road, Carrickfergus
CO. ANTRIM BT38 8PM
Tel: 09603 67333

Unit 5
Bridgewood House
Newforge Lane
Malone Road
BELFAST BT95 NW
Tel: (353/232) 664-851
Fax: (353/232) 665-619

SCOTLAND

Hewlett-Packard Ltd.
1/3 Springburn Place
College Milton North
EAST KILBRIDE, G74 5NU
Tel: 035-52-49261
Fax: 03552-35929
Telex: 779615

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031-331-1188
Fax: 031-331-7412

UNITED STATES

Hewlett-Packard Co.
Customer Information Center
Tel: (800) 752-0900
Hours: 6:00 AM to 5:00 PM
Pacific Time

Alabama

Hewlett-Packard Co.
2100 Riverchase Center
Building 100 - Suite 118
BIRMINGHAM, AL 35244
Tel: (205) 988-0547
Fax: (205) 988-5308

Hewlett-Packard Co.
620 Discovery Dr.
HUNTSVILLE, AL 35806
Tel: (205) 830-2000
Fax: (205) 830-1427

Alaska

Hewlett-Packard Co.
4000 Old Seward Highway
Suite 101
ANCHORAGE, AK 99503
Tel: (907) 563-8855
Fax: (907) 561-7409

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
Fax: (602) 273-8080

Hewlett-Packard Co.
3400 East Britannia Dr.
Bldg. C, Suite 124
TUCSON, AZ 85706
Tel: (602) 573-7400
Fax: (602) 573-7429

Arkansas

Hewlett-Packard Co.
10816 Executive Center Dr
Conway Bldg. Suite 118
LITTLE ROCK, AR 72211
Tel: (501) 225-7178
Fax: (501) 221-3614

California

Hewlett-Packard Co.
26701 W. Argoura Rd.
CALABASAS, CA 91302
Tel: (818) 880-3400
Fax: (818) 880-3437

Hewlett-Packard Co.
353 Lakeside Dr
FOSTER CITY, CA 94404
Tel: (415) 378-8400
Fax: (415) 378-8405

Hewlett-Packard Co.
1907 North Gateway Blvd.
FRESNO, CA 93727
Tel: (209) 252-9652
Fax: (209) 456-9302

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700
Fax: (714) 778-3033

Hewlett-Packard Co.
7408 Hollister Ave. #A
GOLETA, CA 93117
Tel: (805) 685-6100
Fax: (805) 685-6163

Hewlett-Packard Co.
9800 Muirlando Ave.
IRVINE, CA 92718
Tel: (714) 472-3000
Fax: (714) 581-3607 (Direct Dial only)

Hewlett-Packard Co.
2525 Grand Avenue
LONG BEACH, CA 90815
Tel: (213) 498-1111
Fax: (213) 494-1986

Hewlett-Packard Co.
5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Fax: (213) 337-8338

Hewlett-Packard Co.
321 E. Evelyn Ave.
Bldg. 330
MOUNTAIN VIEW, CA 94039
Tel: (415) 694-2000
Fax: (415) 694-0600

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600
Fax: (818) 505-5875

Hewlett-Packard Co.
5725 W. Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
Fax: (415) 460-0713

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
Fax: (916) 927-7152

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200
Fax: (619) 268-8487

Hewlett-Packard Co.
50 Fremont St., Suite 200
SAN FRANCISCO, CA 94105
Tel: (415) 882-6800
Fax: (415) 882-6805

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Fax: (408) 988-7103

Hewlett-Packard Co.
5280 Valentine Rd., Suite 205
VENTURA, CA 93003
Tel: (805) 658-6898
Fax: (805) 650-0721

Colorado

Hewlett-Packard Co.
2945 Center Green Court South
Suite A
BOULDER, CO 80301
Tel: (303) 938-3065
Fax: (303) 938-3025

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
Fax: (303) 649-5787

Connecticut

Hewlett-Packard Co.
3 Parkland Dr.
DARIEN, CT 06820
Tel: (203) 656-0040
Fax: (203) 656-5563

Hewlett-Packard Co.
115 Glastonbury Blvd
GLASTONBURY, CT 06033
Tel: (203) 633-8100
Fax: (203) 659-6087

Florida

Hewlett-Packard Co.
5900 N. Andrews, Suite 100
FORT LAUDERDALE, FL 33309
Tel: (305) 938-9800
Fax: (305) 938-2293

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 636-9955
Fax: (904) 636-9955

Hewlett-Packard Co.
255 East Drive, Suite B
MELBOURNE, FL 32901
Tel: (407) 729-0704
Fax: (407) 723-4557

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (407) 859-2900
Fax: (407) 826-9309

Hewlett-Packard Co.
4700 Bayou Blvd.
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
Fax: (904) 476-4116

Hewlett-Packard Co.
5550 Idiewild, #150
TAMPA, FL 33634
Tel: (813) 884-3282
Fax: (813) 889-4445

Georgia

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Fax: (404) 980-7669

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
MORCROSS, GA 30092
Tel: (404) 448-1894
Fax: (404) 246-5206

Hawaii

Hewlett-Packard Co.
Pacific Tower
1001 Bishop St.
Suite 2400
HONOLULU, HI 96813
Tel: (808) 526-1555
Fax: (808) 536-7873

Idaho

Hewlett-Packard Co.
11309 Chinden Blvd.
BOISE, ID 83714
Tel: (208) 323-2700
Fax: (208) 323-2528

Illinois

Hewlett-Packard Co.
2205 E. Empire St.
BLOOMINGTON, IL 61704
Tel: (309) 662-9411
Fax: (309) 662-0351

Hewlett-Packard Co.
525 W. Monroe St., Suite 1308
CHICAGO, IL 60606
Tel: (312) 930-0010
Fax: (312) 930-0986

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (312) 357-8800
Fax: (312) 357-9896

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60006
Tel: (312) 255-9800
Fax: (312) 259-5878

Indiana

Hewlett-Packard Co.
1911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
Fax: (317) 843-1291

Hewlett-Packard Co.
111 E. Ludwig Road
Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4263
Fax: (219) 482-9907

Iowa

Hewlett-Packard Co.
4050 River Center Court
CEDAR RAPIDS, IA 52402
Tel: (319) 393-0606
Fax: (319) 378-1024

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
Fax: (515) 224-1870

Kansas

Hewlett-Packard Co.
North Rock Business Park
3450 N. Rock Rd.
Suite 300
WICHITA, KS 67226
Tel: (316) 636-4040
Fax: (316) 636-4504

Kentucky

Hewlett-Packard Co.
305 N. Hurstbourne Lane,
Suite 100
LOUISVILLE, KY 40222
Tel: (502) 426-0100
Fax: (502) 426-0322

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
Fax: (504) 467-4100 x 291

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Fax: (301) 362-7650

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
Fax: (301) 948-5986

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (508) 682-1500
Fax: (508) 794-2619

Hewlett-Packard Co.
29 Burlington Mall Rd.
BURLINGTON, MA 01803-4514
Tel: (617) 270-7000
Fax: (617) 221-5240

Michigan

Hewlett-Packard Co.
3033 Orchard Vista S.E.
GRAND RAPIDS, MI 49546
Tel: (616) 957-1970
Fax: (616) 956-9022

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-8200
Fax: (313) 349-9240

Hewlett-Packard Co.
560 Kirts Rd.
Suite 101
TROY, MI 48064
Tel: (313) 362-5180
Fax: (313) 362-3028

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
Fax: (612) 641-9787

Mississippi

Hewlett-Packard Co.
800 Woodland Parkway, Suite 101
RIDGELAND, MS 39157
Tel: (601) 957-0730
Fax: (601) 957-2515

Missouri

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Hewlett-Packard Co.
6601 Winchester Ave.
KANSAS CITY, MO 64133
Tel: (816) 737-0071
Fax: (816) 737-4690

Montana

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MT 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Nebraska

Hewlett-Packard
11826 Nicholas St.
OMAHA, NE 68154
Tel: (402) 493-0300
Fax: (402) 493-4334

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 599-5000
Fax: (201) 599-5382

Hewlett-Packard Co.
10 Sylvan Way
PARSIPPANY, NJ 07054
Tel: (201) 682-4000
Fax: (201) 682-4031

Hewlett-Packard Co.
20 New England Av.
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
Fax: (201) 562-6246

New Mexico

Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
Fax: (505) 823-1243

Hewlett-Packard Co.
1362-C Trinity Dr.
LOS ALAMOS, NM 87544
Tel: (505) 662-6700
Fax: (505) 662-4312

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Fax: (518) 458-1550 x 0393

Hewlett-Packard Co.
130 John Muir Dr.
AMHERST, NY 14228
Tel: (716) 689-3003
Fax: (716) 636-7034

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
Fax: (716) 223-6331

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
Fax: (315) 451-1820 x 255

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 7th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
Fax: (212) 330-6967

Hewlett-Packard Co.
2975 Westchester Ave
PURCHASE, NY 10577
Tel: (914) 935-6300
Fax: (914) 935-6487

Hewlett-Packard Co.
Executive Square Office Bldg.
66 Middlebush Rd.
WAPPINGERS FALLS, NY 12590
Tel: (914) 298-9125
Fax: (914) 298-9154

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800
Fax: (516) 682-7806 (2)

North Carolina

Hewlett-Packard Co.
305 Gregson Dr.
CARY, NC 27511
Tel: (919) 467-6600
Fax: (919) 460-2296
(919) 460-2297

Hewlett-Packard Co.
P.O. Box 240318
CHARLOTTE, NC 28224
Tel: (704) 527-8780
Fax: (704) 523-7857

Hewlett-Packard Co.
7029 Albert Pick Rd. #100
GREENSBORO, NC 27409
Tel: (919) 665-1800
Fax: (919) 668-1787

Mailing Address
PO Box 26500
Greensboro, NC 27426

Ohio

Hewlett-Packard Co.
2717 S. Arlington Rd.
AKRON 44312
Tel: (216) 644-2270
Fax: (216) 644-7415

Hewlett-Packard Co.
4501 Erskine Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
Fax: (513) 891-0033

SALES OFFICES

Arranged alphabetically by country (cont'd)

UNITED STATES (Cont'd)

Hewlett-Packard Co.
Moutroffe West Ave.
COPLEY, OH 44321
Tel: (216) 666-7711
Fax: (216) 666-6054

Hewlett-Packard Co.
7887 Washington Village Dr.
DAYTON, OH 45459
Tel: (513) 433-2223
Fax: (513) 433-8633

Hewlett-Packard Co.
9080 Springboro Pike
MIAMISBURG 45342
Tel: (513) 433-2223
Fax: (513) 433-3633

Hewlett-Packard Co.
15885 Sprague Road
STRONGSVILLE, OH 44136
Tel: (216) 243-7300
Fax: (216) 234-7230

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
Fax: (419) 241-7655

Hewlett-Packard Co.
675 Brookside Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344
Fax: (614) 891-1476

Oklahoma
Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
Fax: (405) 942-2127

Hewlett-Packard Co.
6655 South Lewis,
Suite 105
TULSA, OK 74136
Tel: (918) 481-6700
Fax: (918) 481-2250

Oregon
Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-9000
Fax: (503) 682-8155

Pennsylvania
Hewlett-Packard Co.
Heatherwood Industrial Park
50 Dorchester Rd.
P.O. Box 6080
HARRISBURG, PA 17112
Tel: (717) 657-5900
Fax: (717) 657-5946

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
Fax: (412) 963-1300

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
Fax: (215) 666-2034

South Carolina
Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29212
Tel: (803) 732-0400
Fax: (803) 732-4567

Hewlett-Packard Co.
545 N. Pleasantburg Dr.
Suite 100
GREENVILLE, SC 29607
Tel: (803) 232-8002
Fax: (803) 232-8739

Tennessee
Hewlett-Packard Co.
One Energy Center Suite 200
Pelissippi Pkwy.
KNOXVILLE, TN 37932
Tel: (615) 966-4747
Fax: (615) 966-8147

Hewlett-Packard Co.
889 Ridge Lake Blvd.,
Suite 100
MEMPHIS, TN 38119
Tel: (901) 763-4747
Fax: (901) 762-9723

Hewlett-Packard Co.
44 Vantage Way,
Suite 150
NASHVILLE, TN 37228
Tel: (615) 255-1271
Fax: (615) 726-2310

Texas
Hewlett-Packard Co.
9050 Capital of Texas Highway, North
#290
AUSTIN, TX 78759
Tel: (512) 346-3855
Fax: (512) 338-7201
Mailing Address
PO Box 9431
Austin, TX 78766-9430
Hewlett-Packard Co.
5700 Cromo Dr
EL PASO, TX 79912
Tel: (915) 833-4400
Fax: (915) 581-8097

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
Fax: (713) 776-6495

Hewlett-Packard Co.
3301 West Royal Lane
IRVING, TX 75063
Tel: (214) 869-3377
Fax: (214) 830-8951

Hewlett-Packard Co.
109 E. Toronto, Suite 100
MCALLEN, TX 78503
Tel: (512) 630-3030
Fax: (512) 630-1355

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
Fax: (214) 699-4337

Hewlett-Packard Co.
14100 San Pedro Ave., Suite 100
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
Fax: (512) 491-1299

Utah
Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
Fax: (801) 974-1780

Virginia
Hewlett-Packard Co.
840 Greenbrier Circle
Suite 101
CHESAPEAKE, VA 23320
Tel: (804) 424-7105
Fax: (804) 424-1494

Hewlett-Packard Co.
4401 Water Front Dr.
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
Fax: (804) 965-9297

Hewlett-Packard Co.
2800 Electric Road Suite 100
ROANOKE, VA 24018
Tel: (703) 774-3444
Fax: (703) 989-8049

Washington
Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
Fax: (206) 643-8748

Hewlett-Packard Co.
N. 1225 Argonne Rd
SPOKANE, WA 99212-2657
Tel: (509) 922-7000
Fax: (509) 927-4236

West Virginia
Hewlett-Packard Co.
501 56th Street
CHARLESTON, WV 25304
Tel: (304) 925-0492
Fax: (304) 925-1910

Wisconsin
Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 5300F
Tel: (414) 792-8600
Fax: (414) 792-0218

URUGUAY
Pablo Ferrando S.A.C. e.l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 59-82-802-586
Telex: 398802586

Olympia de Uruguay S.A.
Maquinas de Oficina
Avda. del Libertador 1997
Casilla de Correos 8644
MONTEVIDEO
Tel: 91-1809, 98-3807
Telex: 6342 OROU UY

VENEZUELA
Analytical Supplies, CA
Quinta #103 Impermes
Av El Centro
Los Chorros
Apartado 75472
CARACAS
Tel: 364804, 2394047
Telex: 26274 CABIC
Hewlett-Packard de Venezuela C.A.
Residencias Tia Betty Local 1
Avenida 3 Y con Calle 75
MARACAIBO, Estado Zulia
Apartado 2646
Tel: 586175669
Telex: 62464 HPMAR

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433

Do Hermes
Celovska 73
YU-61000 LJUBLJANA
Tel: (061) 543 170
Telex: 31583

ZAIRE

C.I.E.
Computer & Industrial Engineering
25 Ave. de la Justice Gombe
Boite Postale 10976
KINSHASA
Tel: 32 063, 32 633, 28 251
Telex: 21552
Fax: 22 850

ZAMBIA

R.J. Tilbury (Zambia) Ltd.
P.O. Box 32792
LUSAKA
Tel: 21 55 80
Telex: 40128

ZIMBABWE

Field Consolidated (Private) Ltd.
Systron Division
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Tel: 73 98 81
Telex: 26241
Fax: 70 20 08

Please send directory corrections to:
Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

September 1989