


SERVICE MANUAL

SERIAL PREFIX: 1210

This Service Manual applies to HP Model 7210A
Digital Plotters having the Serial Prefix 1210.

HEWLETT-PACKARD 7210A DIGITAL PLOTTER

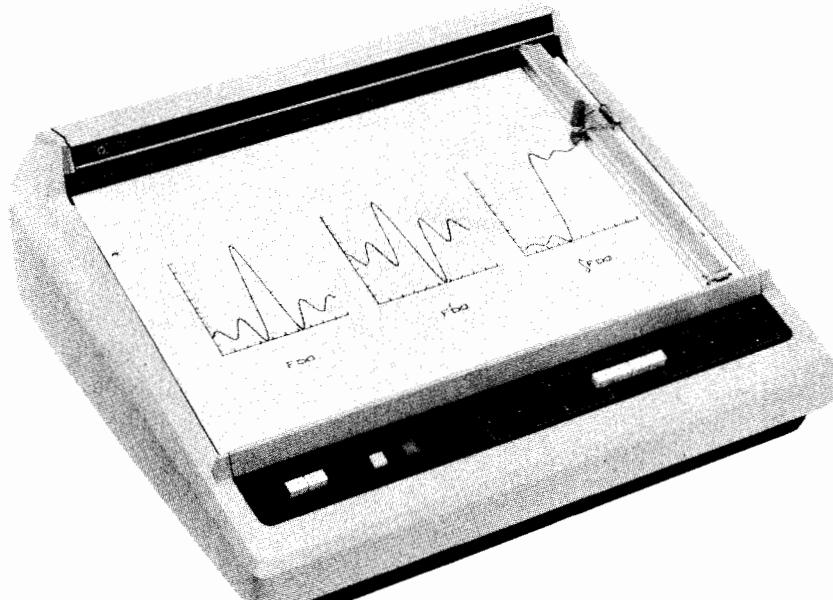

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

TABLE OF CONTENTS

CHAPTER 1: INTRODUCTION	
Scope of the Manual	1-1
Service Concept	1-1
Model—Manual Information	1-1
Manual Change	1-1
Manual Content	1-1
CHAPTER 2: THEORY OF OPERATION	
Positioning Technique	2-1
Profiling	2-1
Input Data Range	2-2
Numerical Code	2-2
Coordinate Systems	2-3
Error Sequence	2-3
Overscale Sequence	2-4
Transfer Lines	2-5
Transfer Cycle	2-5
Command Lines	2-7
Status Lines	2-9
CHAPTER 3: MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS	
Environmental Operation	3-1
Cleaning	3-1
Potentiometer Cleaning	3-2
Lubrication	3-3
Visual Inspection	3-3
Test Equipment	3-4
Test Plot	3-4
Diagnostic Testing	3-4
Test Equipment	3-5
System Check	3-5
Performance Verification Plots	3-8
General Disassembly	3-9
Removal of Carriage Arm	3-10
Removal of Pen Carriage	3-11
Wiper Replacement (Y – Axis)	3-12
Wiper Replacement (X – Axis)	3-14
Potentiometer Replacement (Y – Axis)	3-14
Potentiometer Replacement (X – Axis)	3-15
Y–Axis Restranging	3-16
X–Axis Restranging	3-17
Y Cable Tension Check	3-20
Y Cable Tension Adjustment	3-20
X Cable Tension Check	3-20
X Cable Tension Adjustment	3-20
X Drive Belt Tension Check	3-20
X Drive Belt Tension Adjustment	3-21
X Drive Belt Replacement	3-21
X Drive Bearing Replacement	3-22
Y–Axis Pen Carriage Adjustment	3-27

TABLE OF CONTENTS

CHAPTER 3: MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS (continued)	
Y-Axis Backlash Adjustment	3-27
X Gear Train Backlash Adjustment	3-28
X-Axis Track Bearing Adjustment	3-28
Y-Axis Alignment	3-29
X-Axis Alignment	3-29
Input Power Circuit	3-30
Power Supply Filter	3-31
Power Supply Voltage	3-31
Instrument Status	3-32
Stand-By Circuit Test	3-32
Manual Pen Control	3-32
Lower Left Control	3-32
Upper Right Control	3-33
Limit Switch Check	3-33
Instrument Status	3-33
Servo Compensation Adjustment	3-34
DAC Alignment	3-34
X Offset Adjustment	3-34
Y Offset Adjustment	3-35
Y-Deadband Adjustment	3-35
X-Deadband Adjustment	3-35
Y-Gain Adjustment	3-36
CHAPTER 4: MECHANICAL PARTS LISTS	
Ordering Information	4-1
Parts List	4-2
CHAPTER 5: TROUBLESHOOTING	
Content	5-1
Requirements	5-1
Troubleshooting Chart	5-1
APPENDIX A: MNEMONICS GLOSSARY	A-1
APPENDIX B: LOGIC CIRCUIT	B-1
APPENDIX C: SCHEMATICS & ELECTRICAL PARTS LISTS	C-1
ILLUSTRATIONS	
1. Instrument Identification	1-1
2. Block Diagram, Model 9862A	2-1
3. Performance Profile	2-2
4. Absolute Mode	2-3
5. Transfer Cycle	2-6
6. Rear Connector Pin Connections	2-8
7. Autogrip Lead Removal	3-37
8. Slidewire Cleaning	3-37
9. Slidewire Lubrication	3-37
10. First Performance Verification Plot	3-37
11. Second Performance Verification Plot	3-37
12. Y Slidewire Cover Removal	3-37
13. Slidewire Lead Connections	3-37
14. Carriage Arm Removal	3-37

TABLE OF CONTENTS

15. X and Y Axis Restrining	3-37
16. Worst Case Acceptable Alignment (X-Axis and Y-Axis)	3-37
17. Pen Carriage Adjustment	3-37
18. Wiper Protection	3-37
19. Y-Axis Drive String Tension Check	3-39
20. X-Axis Cable Tightening	3-39
21. X-Axis Cable Tension Check	3-39
22. X-Axis Belt Tension Check	3-39
23. X-Axis Gear Train Backlash Adjustment	3-39
24. X-Axis Drive Train Bearing Locations	3-39
25. Y-Axis Gear Train Backlash Adjustment	3-39
26. Y-Axis Motor Clamp Screw	3-39
27. X-Axis Track Bearing Adjustment	3-39
28. Circuit Board Location	3-39
29. XC and YC Adjustment	3-39
30. XOF and YOF Adjustment	3-39
31. X-Axis Drive Assembly	4-5
32. Pen Arm Assembly	4-6
33. Troubleshooting Chart	5-2
34. Timing Diagram	B-2
35. Logic Circuit Diagram	B-3
36. Interface Board	C-2
37. Interface Schematic	C-3
38. ROM Control Board	C-4
39. ROM Control Schematic	C-5
40. Control Flop Board	C-6
41. Control Flop Schematic	C-7
42. Memory Board	C-8
43. Memory Schematic	C-9
44. Time Cycle Board	C-10
45. Time Cycle Schematic	C-11
46. Servo Board	C-12
47. Servo Schematic	C-13
48. DAC Board	C-14
49. DAC Schematic	C-15
50. Rectifier Board	C-16
51. Rectifier Schematic	C-17
52. Power Driver Board	C-18
53. Power Driver Schematic	C-19
54. Mother Board Schematic	C-21
1. Transfer Cycle Times	2-6
2A. Switch Register Settings for Plotter Diagnostic and Test Program	3-7
2B. Halts Generated by Plotter Test and Diagnostic Program	3-8
3. Input Power Circuit Check	3-30
4. Power Supply Filter Check	3-31
5. Power Supply Voltage Check	3-31
6. Parts List	4-2
7. Electrical Parts List	C-23
8. Code List of Manufacturers	C-33

TABLES

INTRODUCTION

The Model 7210A Digital Plotter is an X-Y Plotter intended for use as an output peripheral for computers and computer systems. All Plotter operation in this manual refers to the combination of the computer/computer system and Plotter.

This manual provides the information necessary to provide on-site service on the 7210A Digital Plotter. This manual assumes that the Field Service Engineer has read the 7210A Operating Manual, the appropriate Interface Manual, and is thoroughly familiar with normal 7210A operation. This knowledge is necessary to decide whether a problem is caused by a hardware failure or is a pseudo hardware problem.

The 7210A Digital Plotter is field maintained through the HP Red Stripe Exchange Program. The Red Stripe (rebuilt exchange) Program offers the customer and the HP customer service organization the ability to replace defective assemblies with rebuilt assemblies at minimal cost and minimum time.

This Manual is applicable to the Model 7210A with a serial prefix of 1210. This serial prefix is the first four digits of a two-part, nine-digit serial number (0000A00000) used to identify each HP instrument (see Figure 1). The letter separating the prefix from the suffix identifies the country of origin.

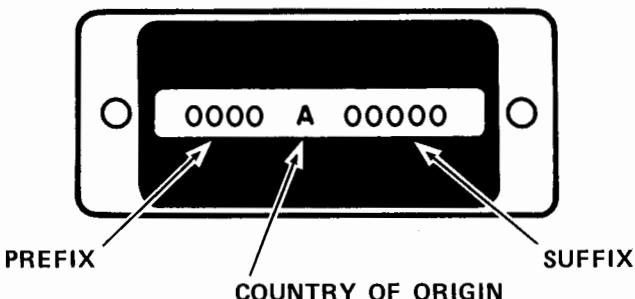


Figure 1. Instrument Identification

Should any change in this manual be necessary, a new serial prefix will be assigned to the changed model and a change sheet will be supplied defining the difference between the changed model and the one described within this manual. Other corrections, due to any errors that existed when this manual was printed, will be provided. These changes are called Errata and will appear only on the change sheet (Manual Change). For additional information pertaining to this manual, or other HP instruments, contact the nearest Hewlett-Packard Sales/Service Office listed in the back of this manual.

This manual contains sections covering theory of operation, maintenance, and troubleshooting. Sufficient information is provided so that all required mechanical maintenance and troubleshooting can be performed. Electrical maintenance and troubleshooting, however, is covered only on a circuit board or module level.

SCOPE OF THE MANUAL

SERVICE CONCEPT

MODEL-MANUAL INFORMATION

MANUAL CHANGE

MANUAL CONTENT

THEORY OF OPERATION

Each pen position within the graph limits is defined either as a unique position or relative to the last position. Either Binary or BCD codes are accepted, with selection under full program control. The computer system defines coordinate points within the graph limits as well as the pen UP/DOWN status. The Plotter produces a graph comprised of straight line segments between the points defined. The graph size is continuously variable from 0 x 0 to 10 x 15 inches (25 x 38 cm).

OPERATIONAL CHARACTERISTICS

The pen X and Y position is controlled by an analog servo loop. The input to the servo is from a set of digital to analog converters (DAC) which are controlled by a digital processor (Figure 2). The processor enables the recorder to draw straight lines between any two points. Calculations are performed by the processor to determine which combination of small X and Y increments (a step out of DAC's) would best correspond with the path of the desired straight line. As the straight line is generated using digital techniques, it is possible to draw any length straight line on the plotting surface. Due to this combination of digital accuracy and analog continuity, all line segments are smooth straight lines independent of their angle.

POSITIONING TECHNIQUE

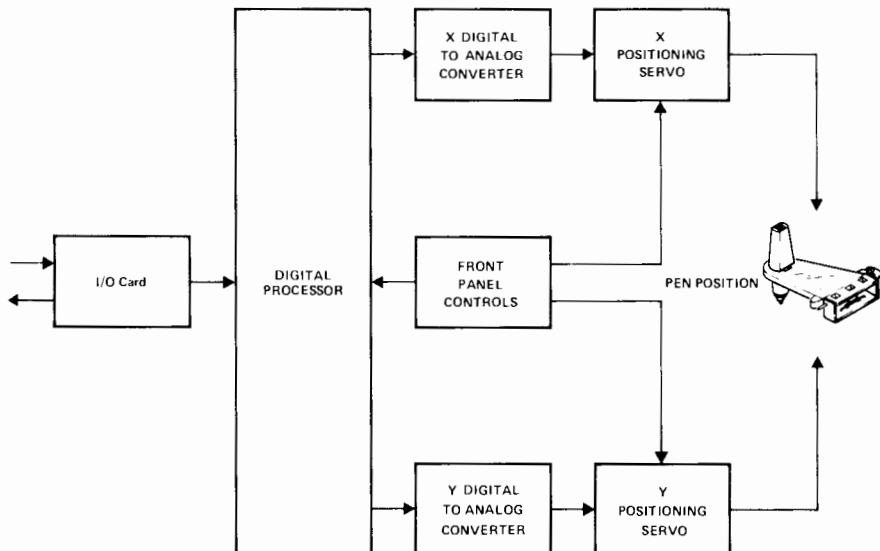


Figure 2. Block Diagram, Model 7210A

A high overall plotting speed is maintained through careful control of pen position, velocity and acceleration. The acceleration characteristic is independent of the move length. As seen in Figure 3, the slewing velocity (10 in./sec) is attained in minimal time, which is approaching the ideal conditions. It is seen in Figure 3 that for the moves which take less than .02 second (.01 second to accelerate and .01 second to decelerate), slewing velocity is not reached. However, the acceleration is the same as that for the 15 in. long move. Hence, by profiling the acceleration and velocity, a high overall plotting speed is realized. A .04 second time delay is added at the end of every position maneuver to allow the servo loop to settle.

PROFILING

THEORY OF OPERATION

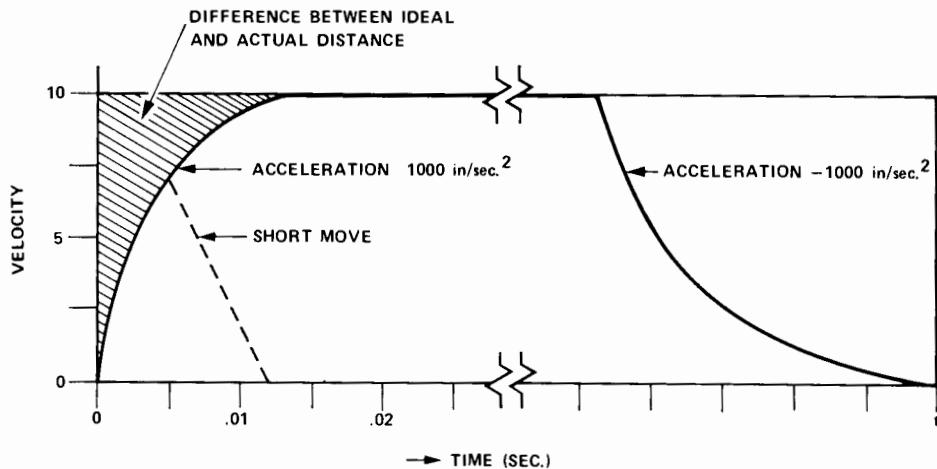


Figure 3. Performance Profile

DIGITAL CAPABILITIES

The pen maneuvers (lift or lower) are given with the position maneuvers. Both are controlled through Command Lines to the Plotter processor. Command lines are discussed on page 2-7.

INPUT DATA RANGE

The 7210A is a first quadrant plotter. Locations on the platen correspond to positive integer values from 0 to 9999. The information input from the computer must have the same magnitude range.

NUMERICAL CODE

The numerical position information is accepted in BCD 8421 or Binary code.

Two methods are used to define coordinate locations on the plotting area. The two methods, selected under full program control, are:

ABSOLUTE COORDINATES — All points on the chart are defined by absolute coordinate pairs allowing the accuracy of each plotted point to be independent of the accuracy of preceding points. Lines can be drawn at any length and at any angle by specifying only the end coordinate.

The plotting surface may be represented as shown in Figure 4. The length of each X and Y axis is divided into 10,000 equally spaced points. Each point corresponds to integer values from 0 to 9999 as shown. Points within the plotting surface are described by ordered pairs of these X and Y values. If the pen is commanded to proceed to Point C (at 7777, 3333) from Point A or B, the results are shown.

COORDINATE SYSTEMS

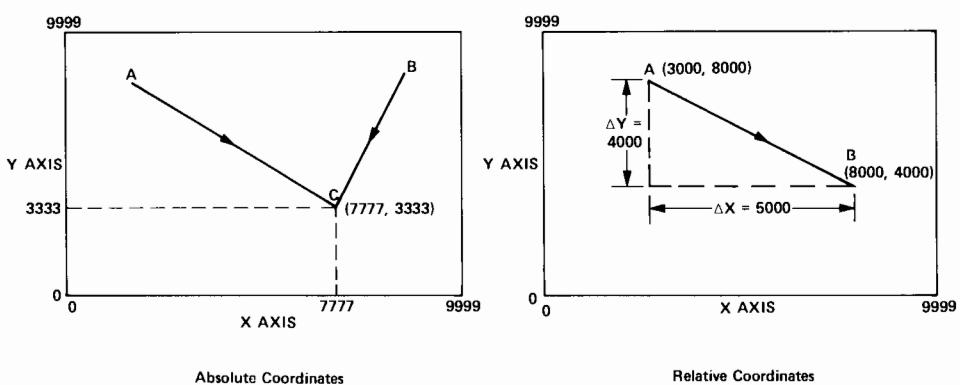


Figure 4. Plotting Modes

RELATIVE COORDINATES – Each new position is defined relative to the last. This mode lends itself nicely to relative position information applications such as character generation or other repetitive operations.

The plotting surface may be represented as shown in Figure 4. With the pen at any Point A, the next pen position is described by the change in the X axis (ΔX) and the change in the Y axis (ΔY). ΔX and ΔY may be positive or negative. In the figure, Point A is (3000, 8000). For ΔX , ΔY equal to 5000, -4000 respectively, the Point B is $(3000 + 5000, 8000 - 4000) = (8000, 4000)$. The path of Point B is a straight line.

This sequence is a subroutine performed by the Plotter to indicate it has received some form of improper excitation. The possible errors that would force the Plotter to resort to this sequence are:

1. Oversized input. This condition may occur when a number greater in magnitude than 9999 is input to the Plotter.
2. Incorrect formatting of input. As described on page 2-5, information input to the Plotter is transmitted in four passes of a particular byte size. The Plotter uses a command line to determine which of the four passes it is receiving. If the Plotter finds this input passing out of sequence, it calls upon the error sequence.

Upon detection of these conditions, the Plotter resorts to an Error Sequence, described as follows:

- A. Remain at the last properly described position.
- B. Lift the pen.
- C. Indicate error on the Format status line and front panel indicator.
- D. Monitor the input lines for the next position input which contains no errors. Perform this maneuver.

ERROR SEQUENCE

THEORY OF OPERATION

ERROR SEQUENCE (continued)

- E. Indicate correct on the Format status line.
- F. Perform a pen maneuver to conform with the last specified pen command.
- G. Continue normal operation.

OVERSCALE SEQUENCE

This sequence is called upon when the numerical position is correct (within the range 0 to 9999), but the plotting surface has been located (through the front panel Lower Left and Upper Right controls) such that the pen position falls off the platen. Numerical information is not in error so the Error Sequence is not called upon; however, it is advantageous to avoid the problems of servo overload, erroneous lines along the margins, and wasted time plotting offscale.

Upon encountering the edge of the platen, a limit switch is activated causing the following sequence:

1. Lift the pen.
2. Place the positioning servos in a low performance condition (clamped condition with 2.5 V maximum on motor) to prevent damage.
3. Indicate set on the clamp status line and front panel error indicator.
4. Continue to perform position maneuvers with pen up, but with a low performance servo. At the end of each maneuver, detect if the pen has come on-scale away from the edge of the platen.

When the pen is moving to a point away from the edge of the platen:

1. Allow additional settling time for pen to assume proper end point with positioning servo in a medium performance condition (clamped condition with 6 V maximum on motor).
2. Replace the positioning servos in a high performance condition (clear the clamp).
3. Indicate "clear" on the clamp status line.
4. Perform a pen maneuver to conform with the last specified pen command.
5. Resume normal operation after 1.3 second total delay.

NOTE

To allow for sufficient settling time after completing either error or overscale sequence, a 1.3 second pause occurs prior to responding to the next input.

THEORY OF OPERATION

INPUT INFORMATION SPECIFICATIONS

The Plotter performs two basic maneuvers: pen maneuvers and position maneuvers. Control of the maneuvers is accomplished by the following Processor Control Lines:

2 Transfer Lines	Transfer Information (Input)
7 Command Lines	Command Information (Input)
8 Data Lines	Data Information (Input)
5 Status Lines	Status Information (Output)

These control lines are all received in negative logic form (+5 volts – logical 0 = False).

The Transfer Lines are called FLAG and CONTROL. The computer and the Plotter use these lines to continuously communicate the status of information being transferred and processed between them. No input line can pass its information to the Plotter without the proper use of the transfer lines. The meaning and use of these lines is defined below in true logic terms:

FLAG A transfer line, originating at the Plotter, which informs the computer when the Plotter has completed all previous instructions and is Ready for more information or is Busy completing previous instructions.

CONTROL A transfer line, originating at the computer, which informs the Plotter when the remaining input lines are settled out and contain valid information. The logical significance of this line at any given time is a function of the FLAG status.

The transfer cycle, Figure 5, has the following stages:

TRANSFER LINES

TRANSFER CYCLE

Stage A

The computer (seeing the Plotter is ready) places new command and data information on the computer control lines which arrives in some form on the Processor Control lines. When the information is settled and valid, Stage A is completed by placing CONTROL in a "read" condition. This signals the Plotter that information is propagating down the input lines. Total time in Stage A is T_a .

Stage B

After some time, T_b (comprised of propagation delays and plotter logic cycle times) the FLAG responds, transiting to a "Busy" condition. The computer then places CONTROL in a "Wait" condition some time T_c after FLAG goes "Busy." After some propagation time T_d the Plotter recognizes CONTROL is in the "Wait" condition, completing Stage B. Since information has propagated over the transfer lines three times, the other Processor Control lines are stable and ready to be read in Stage C.

THEORY OF OPERATION

TRANSFER CYCLE (continued)

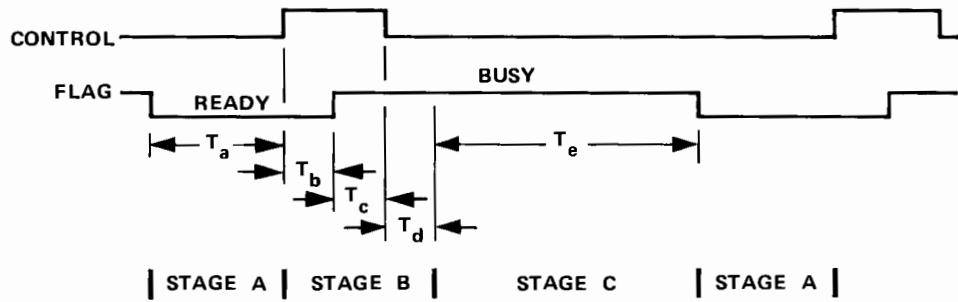


Figure 5. Transfer Cycle

Stage C

The Plotter scans the input lines and performs the prescribed task. After some total time T_e , the task is complete and the FLAG is placed in a "ready" condition. This initiates another Stage A.

The actual time specifications are shown in Table 1.

Table 1. Transfer Cycle Times

Time Period	Minimum	Nominal	Maximum
T_a	0	—	Unlimited
T_b	19 us	—	46 us
T_c	0	—	Unlimited
T_d	13 us	14.5 us	16 us
T_e	1 ms	—	3 sec

THEORY OF OPERATION

COMMAND LINES

Seven commands are defined. The command code (7 bits) is identified as either a pen or a position maneuver. A pen maneuver requires one pass, a position maneuver requires 4 passes. For 12-bit operations, the 7-bit command code lines may be "condensed" to 4 bits by shorting the appropriate lines together in the external connector. The information on the 4 command lines is interpreted differently on subsequent passes according to the command bit assignment.

1. Repertoire

a. SYC – Synchronize (Trailing/Lead = 0/1)

Function Synchronize the first pass of information transmitted on the Processor Control lines with the information received as the first pass by the Plotter.

True Accompanying information on input lines is either the leading or first pass of a pen or position maneuver transmission.

False Accompanying information on input lines is a trailing pass (second, third, or fourth pass) of position maneuver information.

b. MVR – Maneuver (Position/Pen = 0/1)

Function Specify which type of maneuver is to be performed, pen or position. This allows proper interpretation of the accompanying and following data.

True Pen Maneuver.

False Position Maneuver.

c. PNC – Pen Command (Up/Down = 0/1)

Function Specify the pen status when the maneuver (MVR) is pen.

True Pen Down.

False Pen Up.

PNC information is monitored in the first pass of a pen maneuver. If this line becomes open, PNC will indicate pen "Up."

THEORY OF OPERATION

COMMAND LINES (continued)

d. CDE – Code (BCD/Binary = 0/1)

Function Specify which code, BCD or Binary, is to be used to input numerical data.

True Binary Code

False BCD 8421 code

CDE information is monitored during the first pass of a position maneuver. If this line becomes open, CDE will indicate "BCD".

e. MDE – Mode (Absolute/Relative = 0/1)

Function Specify which position mode, Absolute or Relative, is to be used to determine the next pen location.

True Relative Coordinate Mode

False Absolute Coordinate Mode

MDE information is monitored during the fourth pass of a position maneuver. If this line becomes open, MDE will indicate "Absolute".

f. DXS – Delta X Sign (+/- = 0/1)

Function Specify the numerical polarity of the X data for a position maneuver while in Relative mode and BCD code.

True Negative quantity

False Positive quantity

DXS is effectively an extra or 17th bit necessary to carry the sign information of a 16 bit BCD coded number in a Sign and magnitude form. Since in absolute mode only positive integers are necessary, DXS is only used while in Relative mode with BCD code. DXS information is monitored during the second pass of a position maneuver. If the line becomes open, DXS will indicate "+".

g. DYS – Delta Y Sign (+/- = 0/1)

Function Specify the numerical polarity of the Y data for a position maneuver while in Relative mode and BCD code.

True Negative quantity

False Positive quantity

THEORY OF OPERATION

DYS is effectively an extra or 17th bit necessary to carry the sign information of a 16 bit BCD coded number in a Sign and Magnitude form. Since in Absolute mode only positive integers are necessary, DYS is only used while in Relative mode with BCD code.

DYS information is monitored during the fourth pass of a position maneuver. If this line becomes open, DYS will indicate "+".

2. Bit Assignment

All information received by the Plotter is time multiplexed on 15 lines (7 command and 8 data lines) in four passes. An "*" indicates bit not being read on pass.

1st Pass	SYC	MVR	PNC	CDE	MDE *	DXS *	DYS *	$X_H = X_{15} - X_8$
15 Lines								
2nd Pass	SYC *	MVR *	PNC *	CDE *	MDE *	DXS *	DYS *	$X_L = X_7 - X_0$
7 Command Lines								
3rd Pass	SYC *	MVR *	PNC *	CDE *	MDE *	DXS *	DYS *	$Y_H = Y_{15} - Y_8$
↔ 8 Data Lines ↔								
4th Pass	SYC *	MVR *	PNC *	CDE *	MDE	DXS	DYS	$Y_L = Y_7 - Y_0$

When the Plotter recognizes its read cycle is out of phase with the incoming information (not the same pass), it will resort to the Error Sequence. Through monitoring the SYC line, the Plotter determines when the next correct transmission of a pen or position maneuver is to begin; hence, only one data point would be lost if the Plotter and Computer should drop out of phase.

Two status lines, ready and pen, are monitored by the Calculator. All information transmitted on the status lines is in negative logic form (+5 volts = Logical 0 = False).

STATUS LINES

1. RDY – Ready (Not Ready/Ready = 0/1)

Function Indicate to the Calculator when the power in Plotter is on and it is ready to run.

True Ready.

False Not Ready.

THEORY OF OPERATION

STATUS LINES (continued)

If the Plotter is not plugged in, or not turned on, RDY will indicate "Not Ready."

2. PEN — Pen (Up/Down = 0/1)

Function Indicate instantaneous pen status.

True Pen Down.

False Pen Up.

3. SBY — Stand-by (Clear/Muted = 0/1)

Function Indicates when the plotter is in a standby condition due to a "power up" cycle or an inactivated chart hold switch.

True Positioning servos muted (logic still active)

False Positioning servos not muted.

4. CLP — Clamp (Clear/Set = 0/1)

Function Indicate when the plotter positioning servo performance is reduced.

True Clamp set (servo low performance).

False Clamp Clear.

5. FMT — Format (Correct/Error = 0/1)

Function Indicates the format status of the information on the Processor Control lines.

True An error has been detected and a complete correct format has not been received since the error.

False Format correct.

INTERFACE

- Electrical Levels TTL, DTL compatible
- Logic Levels All information is negative logic form.
1 = 0V = True
0 = +5V = False
- Data Format 12- or 15-bit word (4- or 7-bit command followed by 8-bit data).

THEORY OF OPERATION

An internal board interfaces the Calculator to the Plotter. Figure 6 defines the rear panel connector pin assignments as well as the information in each pass. An asterisk (*) in a bit position indicates it is not monitored and is then a "don't care" condition.

PLOTTER CONNECTOR PIN	FUNCTION			
A	Data Bit 0		O	O
B	Data Bit 1	O	A	B
C	Data Bit 2	C	O	D
D	Data Bit 3		E	O
E	Data Bit 4	O		F
F	Data Bit 5	H	O	J
H	Data Bit 6		K	O
J	Data Bit 7			L
K	N/L	O	O	
L	N/L	M	O	N
M	Clamp (CLP)		P	O
N	Standby (SBY)	O	S	T
P	Pen (PEN)		U	O
R	Ready (RDY)	O		R
S	Mode (MDE)			
T	Format (FMT)	O	O	O
U	Delta X Sign (DXS)	O	W	O
V	Delta Y Sign (DYS)			V
W	Maneuver (MVR)	O	Y	O
X	Code (CDE)			X
Y	SYNC (SYC)	O		Z
Z	Pen Command (PNC)			
a	N/L	a	O	b
b	N/L		O	O
c*	Standby (SBY)*	O	c	O
d*	Ready (RDY)*		e	f
e*	Format (FMT)*	O		O
f*	Clamp (CLP)*			
h	N/L	O	h	O
j*	Pen (PEN)*			j
k	N/L	k	O	m
l	N/L		n	O
n	N/L	O		p
p	N/L	r	O	s
r	N/L		t	O
s	N/L	O		u
t	N/L			
u	N/L	O		
v	N/L	v	O	w
w	N/L		x	O
x	Flag (FLG)	O		y
y	N/L			
z	N/L	z	O	AA
AA	N/L		BB	O
BB*	Flag (FLG)*	O		CC
CC	Control (CTL)		DD	O
DD	N/L	O		EE
EE	N/L		FF	O
FF	Ground			HH
HH	Ground			

*Signals entered on these pins bypass Interface Board.

Rear View of Cable Connector

Figure 6. Rear Connector Pin Connections

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

NOTE

Because of multiple references to illustrations, all illustrations for this chapter are contained on fold-outs at the end of the chapter on pages 3-37 and 3-39.

This chapter provides information for maintenance, performance testing, functional checks, and adjustment of the Plotter. Maintenance procedures, tests and adjustments will ensure that the instrument conforms to specifications. Functional checks maintain the instrument in an operational condition. If the instrument fails to meet specifications, or is inoperable, refer to the Troubleshooting Chapter on page 5-1.

PREVENTIVE MAINTENANCE

The Plotter must be maintained properly to obtain accurate, trouble-free operation. This requires periodic lubrication, performance checks, and visual and electrical checks. In accordance with good maintenance procedures for all precision measuring instruments, Hewlett-Packard recorders should be protected from dust. Use furnished dust cover P/N 4040-0477, when not in use.

This instrument is designed to operate over an ambient temperature range of 5°C to 55°C. Operation under other conditions will produce inaccurate results and may cause damage to the Plotter. In areas with high humidity, graph paper may become distorted, affecting the accuracy of the grid lines. The area of operation should also be as free as possible of air contamination (soot, smoke, fumes, etc.). Excessive air contamination will require more frequent cleaning.

Thorough cleaning should be performed periodically. Intervals are determined by type of operation, local air contamination, and climatic conditions. Generally, under normal use and conditions, cleaning intervals should be nine to twelve months. Cleaning routine should include the following:

1. Remove platen and raise hinged top casting. The top casting may be raised after removing the two screws located under bottom front lip of Plotter. The platen may be removed as follows:
 - A. Raise hinged top casting as outlined above.
 - B. Remove Autogrip leads shown in Figure 7.
 - C. Remove four No. 8-32 and two No. 6-32 mounting screws holding platen.
 - D. Place carriage arm at far right of travel.

ENVIRONMENTAL OPERATION

CLEANING

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

CLEANING (continued)

- E. Pull up on upper left hand corner of platen and slide platen out to left.

Be sure to replug Autogrip leads when replacing platen.
2. In inaccessible areas and where there is only dust accumulation, cleaning can be accomplished with an air gun. In more accessible areas and where the air gun will not remove dirt, dust, or ink, accumulations should be removed with a sponge or cloth moistened in plain soap and warm water, then wiped dry.
3. Every eighteen to twenty-four months, gears should be cleaned thoroughly with a solvent and re-lubricated (recommended lubricant, HP part number 6040-0272). Do not use soap or water on these components.
4. Platen should be cleaned as follows:
 - A. Carefully select a soap for cleaning. A mild liquid soap is preferable. Do not use any product with abrasives or corrosive chemicals; do not use solvents or silicone-based cleaners of any type.
 - B. Also be careful in selecting a cleaning cloth. Use a soft cloth that will not scratch the surface but will readily absorb water.
 - C. Saturate the cloth in warm, soapy water. Wring the cloth until the majority of the water has been removed.
 - D. Wipe the table surface with this damp cloth until the Autogrip table is clean.

CAUTION

NEVER LET WATER STAND ON AUTOGRIP SURFACE. IT MAY PERMANENTLY DAMAGE THE TABLE.

- E. Wipe any moisture from surface.
- F. Allow a few minutes to dry before using.
5. Clean slidewires. See Potentiometer Cleaning.

POTENTIOMETER CLEANING

Irregular or "jumpy" plots produced on a properly adjusted recorder may indicate worn or dirty balance potentiometers or wipers. To clean the potentiometers, spray the potentiometer and limit switch along their entire length with Slidewire Cleaner (Part No. 5080-3605). Rapidly move the carriage arm or pen carriage several full scale excursions. Spray the wipers directly with Slidewire Cleaner. Thoroughly saturate a Kimwipe (Kimberly-Clark Type 900-S) or a cotton swab with Slidewire Cleaner. Rub the potentiometer

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

(mandrel and return strip) and limit switch along their entire length, using the moistened tissue or swab (see Figure 8). Note any discoloration of the tissue or swab after rubbing. Repeat the cleaning procedure until there is no stain, then clean once more to ensure that all contaminants have been removed. After cleaning, the potentiometer (mandrel and return strip) and limit switch must be lubricated with the furnished Slidewire Lubricant (Part No. 5080-3635). This lubrication will reduce wear and chemical contamination of the assembly (see Figure 9). For access to the slidewire, see General Disassembly.

The Plotter is a precision instrument. Gears and other moving parts have very close tolerances. Lubricate gears sparingly; overlubrication may produce more friction than no lubrication. Intervals between periodic lubrication are determined by the type of operation, local air contamination, and climatic conditions. Generally, under normal use and conditions, the Plotter should be lubricated every nine to twelve months. Relubricate completely every two years. All ball bearings are prelubricated by the manufacturer and require no further lubrication.

1. Apply a thin film of lubricant on X and Y drive gears (including idler gear). Recommended grease: HP 6040-0222.

CAUTION

LUBRICANT MUST NOT SPILL ONTO X-AXIS
DRIVE BELT OR CABLE, OR Y-AXIS DRIVE
CABLE.

During periodic cleaning and lubrication, a planned visual inspection should be performed. The following general list can be used as a guide:

1. Check both X and Y drive gears for proper adjustment (minimal backlash), and any worn or damaged teeth.
2. Inspect X-axis drive cable pulleys for any binding.
3. Ensure that both servo motors are mounted securely.
4. Move pen carriage, listening for scrapes, grinding noises, etc., while feeling for any binding in movement. Repeat this procedure for carriage arm.
5. Check cables of both axes for evidence of fraying or rubbing.
6. A check of components should include inspection for evidence of overheating, loose connections, cracked circuit boards, etc.

LUBRICATION

VISUAL INSPECTION

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

PERFORMANCE VERIFICATION AND DIAGNOSTIC TESTING

TEST PLOT

Performance verification for the 7210A Digital Plotter consists of placing the Plotter and the associated computer system in operation and successfully completing a test plot. The test plot is generated by executing the appropriate section of the Plotter Diagnostic and Test Program (P/N 72002-60001) on the computer system used with the Plotter. This program is structured so that the generation of the test plot exercises all the control options and data paths provided by the Plotter for use with a Hewlett-Packard 2100, 2114, 2115 or 2116 Computer and the resulting test plot is structured so that the dimensional characteristics of the lines produced can be evaluated conveniently. The completion of a satisfactory test plot demonstrates that a particular plotter and the associated interface are operating properly and are capable of producing any plot within the designed capabilities of the Plotter. Although the successful completion of a test plot with a malfunctioning system is very unlikely, this possibility does exist and can only be eliminated by completely testing every element of the entire system.

DIAGNOSTIC TESTING

Diagnostic testing of the 7210A Digital Plotter and the associated system consists of detecting and isolating any equipment malfunctions or maladjustments responsible for deficiencies observed in the execution of one or more programs which operate the Plotter. Usually such deficiencies will be observed during the generation of the test plot. In addition, it should be remembered that the inability to execute any plotting program and the execution of Plotter programs without the operation of the Plotter are also deficiencies in plotter performance.

Diagnostic testing is performed by the selective exercising and performance verification of the elements of the system being tested. Usually, diagnostic tests are interpreted on the assumption that some system or group of systems is functioning correctly. If necessary, one can start by verifying the correct entry of the most elementary test program for the system's CPU and then proceed to performing this test. The location of a Plotter malfunction may start with the testing of the CPU and other peripherals of the system. The necessary information to do this is contained in the documentation for the computer system. In addition, the meaningful execution of the Plotter Diagnostic and Test Program assumes the proper operation of the Microcircuit Interface Card (P/N 12566-60024) used to interface the Plotter with the computer. This can be verified by using the information given in the Operating and Service Manual for the 12566B Microcircuit Interface Kit (P/N 12566-90015) and performing the procedures contained in the Manual of Diagnostics for the General Purpose Register Diagnostic (P/N 12554-60023) or in the Manual of Diagnostics for 2100A General Purpose Register Test (P/N 12554-90026).

When the satisfactory performance of the computer system and interface is assumed, or has been demonstrated, the Plotter is tested using the Plotter Diagnostic and Test Program (P/N 72002-60001).

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

USE OF PLOTTER DIAGNOSTIC AND TEST PROGRAM

Test Equipment

The following items are required to perform the procedures provided by the Plotter Diagnostic and Test program:

1. One absolute binary tape for Plotter Diagnostic and Test Program, (P/N 72002-60001).
2. 10 in. x 15 in. gridded chart paper, (P/N 9270-1004).
3. Model 141A Oscilloscope, or any equivalent storage scope.
4. Model 3460B Digital Voltmeter.
5. Model 2114, 2115, 2116, or 2100A Computer.

TEST EQUIPMENT

System Check

The system is prepared for operation, and the Plotter Diagnostic and Test Program is loaded and configured as follows:

1. Turn on the power for the Computer, the Plotter and the paper tape input device.
2. Use the Basic Binary Loader to load the Plotter Diagnostic and Test Program using the binary tape provided (P/N 72002-60001). Refer to system manual for instructions on use of Binary Loader.
3. After step 2 is completed, set the starting address to 100_8 .
4. Enter the I/O channel of the Plotter in the switch register as an integer (8), (e.g. 17_8).

SYSTEM CHECK

NOTE

The I/O channel of the plotter can be verified by opening the computer and determining the physical location or slot number of the I/O board connected to the plotter interface cable assembly. The corresponding I/O channel no. is given on a table on the inside of the computer.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

SYSTEM CHECK (continued)

5. Press the PRESET (or EXTERNAL PRESET) switch and then press the RUN switch. When the RUN switch is pressed the indicator lights on the computer will flash momentarily and then the computer will halt with 102000_g in the MEMORY DATA register. The Plotter Diagnostic and Test Program is now configured and ready for use.
6. Place a sheet of 10 in. x 15 in. chart paper (P/N 9270-1004) on the platen of the Plotter locating it firmly against the bottom paper guide and left edge paper stop. Depress the CHART HOLD and smooth the paper on the platen.

NOTE

The proper type of chart paper and the proper positioning of this chart paper is essential for these Diagnostic and Test procedures because the X and Y motions of the Plotter are aligned with respect to the bottom guide and left edge stop. To assure the proper positioning of the chart paper check the following:

- a. The holes in the chart paper should be on the left.
- b. The bottom edge of the chart paper should be under the lip of the bottom paper guide for the paper's full length.
- c. The left edge of the chart paper should contact the left paper stop without bending the edge of the paper.
- d. Air bubbles should be absent between the chart paper and the platen.

7. Set the GRAPH LIMIT controls on the Plotter to correspond to the 10 in. x 15 in. grid on the chart paper. First press LOWER LEFT and adjust the LOWER LEFT controls to move the pen to the lower left corner of the grid. Press the PEN DOWN; verify the adjustment. The mark produced by the pen should align exactly with the lower left corner of the preprinted grid. Next press UPPER RIGHT and adjust the UPPER RIGHT graph limit controls to move the pen to the upper right corner of the grid. Press PEN DOWN and verify that the mark produced aligns exactly with the upper right corner of the preprinted grid.
8. Set the switch register on the computer to "0" and press the PRESET (EXTERNAL PRESET) switch and then the RUN switch.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

NOTE

Switch "0" when ON does the following:

1. Function: Performs the 6 step procedure required to generate the performance verification plots.
2. Halts: 1 for fresh chart paper. 5 to indicate pen status errors.
3. Termination: On completion of the two required plots or on completion of current step if switch 15 is ON.

Setting switch 15 of the switch register ON will terminate repetitive and multistep procedures so that another procedure can be selected from the switch register. To restart the program press HALT, enter 000077_8 in the switch register, press LOAD ADDRESS, press PRE-SET (EXTERNAL PRESET), and then press RUN. When the computer halts with 102000_8 in the MEMORY DATA register, the next procedure can be selected from the switch register.

Table 2A. Switch Register Settings for Plotter Diagnostic and Test Program

Switch On	Function	Halts	Termination
0	Performs the 6 step procedure required to generate performance verification plots	1 for fresh chart paper. 5 to indicate pen status errors	On completion of the 2 required plots or on completion of current step if switch 15 is ON
1	Generates first performance verification plot to test adjustment and line quality of Plotter and verify both interrupt and non-interrupt operation of Plotter	None	On completion of plot
2	Test proper function of the pen status	5 to indicate pen status errors	On completion of status checks
3	Demonstrates use of binary position information with absolute mode of position reference	None	On completion of procedure
4	Demonstrates use of binary position information with relative mode of position reference	None	On completion of procedure
5	Demonstrates use of BCD position information with absolute mode of position reference	None	On completion of procedure
6	Demonstrates use of BCD position information with relative mode of position addressing	None	On completion of procedure
7	Generates test pattern No. 1	None	Set switch 15 ON
8	Generates test pattern No. 2	None	Set switch 15 ON
9	Generates test pattern No. 3	None	Set switch 15 ON
10	Generates test pattern No. 4	None	Set switch 15 ON
11	Generates test pattern No. 5	None	Set switch 15 ON
12	Generates test pattern No. 6	None	Set switch 15 ON
13	Generates test pattern No. 7	None	Set switch 15 ON
14	Not used		

NOTE: Lowest numbered switch set ON will have priority. This means the procedure corresponding to a given switch will not be selected unless all lower numbered switches are set OFF.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

SYSTEM CHECK (continued)

Table 2B. Halts Generated by Plotter Test and Diagnostic Program

Contents of MEMORY DATA Register	Significance
102000_8	Set switch register to select procedure
102001_8	Pen status error after Pen Up command and an absolute Maneuver. Status is 1 and should be 0.
102002_8	Pen status error after Pen Up command with pen raised. Status is 1 and should be 0.
102003_8	Pen status error after Pen Down command lowers the pen. Status is 0 and should be 1.
102004_8	Pen status error after Pen Down with pen lowered. Status is 0 and should be 1.
102005_8	Pen status error after Pen Up command raises the pen. Status is 1 and should be 0.
102077_8	Place fresh chart paper on plotter and press Run.

PERFORMANCE VERIFICATION PLOTS

INSPECTION OF PLOTS

The two plots produced by the performance verification procedures are shown in Figures 10 and 11. These plots verify performance as follows:

1. On the first plot (Figure 10):
 - A. Alignment Verification — all vertical and horizontal lines (6) align within 0.010 in. of preprinted grid.
 - B. Linearity Verification — all dots (26) are within 0.030 in. of major divisions of preprinted grid.
 - C. Retrace Verification — all retraced lines (10 radiating from bottom center and one diagonal from lower left) are open less than 0.015 in.
 - D. Servo Matching Verification — the single trace diagonal (from upper left) has inflections less than 0.015 in. in amplitude.
 - E. All angular lines bowed no more than 0.040 in. from the true straight line between end points.
 - F. Completion of the lines drawn to 5000,0 demonstrates operation with the interrupt system enabled.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

- G. Completion of the remaining lines and points demonstrates operation with the interrupt system disabled.
 - H. The entire first plot demonstrates the use of binary position information with the absolute mode of position reference.
2. On the second Plot (Figure 11):
- A. The lowering and raising of the pen at 5000,5000 without program halts demonstrates the proper functioning of the pen status.
 - B. The completion of the figure at the lower left demonstrates the use of binary position information with the absolute mode of position reference.
 - C. The completion of the figure at the upper left demonstrates the use of binary position information with the relative mode of position reference.
 - D. The completion of the figure at the upper right demonstrates the use of BCD position information with the absolute mode of position reference.
 - E. The completion of the figure at the lower right demonstrates the use of BCD position information with the relative mode of position reference.

MECHANICAL MAINTENANCE

Access to the various components can be accomplished as follows:

GENERAL DISASSEMBLY

1. Remove ac power cord.
2. Access to X axis slidewire and limit switch assembly is obtained by removing rear hood, which is held in place by two screws. To remove, turn each screw one full turn counterclockwise.
3. For access to Y-axis slidewire and limit switch assembly:
 - A. Remove rear hood.
 - B. Turn the black tab at upper end of scale 90° counterclockwise.
 - C. Lift pen holder back to detent position and open slidewire cover.
4. Slidewire cover on the Y arm may be removed by pushing back on upper cover support with thin-bladed screwdriver (see Figure 12). This disengages cover and fully exposes Y axis slidewire limit switch and drive components.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

GENERAL DISASSEMBLY (continued)

5. Access to electronic components may be obtained by raising hinged top casting. Top and bottom castings are secured together by two screws located under bottom front lip of Plotter.
 6. X-axis drive system may be reached by removing recording platen as follows:
 - A. Raise hinged top casting as outlined in step 5.
 - B. Remove Autogrip leads shown in Figure 7.
 - C. Remove four No. 8-32 and two No. 6-32 mounting screws holding platen.
 - D. Place carriage arm at far right of travel.
 - E. Pull up on upper left hand corner of platen and slide platen out to left.
- Be sure to replace Autogrip leads when replacing platen.
7. To gain access to Y arm's lower slider block, remove paper alignment bar as follows:
 - A. Raise hinged top casting as outlined in step 5.
 - B. Near front edge of top casting locate three No. 6-32 and three No. 8-32 screws — remove only the three No. 8-32 screws.
 - C. Close top and carefully lift alignment bar up and out.

REMOVAL OF CARRIAGE ARM

The carriage arm may be removed for replacement or service as follows:

1. Remove pen from holder.
2. Remove rear hood.
3. Remove X-axis potentiometer to prevent its being damaged. The potentiometer assembly and mounting channel is an integral unit and may be removed as follows:
 - A. Unsolder six wires, noting the order in which leads connect to assembly (see Figure 13). Top two wires are for the limit switch, bottom four wires are for the slidewire.
 - B. Remove two screws mounting assembly to frame.
 - C. Lift assembly up and out.
 - D. When reinstalling assembly, observe color codes and take extreme care not to bridge any gaps with solder.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

4. Release Y slidewire cover and remove from arm (see Figure 12).
5. The arm is held by two shouldered screws at upper end and one screw at its lower end (see Figure 14).
 - A. Remove screws (1), (2), and (3) and lift arm off of its motor block (refer to Figure 14).
 - B. Lift arm up, separating it from lower carriage mount. Be careful not to damage wires connecting slidewire/limit switch assembly to motor block.
6. Reassemble carriage arm.
7. Align Y-axis as follows:
 - A. Raise hinged top casting and loosen screw securing stringing on lower slider bracket (Figure 15).
 - B. Loosen the two screws securing Y arm to motor block.
 - C. Install pen and sheet of graph paper. Make sure graph paper is properly aligned against bottom paper stop.
 - D. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
 - E. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.
 - F. Set Switch "1" ON in Switch Register.
 - G. Press PRESET (or EXTERNAL PRESET) switch and then press RUN Switch.
 - H. All vertical lines (3) must align within 0.010 inch of preprinted grid. Move lower end of arm to right or left to effect alignment (see Figure 16).
 - I. Tighten screws on motor block and tighten screw securing stringing on lower slider bracket.

The pen carriage may be removed for replacement or service as follows:

1. Remove pen from holder.
2. Remove X-axis potentiometer to prevent its being damaged. The potentiometer assembly and mounting channel is an integral unit and may be removed as follows:
 - A. Unsolder six wires, noting the order in which leads connect to assembly (see Figure 13). Top two wires are for the limit switch, bottom four wires are for the slidewire.

REMOVAL OF PEN CARRIAGE

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

REMOVAL OF PEN CARRIAGE (continued)

- B. Remove two screws mounting assembly to frame.
- C. Lift assembly up and out.
- D. When reinstalling assembly, observe color codes and take extreme care not to bridge any gaps with solder.
3. Release Y slidewire cover and remove from arm (see Figure 12).
4. Remove carriage arm from recorder. The arm is held by two shouledered screws at upper end and one screw at its lower end (see Fig. 14).
5. Remove nylon drive cord from around drive and return pulleys.
6. Remove retaining block and return pulley at lower end of carriage arm.
7. Slide carriage out of the arm.
8. Reassemble and adjust pen carriage by moving pen carriage to upper end of arm so that 2-56 setscrew in carriage is aligned with notch inside of arm (see Figure 17). Adjust setscrew to minimize side-play of carriage within arm.
9. Move pen block to the lower end of arm so as to align lower setscrew with notch at lower end of arm, and repeat operation.

NOTE

Care should be taken not to adjust out all side-play. This will cause mechanical drag and result in a poor trace.

WIPER REPLACEMENT (Y-AXIS)

The wiper is located on and is part of the pen carriage (Part No. 5080-8135). New carriage assemblies should be obtained from the local Sales/Service Office. When replacing the wiper/pen carriage assembly, care must be taken to avoid bending the wiper.

CAUTION

DAMAGE MAY RESULT IF OTHER THAN THE FACTORY-SUPPLIED WIPER IS USED.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

1. Remove carriage arm from recorder as follows:
 - A. Remove pen from holder.
 - B. Remove rear hood.
 - C. Remove X-axis potentiometer to prevent its being damaged. The potentiometer assembly and mounting channel is an integral unit and may be removed as follows:
 - 1) Unsolder six wires, noting the order in which leads connect to assembly (see Figure 13). Top two wires are for the limit switch, bottom four wires are for the slidewire.
 - 2) Remove two screws mounting assembly to frame.
 - 3) Lift assembly up and out.
 - 4) When reinstalling assembly, observe color codes and take extreme care not to bridge any gaps with solder.
 - D. Release Y slidewire cover and remove from arm (see Figure 12).
 - E. The arm is held by two shouldered screws at upper end and one screw at its lower end (see Figure 14).
2. Remove pen carriage as follows:
 - A. Remove nylon drive cord from around drive and return pulleys.
 - B. Remove retaining block and return pulley at lower end of carriage arm.
 - C. Slide carriage out of the arm.
3. Remove wiper assembly from pen block by removing No. 0-80 screw and nut.
4. Install new wiper (Part No. 09125-60110) using same screw and nut.
5. Reassemble and adjust pen carriage by moving pen carriage to upper end of arm so that 2-56 setscrew in carriage is aligned with notch inside of arm (see Figure 17). Adjust setscrew to minimize side-play of carriage within arm.
6. Move pen block to the lower end of arm so as to align lower setscrew with notch at lower end of arm, and repeat operation.

MAINTENANCE, PERFORMANCE CHECKS , AND ADJUSTMENTS

WIPER REPLACEMENT (Y-AXIS) (continued)

WIPER REPLACEMENT (X-AXIS)

POTENTIOMETER REPLACEMENT (Y-AXIS)

NOTE

Care should be taken not to adjust out all side-play. This will cause mechanical drag and result in a poor trace.

The wiper is located on the pen motor block at the upper end of the carriage arm. New wiper assemblies should be obtained from the local Sales/Service Office and installed as described in the following paragraphs. When replacing the wiper, care must be taken to avoid bending the wiper.

CAUTION

DAMAGE TO THE SLIDEWIRE MAY RESULT IF OTHER THAN THE FACTORY-SUPPLIED WIPER IS USED.

1. Remove rear hood.
2. Snap pen lift solenoid out of its spring holder and remove holder by removing one mounting screw.
3. Remove wiper assembly mounting screw and install new wiper (Part No. 5080-8127). Protect slidewire using technique shown in Figure 18.
4. Reassemble holder and solenoid.

This unit is located in the carriage arm and is part of the carriage channel. The channel and potentiometer are replaced as one unit. Proceed as follows:

1. Remove pen from holder.
2. Remove X-axis potentiometer to prevent its being damaged. The potentiometer assembly and mounting channel is an integral unit and may be removed as follows:
 - A. Unsolder six wires, noting the order in which leads connect to assembly (see Figure 13). Top two wires are for the limit switch, bottom four wires are for the slidewire.
 - B. Remove two screws mounting assembly to frame.
 - C. Lift assembly up and out.
 - D. When reinstalling assembly, observe color codes and take extreme care not to bridge any gaps with solder.
3. Release Y slidewire cover and remove from arm (see Figure 12).

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

4. Remove carriage arm from recorder. The arm is held by two shouldered screws at upper end and one screw at its lower end (see Fig. 14).
5. Remove pen carriage as follows:
 - A. Remove nylon drive cord from around drive and return pulleys.
 - B. Remove retaining block and return pulley at lower end of carriage arm.
 - C. Slide carriage out of the arm.
6. Remove all remaining components, i.e., upper idler pulley, etc., from assembly.
7. Unsolder six wires, noting order in which leads connect to slidewire (see Figure 13).
8. To install new slidewire/limit switch and arm assembly (Part No. 5060-6536), pass bundle of leads through the small hole at top of arm and put arm assembly in place.
9. Install pen carriage.
10. Reinstall two shouldered screws at top taking care to also reinstall slidewire cover hinge and carriage stop.
11. Replace screw at bottom, securing it to lower slider block.
12. Resolder wires to the limit switch and slidewire.
13. Reinstall X-axis slidewire.
14. Reinstall Y-axis slidewire cover.
15. Check Y-axis alignment. Realign as necessary (see Y-axis Alignment).

The slidewire/limit switch assembly and their mounting channel are an integral unit and available only as a single item. Replace as follows:

1. Remove rear hood.
2. Remove X-axis wiper as follows:
 - A. Snap pen lift solenoid out of its spring holder and remove holder by removing one mounting screw.
 - B. Remove wiper assembly mounting screw and install new wiper (Part No. 5080-8127). Protect slidewire using technique shown in Figure 18.

POTENTIOMETER REPLACEMENT (X-AXIS)

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

POTENTIOMETER REPLACEMENT (X-AXIS) (continued)

3. Unsolder six wires, noting the order in which leads connect to assembly (see Figure 13). Top two wires are for the limit switch, bottom four wires are for the slidewire.
4. Remove two screws mounting assembly to frame.
5. Lift assembly up and out.
6. Install new slidewire/limit switch assembly (Part No. 5060-6537). Secure it with two screws.
7. Resolder wires. When soldering, observe color codes and take extreme care not to bridge any gaps with solder.

Y-AXIS RESTRINGING

MATERIAL REQUIRED: Y-axis cable assembly, Part No. 07005-60600.

RESTRINGING PROCEDURE. (Refer to Figure 15.)

1. Remove carriage arm from recorder as follows:
 - A. Remove pen from holder.
 - B. Remove rear hood.
 - C. Remove X-axis wiper as follows:
 - 1) Snap pen lift solenoid out of its spring holder and remove holder by removing one mounting screw.
 - 2) Remove wiper assembly mounting screw and install new wiper (Part No. 5080-8127). Protect slidewire using technique shown in Figure 18.
 - D. Remove X-axis potentiometer as follows to prevent its being damaged:
 - 1) Unsolder six wires, noting the order in which leads connect to assembly (see Figure 13). Top two wires are for the limit switch, bottom four wires are for the slidewire.
 - 2) Remove two screws mounting assembly to frame.
 - 3) Lift assembly up and out.
 - E. Release Y slidewire cover and remove from arm (see Figure 12).
 - F. The arm is held by two shouldered screws at upper end and one screw at its lower end (see Figure 14).

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

2. Remove pen carriage as follows:
 - A. Remove nylon drive cord from around drive and return pulleys.
 - B. Remove retaining block and return pulley at lower end of carriage arm.
 - C. Slide carriage out of the arm.
3. Install a new nylon drive cord assembly, consisting of a cable spring and nylon cord.
 - A. Attach free end of tension spring to hook on the pen carriage. Insert knotted end of cord in groove of pen block.
 - B. Slide pen carriage into carriage arm, making sure cable is between pen carriage and slidewire and to the right of wipers. Care should be taken not to damage wiper.
 - C. Loop cord around upper and lower pulleys.
 - D. Test for proper tension. The Y cable tension may be verified by measuring the force required to move the pen carriage downscale while the motor is locked. This required force shall be between the limits of 14 ounces and 20 ounces (see Figure 19). If the string tension is not correct, the string must be lengthened or shortened to attain the desired tension. This can be accomplished by removing the pen block from the pen arm and retying the knot on the end of the string.
 - E. Reassemble remaining parts.

DISASSEMBLY. When restringing the X-axis, the recording platen and paper alignment bar must be removed.

1. Remove platen and raise hinged top casting. The top casting may be raised after removing the two screws located under bottom front lip of Plotter. The platen may be removed as follows:
 - A. Raise hinged top casting as outlined above.
 - B. Remove Autogrip leads shown in Figure 7.
 - C. Remove four No. 8-32 and two No. 6-32 mounting screws holding platen.
 - E. Pull up on upper left hand corner of platen and slide platen out to left.

Be sure to replug Autogrip leads when replacing platen.

X-AXIS RESTRINGING

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X-AXIS RESTRINGING (continued)

2. Remove paper alignment bar as follows:
 - A. With hinged top casting raised, locate three No. 6-32 and three No. 8-32 screws that are near the front edge of top casting. Remove only the three No. 8-32 screws.
 - B. Close top and carefully lift alignment bar up and out.

MATERIALS REQUIRED: X-axis Stringing Kit, Part No. 5080-7717.

RESTRINGING PROCEDURE. (Refer to Figure 15.)

1. Loosen screw securing stringing plate on lower slider bracket. Access to screw is accomplished by raising upper casting and positioning arm over the access hole in bottom plate.
2. Remove old cable and adjust bottom two pulleys (J and E, Figure 15) to their innermost position.
3. Secure the carriage arm in a convenient position to prevent movement.
4. Form a small loop of the new cable by inserting it through the cable crimp and doubling the end back.
5. Crimp cable crimp securely. This operation can be performed with a pair of wire cutters.
6. Place loop over stud in center of stringing bracket (Point A).
7. Pass cable around end of bracket (Point B) from back to front.
8. Pass cable across front of bracket to Pulley C and around Pulley C ($\frac{1}{2}$ turn) in a counterclockwise direction to Drive Sheave D.
9. Place one turn around Drive Sheave in a counterclockwise direction, passing cable under itself and continue to Pulley E.
10. Place $\frac{1}{2}$ turn around Pulley E in a clockwise direction and continue to lower slider bracket.
11. Pass wire around stringing guide Point F ($\frac{1}{2}$ turn) in a counterclockwise direction, passing in front of Screw G while keeping it under plate and then around stringing guide H ($\frac{1}{2}$ turn) in a counterclockwise direction.
12. Pass cable back across lower slider bracket passing over itself to Pulley J in a clockwise direction and continue to Drive Sheave D.
13. Make one turn around Drive Sheave in a counterclockwise direction, above previous turn, and passing cable under itself to Pulley K.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

14. Make $\frac{1}{2}$ turn around Pulley K in a counterclockwise direction, continuing to front of stringing bracket above cable already there, and around end of bracket (Point L) to screw M.
15. Place one turn around screw M in a clockwise direction passing cable under itself.
16. Tighten screw lightly.
17. Make stringing taut. To make taut, grasp end of cable with a pair of long nose pliers placing several turns around end. Using motor block for support, continue wrapping cable around pliers until cable is taut (see Figure 20).
18. Tighten screw M securely and check cable tension by measuring the force required to displace it a given distance. With the arm at the extreme right, measure the force required to displace the center of the longest span of the cable $\frac{1}{4}$ inch past the vertical wall of the motor assembly trough. The measured force must be between the limits of 14 ounces and 20 ounces (see Figure 21).
19. If the X-axis cable tension must be readjusted, move the two pulleys nearest the paper alignment bar in their elongated mounting holes. If enough adjustment is not present, restring the X-axis.
20. Cut off remaining portion of cable leaving approximately $\frac{1}{2}$ inch.
21. Replace paper alignment bar and platen.
22. Tighten screw G.
23. Align the X-axis as follows:
 - A. Loosen two end screws on paper alignment bar. Remove two No. 6-32 screws at bottom edge of platen and loosen the other four platen screws.
 - B. Install pen and sheet of graph paper. Make sure graph paper is properly aligned against bottom paper stop.
 - C. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
 - D. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.
 - E. Set Switch "1" ON in Switch Register.
 - F. Press PRESET (or EXTERNAL PRESET) switch and then press RUN Switch.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X-AXIS RESTRINGING (continued)

- G. All horizontal lines (3) must align within 0.010 inch of preprinted grid. Move one end of paper alignment bar up or down to effect alignment (see Figure 16).

NOTE

After X alignment, Y axis must be realigned.

24. Align the Y-axis as follows:
 - A. Loosen the two screws securing Y arm to motor block.
 - B. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
 - C. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.
 - D. Set Switch "1" ON in Switch Register.
 - E. Press PRESET (or EXTERNAL PRESET) switch and then press
 - F. All vertical lines (3) must align within 0.010 inch of preprinted grid. Move lower end of arm to right or left to effect alignment (see Figure 16).
 - G. Tighten screws on motor block and tighten screw securing stringing on lower slider bracket.

Y CABLE TENSION CHECK

The Y cable tension may be verified by measuring the force required to move the pen carriage downscale while the motor is locked. This required force shall be between the limits of 14 ounces and 20 ounces (see Figure 19).

Y CABLE TENSION ADJUSTMENT

If the string tension is not correct, the string must be lengthened or shortened to attain the desired tension. This can be accomplished by removing the pen block from the pen arm and retying the knot on the end of the string.

X CABLE TENSION CHECK

X cable tension should be verified by measuring the force required to displace it at a given distance. With the arm at the extreme right, measure the force required to displace the center of the longest span of the cable $\frac{1}{4}$ inch past the vertical wall of the motor assembly trough. The measured force must be between the limits of 14 ounces and 20 ounces (see Figure 21).

X CABLE TENSION ADJUSTMENT

X-axis cable tension can be adjusted by moving the two pulleys nearest the paper alignment bar in their elongated mounting holes. If enough adjustment is not present, restrung the X-axis per X-axis Restrung.

X DRIVE BELT TENSION CHECK

The force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 22).

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

The X-axis mylar drive belt tension may be adjusted as follows:

1. Raise hinged top casting and loosen screws holding motor.
2. Move motor to adjust belt tension.
3. Tighten motor screws.
4. Measure tension, readjust if necessary. The force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 22).
5. Replace platen and rear hood.

X DRIVE BELT TENSION ADJUSTMENT

The X-axis mylar belt may be replaced as follows:

1. Remove platen.
2. Raise hinged top casting and loosen screws holding motor and eccentric adjustment.
3. Loosen motor clamp screw and rotate motor until belt is as loose as possible.
4. Close top and lift belt off servo pulley.
5. Remove eccentric assembly and old belt.
6. Install new belt (Part No. 1500-0216) and replace eccentric assembly.
7. Readjust backlash as follows:
 - A. Loosen two screws securing the knurled eccentric adjustment (Figure 23).
 - B. Move arm back and forth in short strokes and adjust eccentric by turning Knurled Knob until there is no discernible backlash. If backlash is too tight, a grinding sound will be evident when moving the arm a distance. If backlash is too loose, a knocking or clicking sound will be evident.
8. Tighten screw holding eccentric adjustment.
9. Recheck X belt tension by verifying that the force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 22).

X DRIVE BELT REPLACEMENT

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X DRIVE BELT REPLACEMENT (continued)

10. If necessary, readjust the belt tension as follows:
 - A. Loosen screws holding motor.
 - B. Move motor to adjust belt tension.
 - C. Tighten motor screws.
 - D. Measure tension, readjust if necessary.
11. Replace platen and rear hood.

X DRIVE BEARING REPLACEMENT

To replace any of the X-axis drive bearings, the X-axis drive cable must be partially or completely removed, depending on which bearing is affected. (See Figure 24.)

1. To replace a pulley bearing, proceed as follows:
 - A. Remove rear hood and platen.
 - B. Move pen carriage to its extreme position away from the affected pulley.
 - C. Apply masking tape to remaining pulleys and drive sheave so as to prevent cable from slipping off when tension is removed.
 - D. Raise hinged top casting.
 - E. While holding pulley nut on bottom side, remove No. 6-32 screw mounting pulley and remove pulley and its mounting stud.
 - F. Press out defective bearing and replace with a new bearing (Part No. 1410-0215).
 - G. Reassemble Plotter, making sure that pulley is reinstalled with same side up.
 - H. Check the cable tension. With the arm at the extreme right, measure the force required to displace the center of the longest span of the cable $\frac{1}{4}$ inch past the vertical wall of the motor assembly trough. The measured force must be between the limits of 14 ounces and 20 ounces (see Figure 21).
2. To replace drive sheave bearings, proceed as follows:
 - A. Remove rear hood and platen.
 - B. Remove X-axis drive cable.

MAINTENANCE, PERFORMANCE CHECKS, AND AJUSTMENTS

- C. Remove retaining ring and slip sheave/gear assembly upwards and off of stud.
 - D. Separate gear from sheave by removing four No. 2-56 pan head mounting screws.
 - E. Push one bearing out bottom of sheave and other out top of sheave and replace defective bearing(s) with new bearing(s) (Part No. 1410-0277).
 - F. Reassemble.
3. Restring the X-axis using X-axis stringing kit, Part No. 5080-7717, and proceed as follows: (Refer to Figure 15.)
- A. Loosen screw securing stringing plate on lower slider bracket. Access to screw is accomplished by raising upper casting and positioning arm over the access hole in bottom plate.
 - B. Remove old cable and adjust bottom two pulleys (J and E, Figure 17) to their innermost position.
 - C. Secure the carriage arm in a convenient position to prevent movement.
 - D. Form a small loop of the new cable by inserting it through the cable crimp and doubling the end back.
 - E. Crimp cable crimp securely. This operation can be performed with a pair of wire cutters.
 - F. Place loop over stud in center of stringing bracket (Point A).
 - G. Pass cable around end of bracket (Point B) from back to front.
 - H. Pass cable across front of bracket to Pulley C and around Pulley C ($\frac{1}{2}$ turn) in a counterclockwise direction to Drive Sheave D.
 - I. Place one turn around Drive Sheave in a counterclockwise direction, passing cable under itself and continue to Pulley E.
 - J. Place $\frac{1}{2}$ turn around Pulley E in a clockwise direction and continue to lower slider bracket.
 - K. Pass wire around stringing guide Point F ($\frac{1}{2}$ turn) in a counterclockwise direction, passing in front of Screw G while keeping it under plate and then around stringing guide H ($\frac{1}{2}$ turn) in a counterclockwise direction.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X DRIVE BEARING REPLACEMENT (continued)

- L. Pass cable back across lower slider bracket passing over itself to Pulley J in a clockwise direction and continue to Drive Sheave D.
 - M. Make one turn around Drive Sheave in a counterclockwise direction, above previous turn, and passing cable under itself to Pulley K.
 - N. Make $\frac{1}{2}$ turn around Pulley K in a counterclockwise direction, continuing to front of stringing bracket above cable already there, and around end of bracket (Point L) to screw M.
 - O. Place one turn around screw M in a clockwise direction passing cable under itself.
 - P. Tighten screw lightly.
 - Q. Make stringing taut. To make taut, grasp end of cable with a pair of long nose pliers placing several turns around end. Using motor block for support, continue wrapping cable around pliers until cable is taut (see Figure 20).
 - R. Tighten screw M securely and check cable tension by measuring the force required to displace it a given distance. With the arm at the extreme right, measure the force required to displace the center of the longest span of the cable $\frac{1}{4}$ inch past the vertical wall of the motor assembly trough. The measured force must be between the limits of 14 ounces and 20 ounces (see Figure 21).
 - S. If the X-axis cable tension must be readjusted, move the two pulleys nearest the paper alignment bar in their elongated mounting holes. If enough adjustment is not present, restrin the X-axis.
 - T. Cut off remaining portion of cable leaving approximately $\frac{1}{2}$ inch.
 - U. Replace paper alignment bar and platen.
 - V. Tighten screw G.
4. Align the X-axis as follows:
 - A. Loosen two end screws on paper alignment bar. Remove two No. 6-32 screws at bottom edge of platen and loosen the other four platen screws.
 - B. Install pen and sheet of graph paper. Make sure graph paper is properly aligned against bottom paper stop.
 - C. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
 - D. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

- E. Set Switch "1" ON in Switch Register.
- F. Press PRESET (or EXTERNAL PRESET) switch and then press RUN Switch.
- G. All horizontal lines (3) must align within 0.010 inch of pre-printed grid. Move one end of paper alignment bar up or down to effect alignment (see Figure 16).

NOTE

After X alignment, Y axis must be realigned.

- 5. Align the Y-axis as follows:
 - A. Loosen the two screws securing Y arm to motor block.
 - B. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
 - C. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.
 - D. Set Switch "1" ON in Switch Register.
 - E. Press PRESET (or EXTERNAL PRESET) switch and then press RUN Switch.
 - F. All vertical lines (3) must align within 0.010 inch of preprinted grid. Move lower end of arm to right or left to effect alignment (see Figure 16).
 - G. Tighten screws on motor block and tighten screw securing stringing on lower slider bracket.
- 6. Readjust the X-axis gear train backlash as follows:
 - A. Loosen two screws securing the knurled eccentric adjustment (Figure 23).
 - B. Move arm back and forth in short strokes and adjust eccentric by turning Knurled Knob until there is no discernible backlash. If backlash is too tight, a grinding sound will be evident when moving the arm a distance. If backlash is too loose, a knocking or clicking sound will be evident.
 - C. Tighten screws.
- 7. Check X-axis mylar drive belt tension by verifying that the force required to move the carriage arm with the motor pulley held stationary is between 6 and 7 pounds (see Figure 22).

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X DRIVE BEARING REPLACEMENT (continued)

8. If necessary, adjust the belt tension as follows:
 - A. Loosen screws holding motor.
 - B. Move motor to adjust belt tension.
 - C. Tighten motor screws.
 - D. Measure tension, readjust if necessary. The force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 22).
9. Replace belt pulley bearings as follows:
 - A. Remove rear hood and platen.
 - B. Raise top hinged casting.
 - C. Loosen motor clamping screws and rotate motor until the belt is as loose as possible.
 - D. Remove two clamps holding eccentric pulley housing, slip drive belt off of pulley and pull assembly out of its hole from bottom.
 - E. Remove retaining ring from belt pulley shaft and slide shaft out of housing.
 - F. Remove defective bearing(s) and replace with a new bearing (Part No. 1410-0277).
 - G. Reassemble and reinstall pulley.
10. Adjust belt tension as follows:
 - A. Loosen screws holding motor.
 - B. Move motor to adjust belt tension.
 - C. Tighten motor screws.
 - D. Measure tension, readjust if necessary. The force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 22).
11. Reassemble Plotter.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

MECHANICAL ADJUSTMENTS

The pen carriage rolls in the carriage arm on four plastic rollers. To adjust rollers, remove rear hood, rotate black tab at upper end of scale 90° counter-clockwise, pull pen holder back, and open scale. Move pen carriage to upper end of arm so that 2-56 setscrew in carriage is aligned with notch in side of arm (see Figure 17). Adjust setscrew to minimize side-play of carriage within arm.

Move pen block to the lower end of arm so as to align lower setscrew with notch at lower end of arm, and repeat operation.

NOTE

Care should be taken not to adjust out all side-play.
This will cause mechanical drag and result in a poor
trace.

There are two gear meshes involved in the Y axis drive system. They must be adjusted in the proper sequence for best results. The backlash of the gear drive system may be adjusted as follows:

1. Remove rear hood.
2. Snap pen lift solenoid out of its holder.
3. Move arm to left until the rear adjusting setscrew at rear of motor block is in line with large access hole in rear wall.
4. Loosen gear locking screw in upper left corner of pen motor block.
5. Lightly pushing idler gear toward pen drive, turn adjusting screw in or out to attain minimum backlash between the two gears (see Figure 25).
6. Tighten gear locking screw.
7. Slightly loosen motor clamping screw located in center of motor block (Figure 26). Rotate motor slightly, first in one direction and then the other, while moving pen gear back and forth, until motor pinion rotates freely with minimum backlash. This procedure varies mesh between motor pinion and pen drive gear due to an eccentric mounting shoulder. A slight amount of backlash is desirable for optimum operation.
8. Tighten motor clamping screw and recheck for optimum backlash.
9. Reassemble Plotter.

Y-AXIS PEN CARRIAGE ADJUSTMENT

Y-AXIS BACKLASH ADJUSTMENT

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X GEAR TRAIN BACKLASH ADJUSTMENT

Backlash is the amount of distance one gear tooth may move before encountering another gear face. The adjustment should accomplish minimal backlash with no binding. Backlash of the gear drive system may be adjusted as follows:

1. Remove platen.
2. Raise hinged top casting.
3. Loosen two screws securing the knurled eccentric adjustment (Figure 23).
4. Move arm back and forth in short strokes and adjust eccentric by turning Knurled Knob until there is no discernible backlash. If backlash is too tight, a grinding sound will be evident when moving the arm a distance. If backlash is too loose, a knocking or clicking sound will be evident.
5. Recheck X belt tension by verifying that the force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 22).
6. If necessary, readjust the belt tension as follows:
 - A. Loosen screws holding motor.
 - B. Move motor to adjust belt tension.
 - C. Tighten motor screws.
 - D. Measure tension, readjust if necessary.
7. Replace platen and rear hood.

X-AXIS TRACK BEARING ADJUSTMENT

Adjustment of the X-axis track bearing is accomplished as follows:

1. Remove rear hood, and raise top casting.

CAUTION

CARE MUST BE TAKEN NOT TO DAMAGE POWER CONNECTORS OR FUSE HOLDER WHEN TOP IS TILTED TOO FAR BACK.

2. Move pen arm until it is opposite access slot in rear left corner of mechanical assembly (Figure 27).
3. Using a Phillips screwdriver, turn bearing adjusting screw until slight amount of clearance is detectable between five ball bearings and track rod.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

4. Reassemble recorder.

CAUTION

DO NOT OVERTIGHTEN THIS ADJUSTMENT.
THIS COULD RESULT IN BEARING AND TRACK
ROD DAMAGE.

The Y axis may be aligned as follows:

1. Remove rear hood.
2. Raise hinged top casting and loosen screw securing stringing on lower slider bracket (Figure 15).
3. Loosen the two screws securing Y arm to motor block.
4. Install pen and sheet of graph paper. Make sure graph paper is properly aligned against bottom paper stop.
5. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
6. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.
7. Set Switch "1" ON in Switch Register.
8. Press PRESET (or EXTERNAL PRESET) switch and then press RUN Switch.
9. All vertical lines (3) must align within 0.010 inch of preprinted grid. Move lower end of arm to right or left to effect alignment (see Figure 16).
10. Tighten screws on motor block and tighten screw securing stringing on lower slider bracket.

The X-axis may be aligned as follows:

1. Loosen two end screws on paper alignment bar. Remove two No. 6-32 screws at bottom edge of platen and loosen the other four platen screws.
2. Install pen and sheet of graph paper. Make sure graph paper is properly aligned against bottom paper stop.
3. Set GRAPH LIMIT controls for 10 in. x 15 in. plotting area.
4. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.
5. Set Switch "1" ON in Switch Register.

Y-AXIS ALIGNMENT

X-AXIS ALIGNMENT

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

X-AXIS ALIGNMENT (continued)

6. Press PRESET (or EXTERNAL PRESET) switch and then press RUN Switch.
7. All horizontal lines (3) must align within 0.010 inch of preprinted grid. Move one end of paper alignment bar up or down to effect alignment (see Figure 16).

NOTE

If X alignment is changed, Y axis must be realigned.

ELECTRICAL CHECKS

INPUT POWER CIRCUIT

Table 3. Input Power Circuit Check

Instrument Status:

1. Power cord plugged into Plotter only.
2. Two-amp fuse installed.
3. All printed circuit cards installed.

FUNCTION	MEASUREMENT POINTS	RESISTANCE LIMITS* (OHMS)		
		MIN	NOM	MAX
Power Switch OFF	Power cord high to low	>500 Meg		
Power Switch ON Voltage range 230V	Power cord high to low	4.5	9.5	
Power Switch ON Voltage range 200V	Power cord high to low	4	8	
Power Switch ON Voltage range 115V	Power cord high to low	1.1	3.3	
Power Switch ON Voltage range 100V	Power cord high to low	1	3	

*Use 427A VTVM or equivalent.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

Table 4. Power Supply Filter Check

Instrument Status:		
1. Power cord disconnected.		
2. All plug-in circuit boards removed.		
FILTER CAPACITOR ASSEMBLY	PINS ON MOTHER BOARD	APPROXIMATE RESISTANCE
C6 – 2100 uF	901 to Chassis*	2200 Ohms 5%
C5 – 15000 uF	97 to Chassis*	560 Ohms 5%
C8 – 4000 uF	92 to Chassis*	2200 Ohms 5%
C7 – 2100 uF	98 to Chassis†	2200 Ohms 5%
C9 – 4000 uF	90 to Chassis†	2200 Ohms 5%

*Connect low side of meter to chassis.
†Connect high side of meter to chassis.

POWER SUPPLY FILTER

Table 5. Power Supply Voltage Check

Instrument Status:		
1. Power cord connected between Variac and 7210A. Variac turned to zero.		
2. Boards A8 and A9 installed.		
SUPPLY	MEASUREMENT POINTS	LIMITS (VOLTS) MIN MAX
+17V	A8 Board +17V T.P.	+16.0 +18.0
-17V	A8 Board -17V T.P.	-16.0 -18.0
+19V	A8 Board Fuse Clip	+17 +24
-19V	A8 Board Fuse Clip	-17 -24
+5V	A9 Board +5V T.P.	+4.75 +5.25

POWER SUPPLY VOLTAGE

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

INSTRUMENT STATUS

FRONT PANEL CHECKOUT

To perform the Front Panel Checkout, the status of the instruments should be as follows:

1. All circuit boards installed.
2. Interface cable NOT connected.
3. 11 in. x 17 in. graph paper on platen and aligned with lower and left paper guides.

STAND-BY CIRCUIT TEST

To test the Stand-By Circuit, perform the following procedures:

1. Depress CHART HOLD, then POWER. The pen position remains unchanged and the paper is held firmly in place.
2. The servo is in a stand-by status. Manually displace the pen affirming this condition.
3. Depress LOWER LEFT. The unit comes out of stand-by and establishes a tight notch. Manually affirm.

MANUAL PEN CONTROL

To test the Manual Pen Control, perform the following procedures:

1. Manually move the pen to the left-hand margin; release and depress CHART HOLD, then depress PEN DOWN four or five times rapidly.
2. The pen will very rapidly strike the platen and return to the initial position without any hesitation each time.

LOWER LEFT CONTROL

To test the Lower Left Control, perform the following procedures:

1. Depress LOWER LEFT. The servo comes out of stand-by condition and establishes a tight notch. Manually affirm.
2. Check the range of the lower limit by rotating the X and Y LOWER LEFT controls. Make sure the paper is still referenced against the left edge of the platen.
3. Press PEN DOWN. As the pen passes the lower or the left edge, it will run in to the limit switch, causing the pen to rise and the error light to turn ON.
 - A. X Range 0.050 in. to the left of the left margin to past the 10.25 in. mark.
 - B. Y Range 0.050 in. below the bottom margin to past the 5.25 in. mark.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

To test the Upper Right Control, perform the following procedures:

1. Reference the lower limit position in the lower left corner of the 10 in. x 15 in. plot area.
2. Release and depress the CHART HOLD switch. Manually check to see that the servo is in stand-by condition.
3. Depress the graph limit switch labeled UPPER RIGHT. The servo comes out of stand-by condition and the pen moves to the upper right area of the graph paper.
4. Check the range of the upper limit by rotating the X and Y UPPER RIGHT controls.
 - A. X Range From left edge to the right mechanical stop.
 - B. Y Range From lower edge to the upper mechanical stop.

To check the Limit Switch, perform the following procedures:

1. Check the lower limit switching by positioning the pen in the lower left corner of the Plotter and manually displace the pen into the mechanical stops in both the X and Y directions. The servo will go into low gain status every time the pen goes into the limit switch. The servo will come out of low gain status in 1.3 seconds after pressing either LOWER LEFT or UPPER RIGHT buttons. In each case, as the pen nears the mechanical stop, the correcting force should reduce and the error light should come ON.
2. Check the upper right limit switching by positioning the pen near the upper right corner of the Plotter and manually displace the pen into the mechanical stops in both X and Y directions. In each case, as the pen nears the mechanical stop, the correcting force should reduce and the error light should come ON.

ELECTRICAL ALIGNMENT

To effect the Electrical Alignment, all circuit boards must be installed (see Figure 28) and the following adjustments performed in the order given. The Plotter is completely operable from the front panel.

1. Center all the adjustment pots on the servo amplifier board except Y Gain which should be extreme counterclockwise (viewed from the top).
2. Scale the graph limits for 10 in. x 15 in. plot.
3. Enter Plotter Diagnostic and Test Program into computer. If additional information is required refer to USE OF PLOTTER AND TEST PROGRAM, page 3-5.

UPPER RIGHT CONTROL

LIMIT SWITCH CHECK

INSTRUMENT STATUS

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

SERVO COMPENSATION ADJUSTMENT

To adjust the Servo Amplifier, perform the following procedures:

1. Set switch "7" ON. Press RUN.
2. Connect the 141A Oscilloscope to the AG (analog ground) and TPX (X test point) to see the X-error signal.

NOTE

The signal between TPX and AG and TPY and AG is the error signal for X-axis and Y-axis respectively.

3. Adjust the XC potentiometer such that the X-error signal has a flat top (see Figure 29) on both sides.
4. Connect the oscilloscope to TPY and adjust the YC such that the Y error signal has flat top (see Figure 29) on both sides.
5. To stop, set switch "15" ON.

DAC ALIGNMENT

To effect the DAC Alignment, perform the following steps:

1. Set switch "8" ON. Press RUN.
2. Adjustments (2) in this section are on DAC boards.
3. Connect the 141A to see the Y error signal.
4. Adjust the potentiometer on A7 Y-DAC board such that the error signal looks flat on the top on both sides.
5. Connect 141A to see the X-error signal and repeat the procedure in step 4 adjusting the X-DAC potentiometer.
6. To stop, set switch "15" ON.

X OFFSET ADJUSTMENT

To effect the X Offset Adjustment, perform the following steps:

1. Set switch "9" ON. Press RUN.
2. Connect 141A to see the X-error signal. Use 0.5 V/cm vertical sensitivity.
3. Adjust the zero in the center of the oscilloscope.
4. Adjust XOF such that the error signal is symmetrical about the zero line on the oscilloscope. (See Figure 30.)
5. To stop, set switch "15" ON.

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

To effect the Y Offset Adjustment, perform the following steps:

1. Set switch "10" ON. Press RUN.
2. Connect 141A to see the Y-error signal. Use 0.2 V/cm vertical sensitivity.
3. Adjust the zero in the center of the oscilloscope.
4. Adjust YOF such that the error signal is symmetrical about the zero line on the oscilloscope (Figure 30).
5. To stop, set switch "15" ON.
6. Repeat Servo Compensation Adjustment. Readjust XC and YC if necessary.

Y OFFSET ADJUSTMENT

To effect Y Deadband Adjustment, perform the following steps:

1. Disconnect oscilloscope.
2. Place the alignment plot on the platen reference to the lower left guide. Install a pen.
3. Turn YD potentiometer all the way clockwise looking from the top.
4. Set switch "11" ON. Press RUN.
5. The first line retraced should be open, parallel to each other and should not be wavy. If it is wavy – Y-axis has uneven friction. Check to see whether the carriage block or the gears are binding. Adjust if necessary.
6. Adjust YD such that the retrace closes completely.
7. To stop, set switch "15" ON.

Y-DEADBAND ADJUSTMENT

To effect X Deadband Adjustment, perform the following steps:

1. Turn XD potentiometer all the way clockwise looking from the top.
2. Set switch "12" ON. Press RUN.
3. The first line retraced should be open and parallel to each other. It should not be wavy. If it is wavy, X-axis has uneven friction. Check to see whether the mylar belt, the backlash between gears and the carriage block is causing any binding. Adjust if necessary.
4. Adjust XD potentiometer such that the retrace closes completely.
5. To stop, set switch "15" ON.

X-DEADBAND ADJUSTMENT

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS



Y-GAIN ADJUSTMENT

To effect the Y Gain Adjustment, perform the following steps:

1. Turn YG potentiometer all the way counterclockwise looking from the top.
2. Set switch "13" ON. Press RUN.
3. The first line retraced should be open, and parallel to each other.
4. Adjust YG such that the retrace closes completely. Readjust XC and YC if necessary.
5. To stop, set switch "15" ON.

The electrical alignment is now completed. None of the above adjustments should be changed.

MAINTENANCE ILLUSTRATIONS

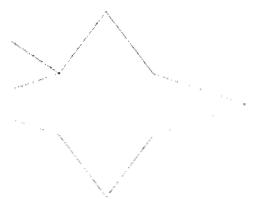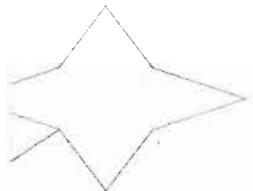

Verification Plot

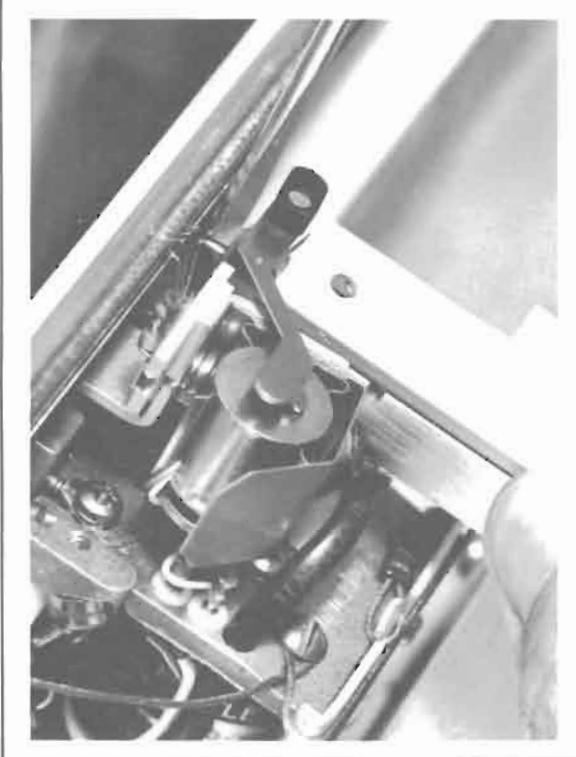


Figure 12. Y Slidewire Cover Removal



Carriage Adjustment


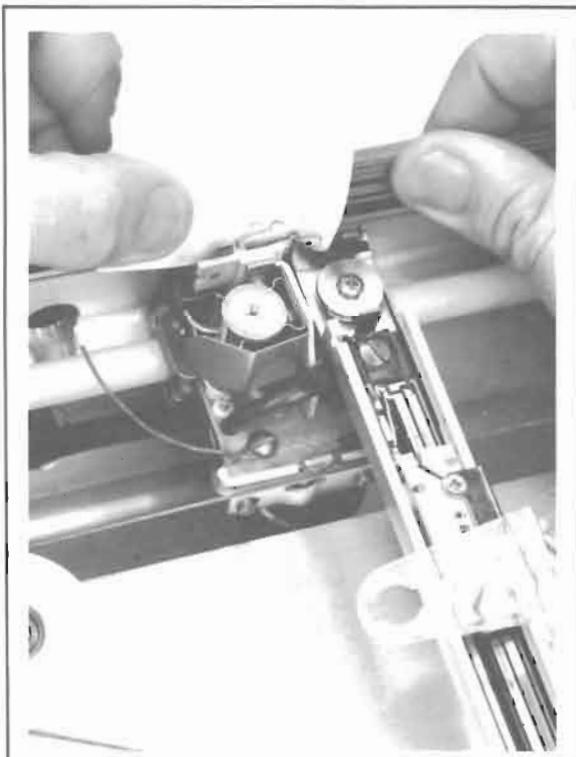


Figure 18. Wiper Protection

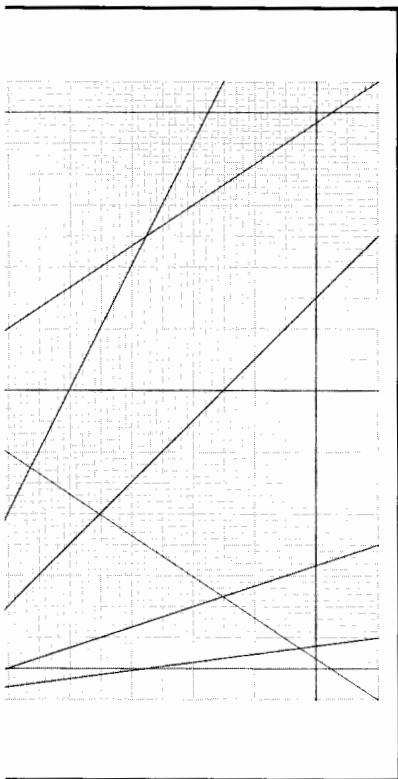

Verification Plot

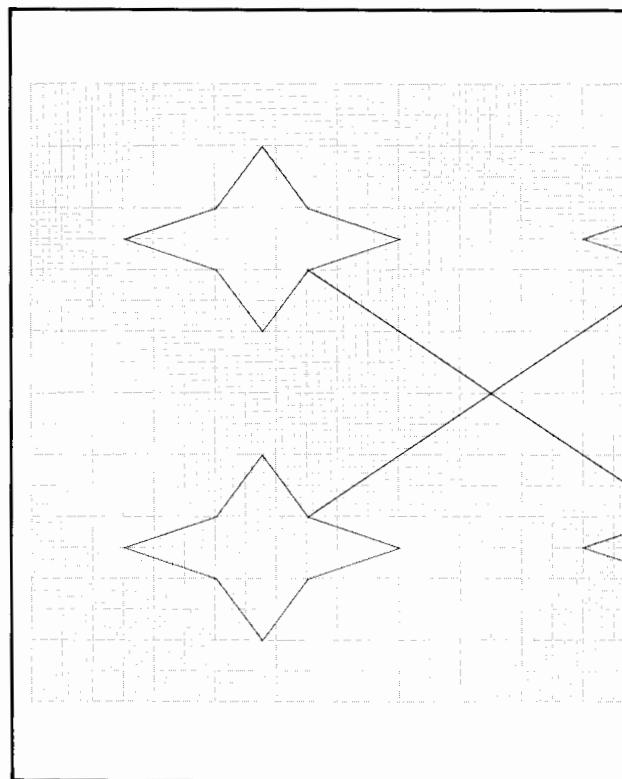


Figure 11. Second Performance Ve

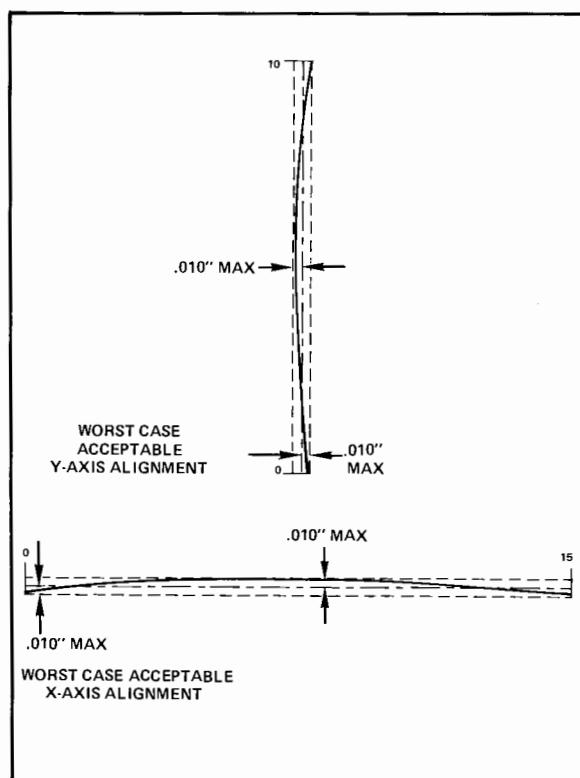


Figure 16. Worst Case Acceptable Alignment
(X-Axis and Y-Axis)



Figure 17. Pen

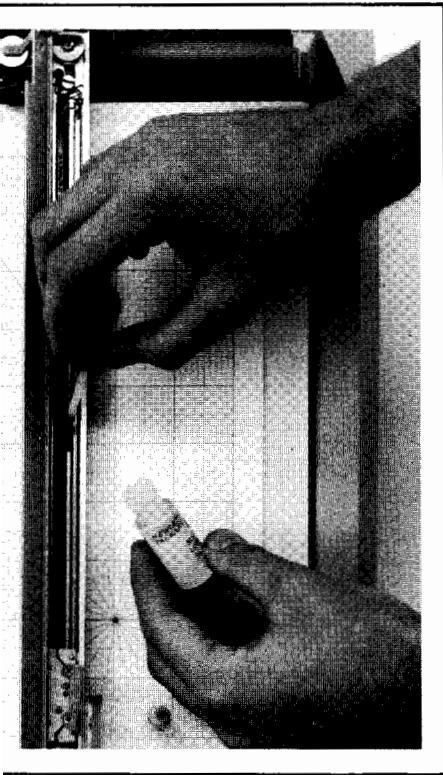


Figure 9. Slidewire Lubrication

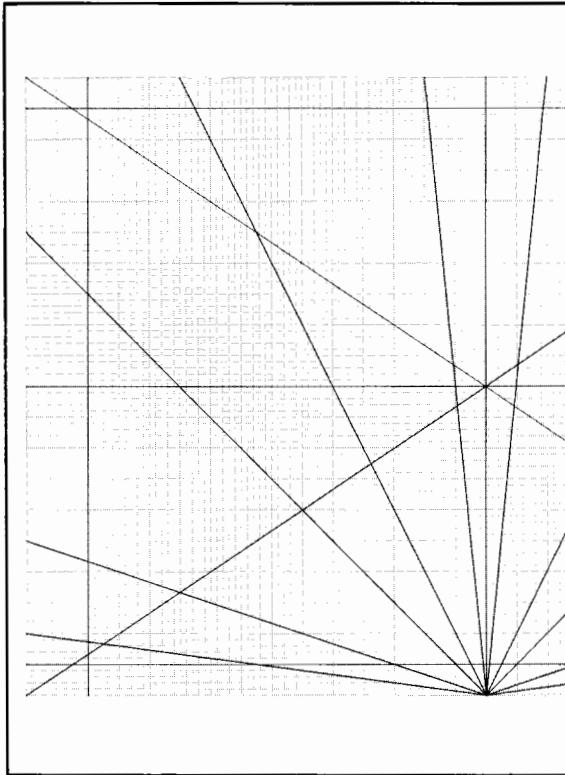


Figure 10. First Performance

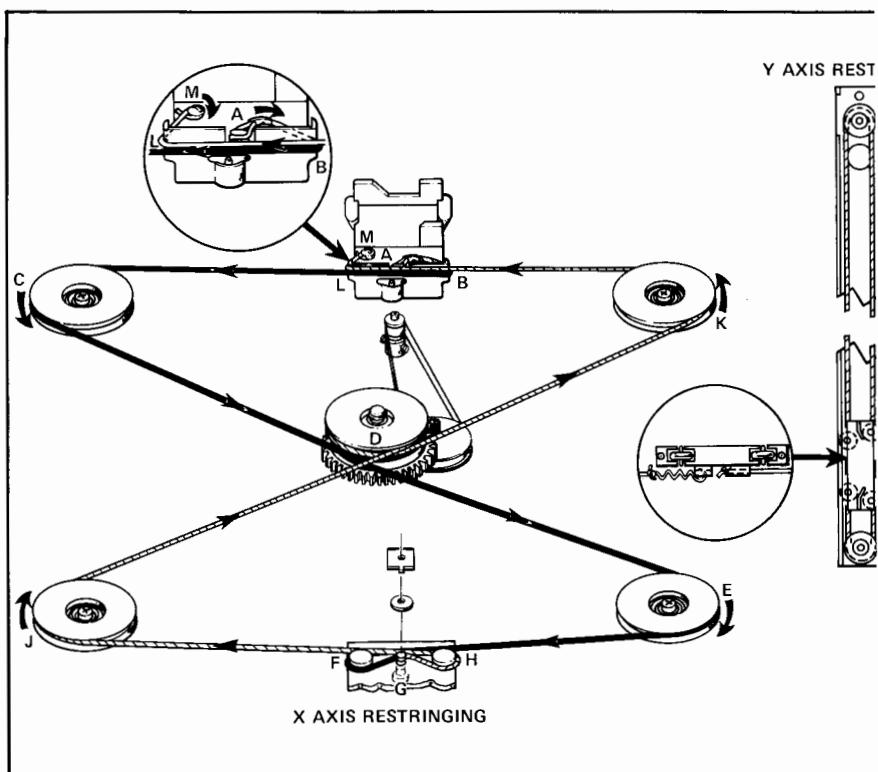
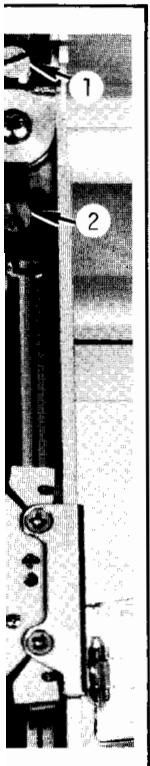


Figure 15. X and Y Axis Restrining

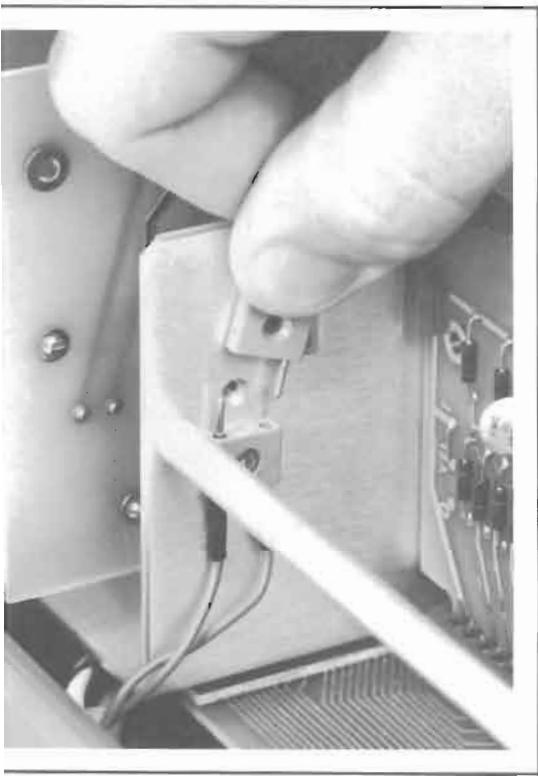


Figure 7. Autogrip Lead Removal

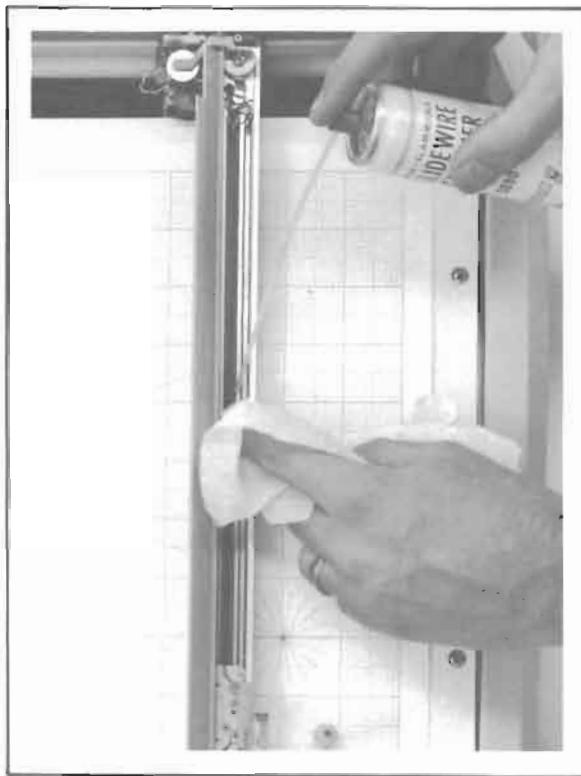


Figure 8. Slidewire Cleaning



Figure 9.

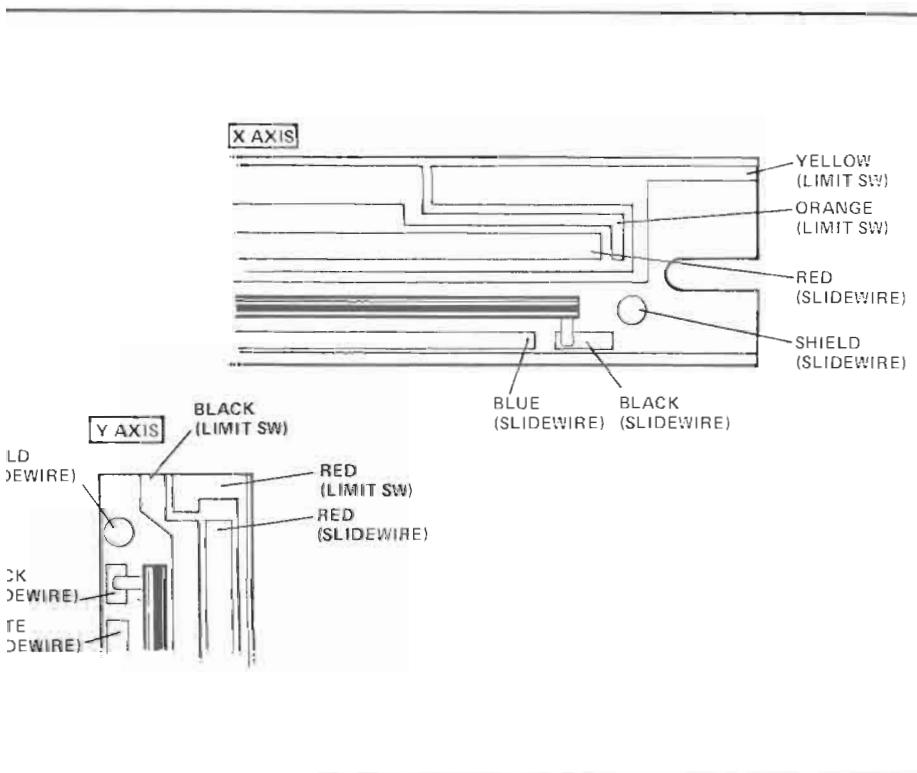


Figure 13. Slidewire Lead Connections

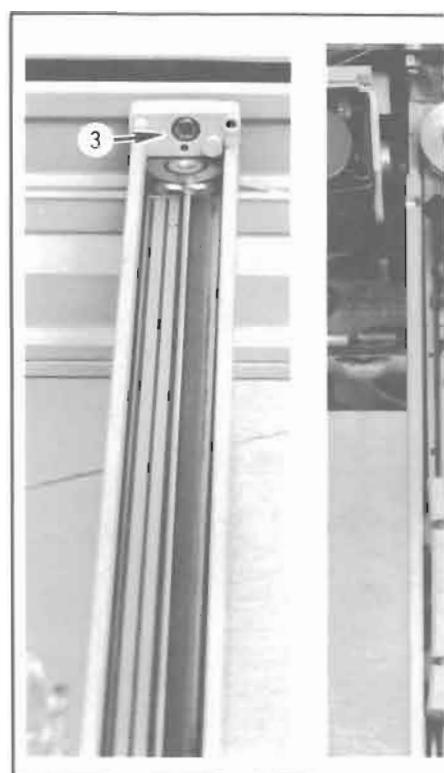


Figure 14. Carriage Arm Re

MAINTENANCE ILLUSTRATIONS

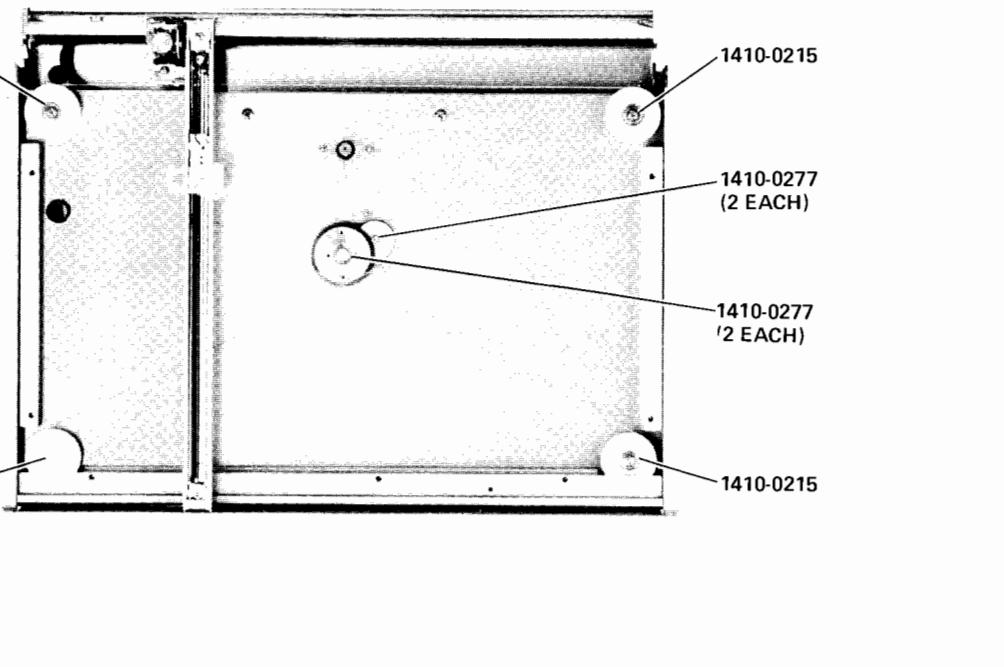


Figure 24. X-Axis Drive Train Bearing Locations

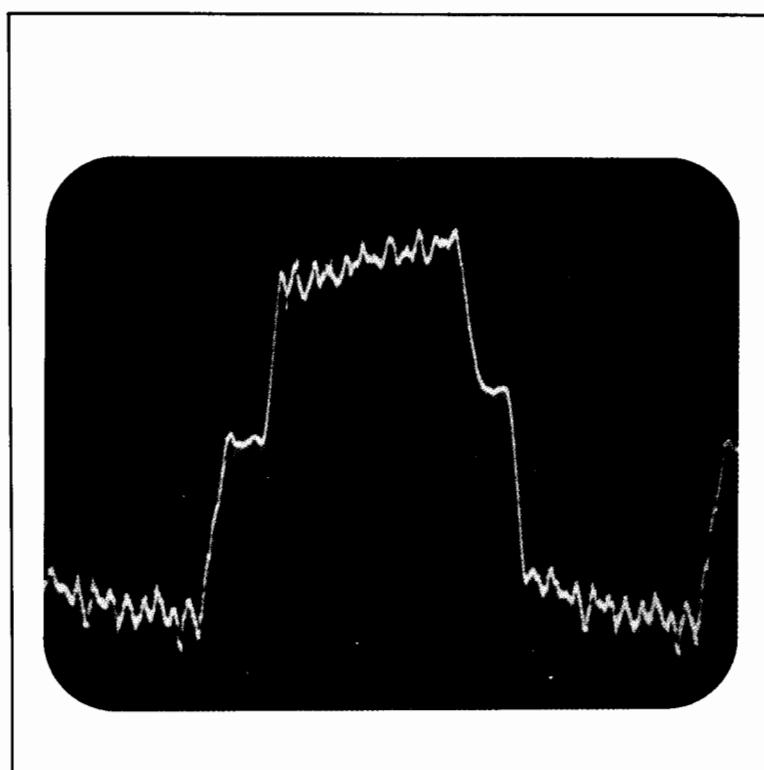


Figure 30. XOF and YOF Adjustment


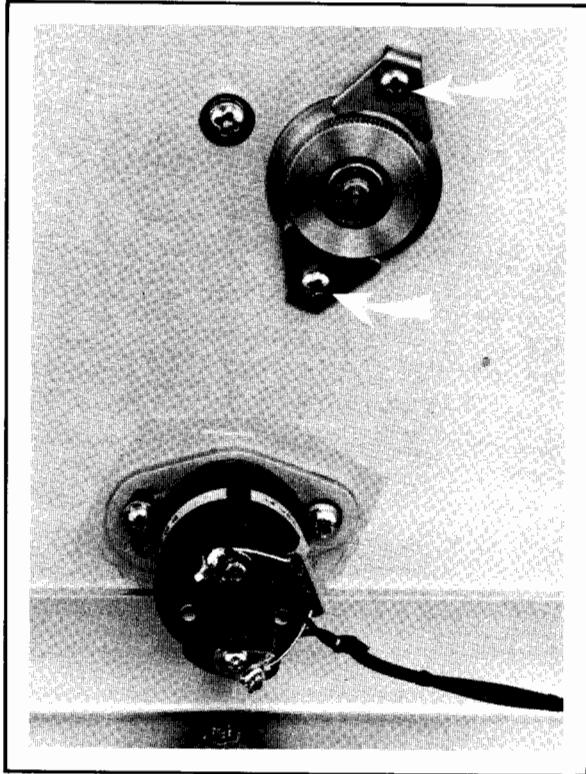


Figure 23. X-Axis Gear Train
Backlash Adjustment

1410-0215

1410-0215

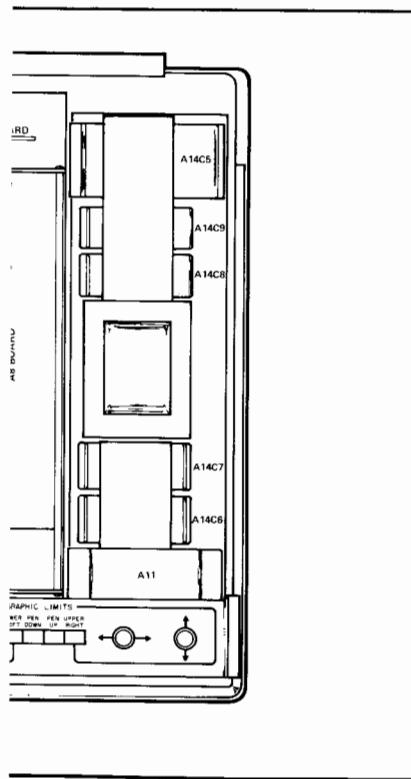

I Location

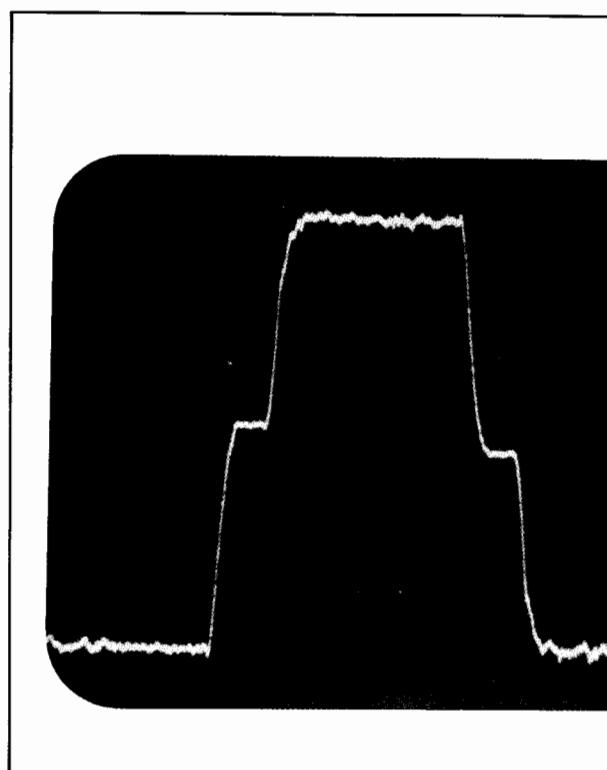


Figure 29. XC and YC Adjustment

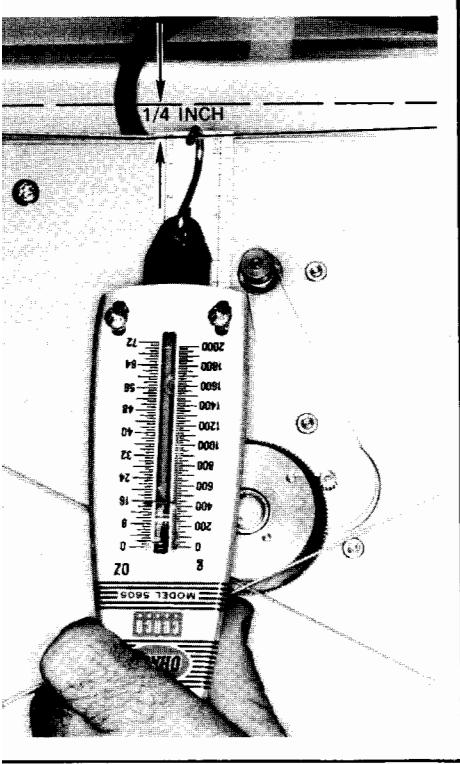


Figure 21. X-Axis Cable Tension Check

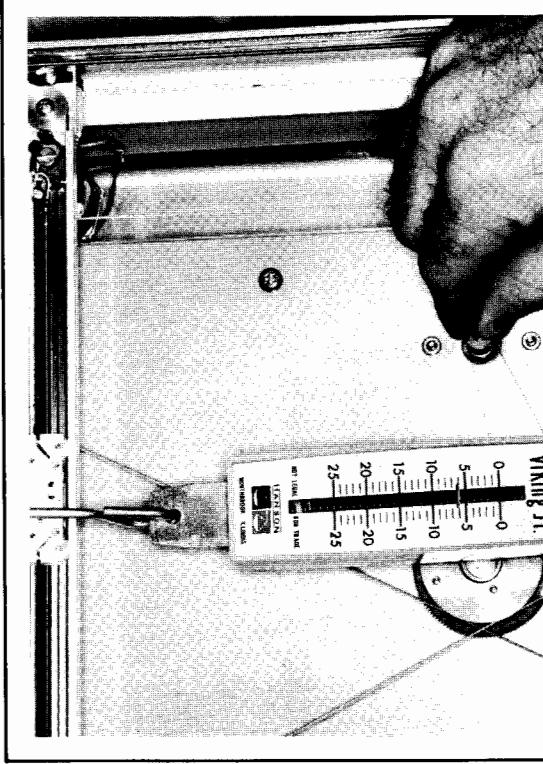


Figure 22. X-Axis Belt Tension Check

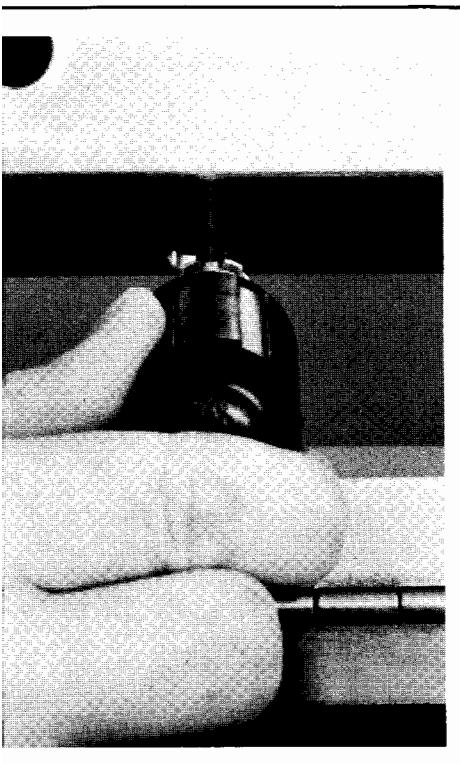


Figure 27. X-Axis Track Bearing Adjustment

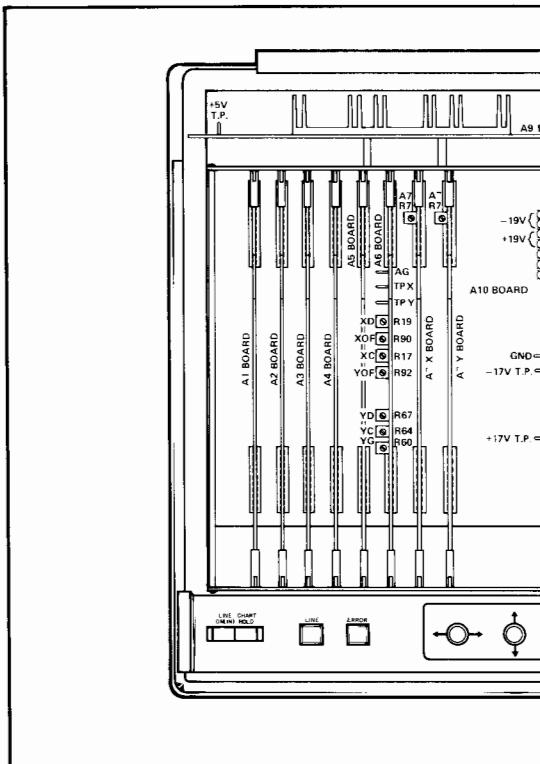


Figure 28. Circuit Board

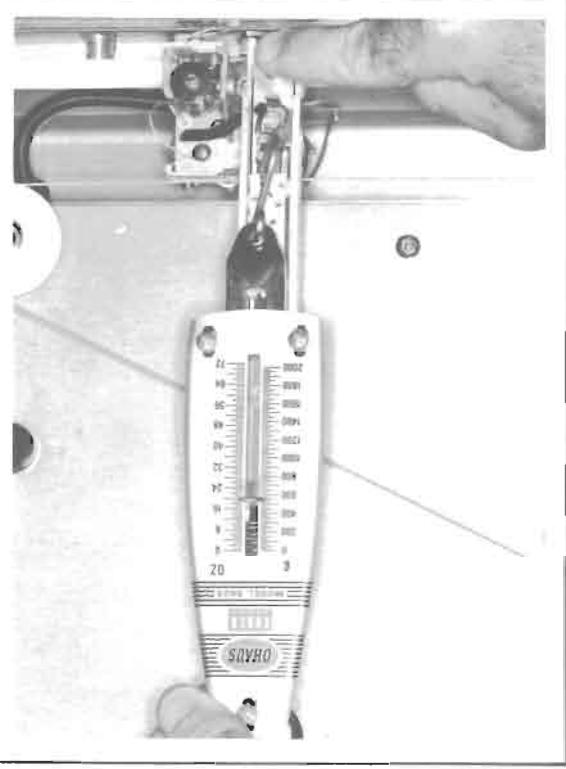


Figure 19. Y-Axis Drive String Tension Check

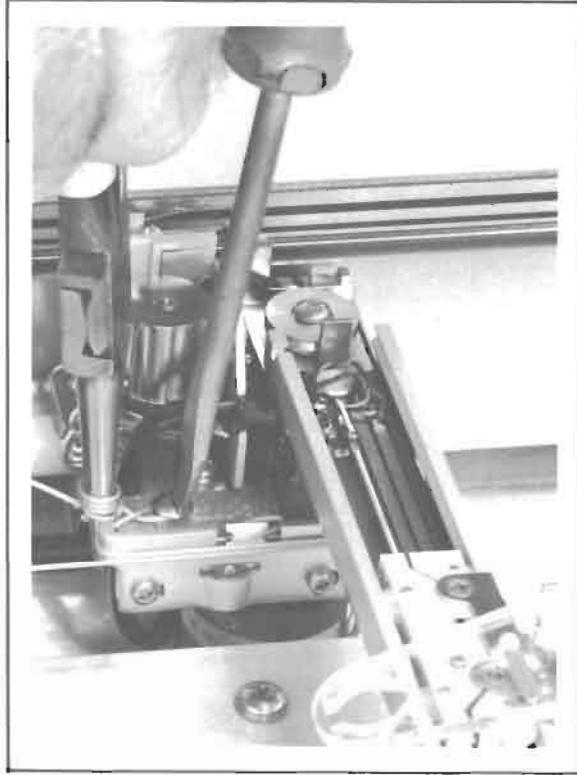


Figure 20. X-Axis Cable Tightening



Figure 21.

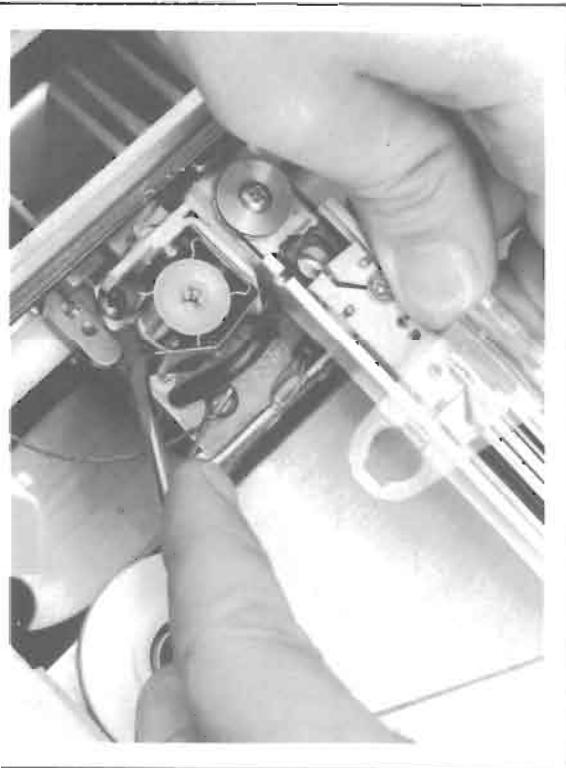


Figure 25. Y-Axis Gear Train Backlash Adjustment

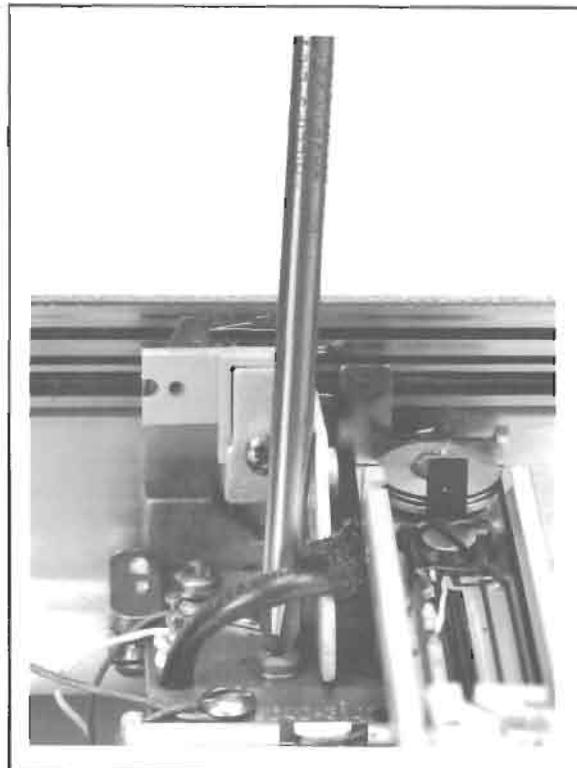


Figure 26. Y-Axis Motor Clamp Screw



Figure 27.

MECHANICAL PARTS LISTS

This chapter contains mechanical parts lists. The parts lists are supplemented by exploded views to aid in parts identification. Consistent with the maintenance and troubleshooting procedures presented in this manual, the electrical parts list in this chapter indicates only assemblies rather than individual components. The electrical component parts lists are included in Appendix F.

To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Sales/Service Office (see rear of manual for address of nearest HP office). Order should include part number and description used in this chapter. If required part is not listed in this chapter, provide model and serial numbers, description of part, and function and location of part.

ORDERING INFORMATION

MECHANICAL PARTS LISTS

PARTS LIST

Table 6. Parts List

Accessory Kit (HP Part No. 07210-80010)		
Description	Part Number	Quantity
Disposable Pen, Red	5081-1190	Pkg. of 3
Disposable Pen, Blue	5081-1191	Pkg. of 3
Disposable Pen, Black	5081-1193	Pkg. of 3
Slidewire Cleaner	5080-3605	1 Can
Slidewire Lubricant	5080-3935	1 Bottle
Fuse, 1 Amp (230V only)	2110-0312	1
Paper Supplies Available		
The following papers are 11 in. by 16.5 in. (28 cm by 42 cm) or 8.5 in. by 11 in. (21.6 cm by 28 cm) overall and are packaged 100 sheets per box.		
	Plot Area	Part No.
LINEAR:	10 in. x 15 in.	9270-1004
	25 cm x 38 cm	9270-1024
	7 in. x 10 in.	9270-1006
	18 cm x 25 cm	9270-1023
SEMI-LOG	10 in. x 2 cycle	9280-0159
	10 in. x 3 cycle	9280-0160
	2 cycle x 15 in.	9280-0169
	3 cycle x 15 in.	9280-0168
LOG-LOG:	2 cycle x 3 cycle	9280-0167
	3 cycle x 2 cycle	9280-0165
	3 cycle x 4 cycle	9280-0171
BLANK (WITH SCALING POINTS)	10 in. x 15 in.	9280-0180

MECHANICAL PARTS LISTS

Table 6. Parts List (Continued)

Pen Supplies Available			
Description		Part Number	
		Fiber Tip	
Package of 3 red pens		5081-1190	
Package of 3 blue pens		5081-1191	
Package of 3 green pens		5081-1192	
Package of 3 black pens		5081-1193	
Circuit Board Assemblies			
Circuit Symbol	Description	Part Number	
A1	Interface Board	New Only	07210-60030
A2	ROM Control Board	New Rebuilt	09862-60020 09862-60320
A3	Control Flop Board	New Rebuilt	09862-60030 09862-60330
A4	Memory Board	New Rebuilt	09862-60040 09862-60340
A5	Time Cycle Board	New Rebuilt	09862-60050 09862-60350
A6	Servo Board	New Rebuilt	09862-60070 09862-60370
A7	DAC Board	New Rebuilt	09862-60060 09862-60360
A8	Rectifier Board	New Rebuilt	09862-60080 09862-60380
A9	Power Driver Board	New Rebuilt	09862-60090 09862-60390
A10	Mother Board	New Only	07210-60100
A11	Chart Hold Supply Board	New Only	09862-60110


MECHANICAL PARTS LISTS

PARTS LIST (continued)

Table 6. Parts List (Continued)

Miscellaneous Parts	
Description	Part Number
Knob, Panel	0370-1095
Fuseholder	1400-0084
Lens Cap, White	1450-0484
Lens Cap, Yellow	1450-0485
Lamp Holder Assembly	1450-0496
Dust Cover	4040-0477
Power Cord	8120-1378
Shipping Carton Assembly (Consisting of the following four parts)	09125-80210
Insert, Top Half	9220-1685
Insert, Bottom Half	9220-1686
Outer Box	9221-0972
Plastic Bag, 30 in. x 30 in.	9222-0322
Autogrip Table	09125-80250
Case Assembly – Top Casting	09125-60330

MECHANICAL PARTS LISTS

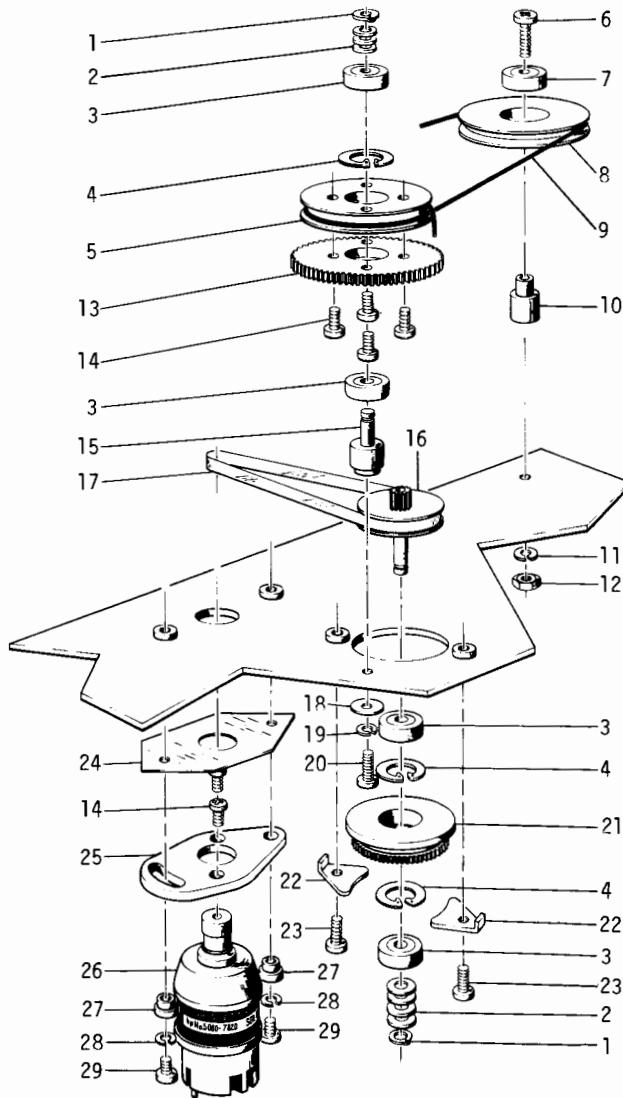

<u>Item</u>	<u>HP Part No.</u>	<u>Description</u>	<u>Item</u>	<u>HP Part No.</u>	<u>Description</u>
1	0510-0238	Ring - Retaining	16	07035-62160	Clutch Assembly, X-Axis
2	2190-0181	Washer - Shim, .191 ID x .311 OD	17	1500-0216	Belt-Drive
3	1410-0277	Bearing-Ball	18	3050-0399	Washer-Flat, .138 ID x 3/8 OD
4	0510-0742	Ring - Retaining	19	2190-0105	Washer-Lock, No. 6
5	09125-20010	Sheave X-Axis	20	2460-0033	Screw-Mach, 6-32 x 5/16, PH, SST, PD
6	2460-0017	Screw-Mach, 6-32 x 3/4, PH, PD	21	07035-22120	Housing-Bearing
7	1410-0215	Bearing-Ball	22	07035-02090	Clamp-Housing
8	17999-06494	Pulley-Cable	23	2360-0062	Screw-Mach, 4-40 x 3/8, PH, SST, PD
9	5080-7717	X-Axis Restrtring Kit	24	07035-22440	Insulator-Motor Plate
10	09125-20090	Stud-Pulley	25	07035-22450	Motor-Plate
11	2190-0007	Washer, No. 6, LK WASH	26	5080-7820	Motor Assembly
12	2420-0002	Nut-Hex, 6-32, SST	27	07035-22430	Washer-Motor Plate
13	07035-20940	Gear-Clutch, 123T, X-Axis	28	2190-0108	Washer-Lock, No. 4
14	0520-0065	Screw-Mach, 2-56 x 3/16, PH, SST, PD	29	2200-0048	Screw-Mach, 4-40 x 3/8, PH, SST, PD
15	09125-20130	Stud-Gear Mount			

Figure 31. X-Axis Drive Assembly

MECHANICAL PARTS LISTS

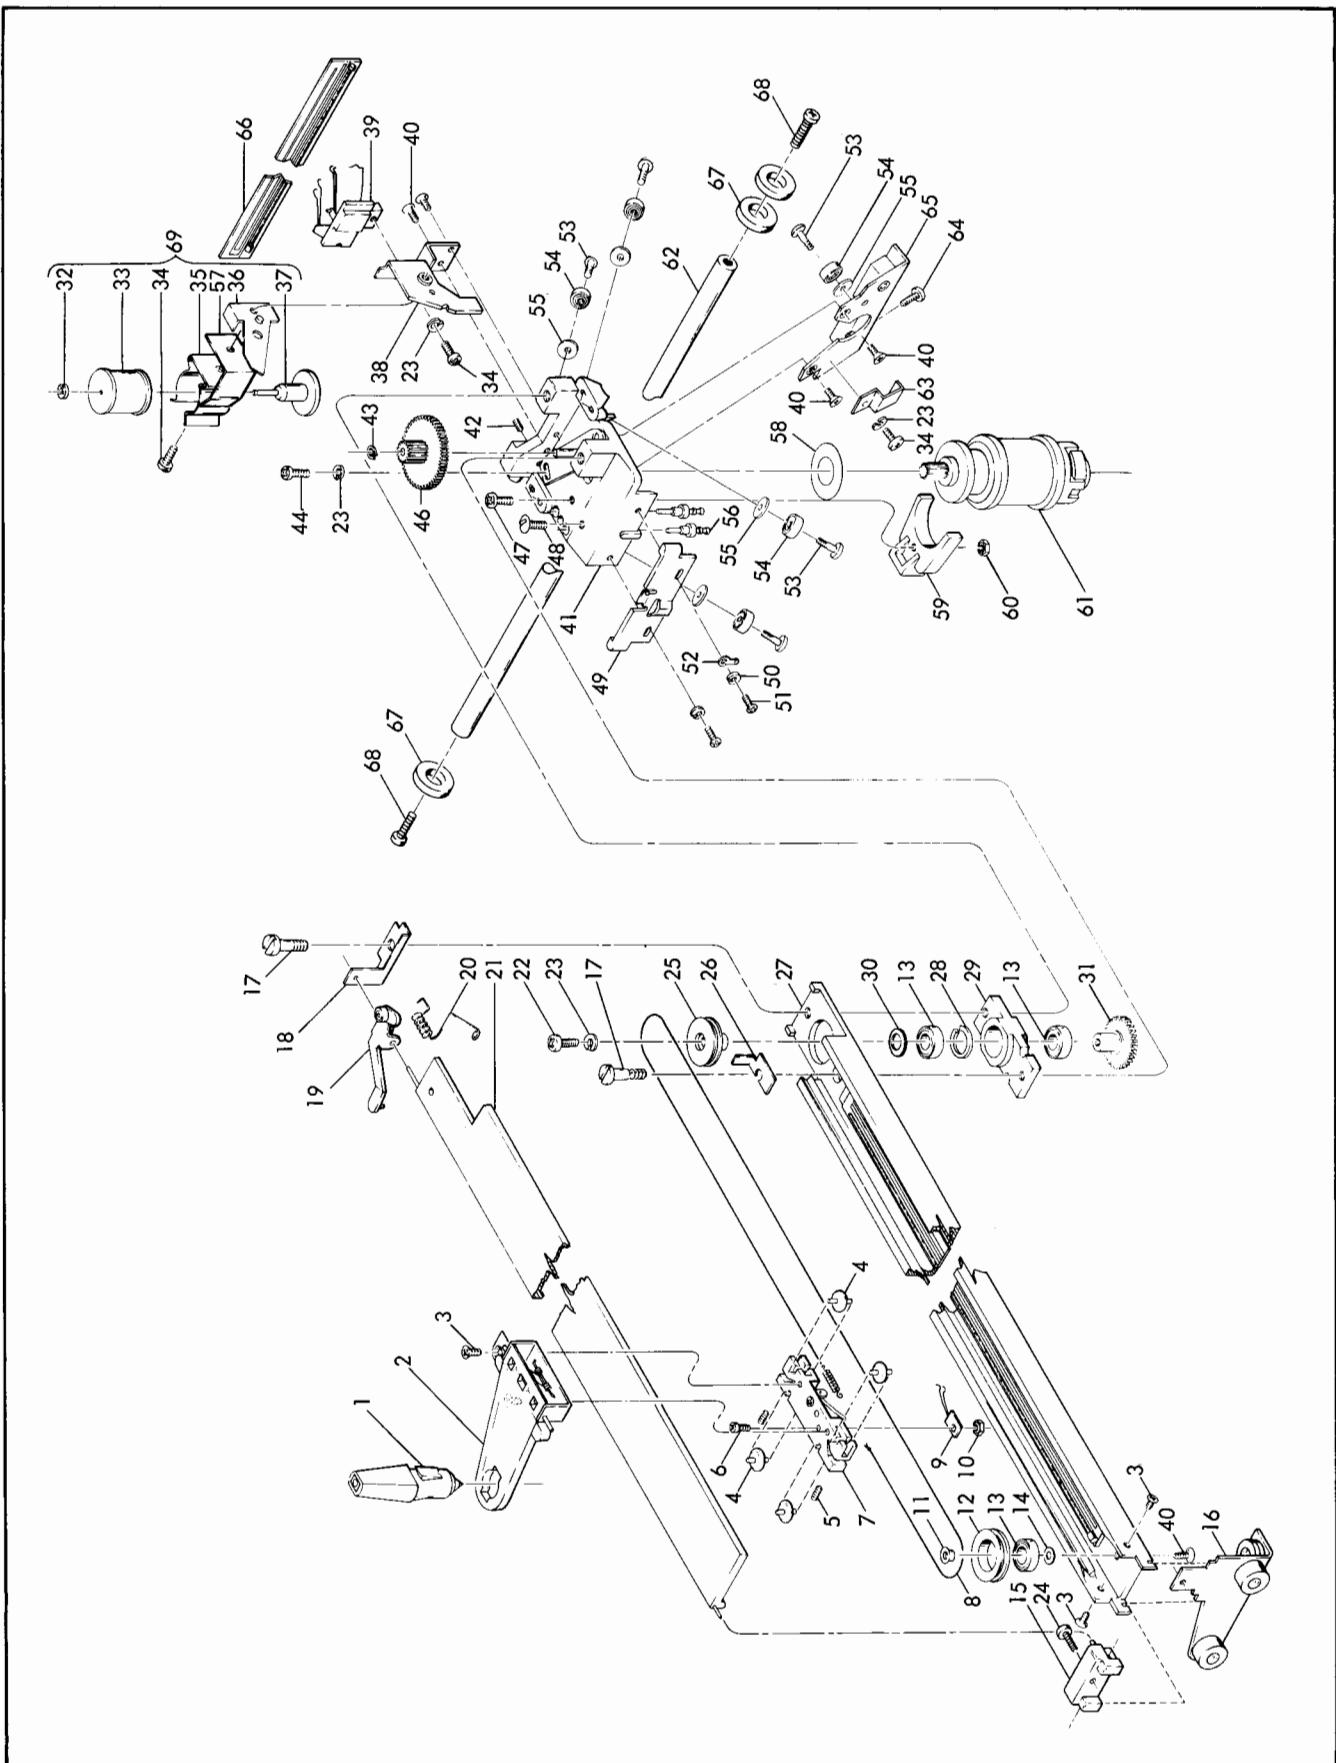


Figure 32. Pen Arm Assembly (Sheet 1 of 2)

MECHANICAL PARTS LISTS

Ref. Desig.	Part Number	Description	Quantity
1	5081-1190	Pen - Disposable, red (package of 3)	As Required
	5081-1191	Pen - Disposable, blue (package of 3)	As Required
	5081-1192	Pen - Disposable, green (package of 3)	As Required
	5081-1193	Pen - Disposable, black (package of 3)	As Required
2	5060-6649	Holder, Pen	1
3	0525-0059	Screw - Mach, ss, 2-56 x .188 FH POZI D	4
4	07035-60860	Wheel Assembly, Pen Carriage	4
5	3030-0412	Screw - Set. 2-56 x .125, Allen	2
6	0570-0190	Screw - Mach, ss, 0-80 x .125 Fill H PD	1
7	5080-8135	Carriage Block and Wiper Assembly	1
8	07200-60280	Cable Assembly, Pen Carriage	1
9	09125-60110	Wiper Assembly (Y axis Limit Switch)	1
10	0590-0419	Nut - Hex, 0-80	1
11	07035-20240	Stud, Return Pulley	1
12	07035-20200	Pulley, Return	1
13	1410-0269	Ball Bearing	3
14	3050-0394	Washer - No. 4, Flat	2
15	09125-40060	Block Assembly, Pen Arm	1
16	07005-60260	Bracket Assembly - Slider	1
17	07035-20350	Screw, Shouldered	2
18	07035-00230	Mount - Rear, Scale	1
19	5060-6538	Pen Lift Assembly	1
20	1460-1201	Spring, Pen Lift	1
21	09125-60140	Slidewire Cover	As Required
22	2200-0145	Screw - Mach. ss, 4-40 x 7/16, PH POZI D	1
23	2190-0108	Washer - Lock, No. 4	4
24	2220-0726	Screw, Mach, 4-40 x 5/16, Fill, SSTL	1
25	07035-22180	Pulley, Drive	1
26	07005-20410	Stop, Pen Carriage	1
27	5060-6536	Pen Arm Assembly	1
28	0510-0940	Retaining Ring	1
29	07035-20330	Block, Arm Mounting	1
30	2190-0125	Shim - ss, 0.093 ID, 0.156 OD, 0.012 THK	As Required
31	07004-60070	Pen Drive Assembly	1
32	0510-0810	Retaining Ring	1
33	09862-60160	Solenoid Assembly	1
34	2270-0022	Screw - Mach. ss, 4-40 x .188, PH PD	1
35	1400-0340	Holder, Solenoid Assembly	1
36	07005-00730	Pointer, Index	1
37	09125-20350	Plunger Assembly, Solenoid	1
38	5060-4569	Bracket Assembly - Coil and Wiper	1
39	5080-8127	Wiper Assembly, X axis	1
40	2200-0164	Screw - Mach, ss, 4-40 x 3/16 FH PD	5
41	09125-60270	Motor Block Assembly	1
42	3030-0208	Screw - Set, 4-40 x .125, Allen	3
43	0510-0724	Retaining Ring	1
44	2200-0139	Screw - Mach. ss, 4-40 x .25 PH POZI D	1
45	3050-0394	Washer - Flat, .130 ID, .25 OD, .02 THK	1
46	07004-60060	Gear Assembly, Pen Drive	1
47	2200-0145	Screw - Mach. ss, 4-40 x .438, PH POZI D	1
48	2200-0710	Screw - Mach. ss, 4-40 x .375, TH SD	1
49	5020-4225	Yoke, Cable	1
50	2190-0094	Washer - Lock, No. 2	2
51	0520-0066	Screw - Mach. ss, 2-56 x .188 PH PD	2
52	0360-0243	Terminal Lug	1
53	0570-1103	Screw, Shoulder	5
54	1410-0941	Ball Bearing	5
55	3050-0367	Washer - Flat, .105 ID, ¼ OD, 1/64 THK	5
56	0360-1626	Stud, Terminal	2
57	09862-00110	Shield, Solenoid	1
58	07035-22440	Insulator, Mylar	1
59	09125-40030	Cleat, Motor	1
60	2260-0007	Nut, 4-40	1
61	5080-7966	Servo Motor	1
62	09125-20210	Rod, Track	2 in.
63	07004-00350	Clamp, Trailing Cable	1
64	2200-0048	Screw - Mach. ss, 4-40 x .375 PH PD	1
65	09125-60280	Bearing Adjustment Assembly	1
66	5060-6537	X axis Slidewire and Limit Switch Assembly	1
67	09125-20070	Bumper	3
68	2360-0209	Screw - Mach. 6-32 x 1.00, SST, Pan, POZI	2
69	09862-60200	Pen, Solenoid, Complete	1

Figure 32. Pen Arm Assembly (Sheet 2 of 2)

TROUBLESHOOTING

This Chapter contains instructions for troubleshooting the 7210A. A Printed Circuit Board Location drawing (Figure 28, Chapter 3), a Troubleshooting Chart (Figure 33) and a Wiring Diagram are supplied to aid in troubleshooting. Schematics are contained in Appendix C.

Troubleshooting of the 7210A should be performed in a logical manner. The concept of bracketing should be employed such as establishing which section is not operational or operating abnormally. This is generally the fastest method to locate trouble in a unit. The Block Diagram (Figure 2) and Logic Flow Diagram (Appendix B) may be utilized to assist troubleshooting. However, the Troubleshooting Chart should serve as the prime troubleshooting guide.

Malfunctions not caused by improper adjustments may be detected by referring to the Troubleshooting Chart (Figure 33).

CONTENT

REQUIREMENTS

TROUBLESHOOTING CHART

TROUBLESHOOTING

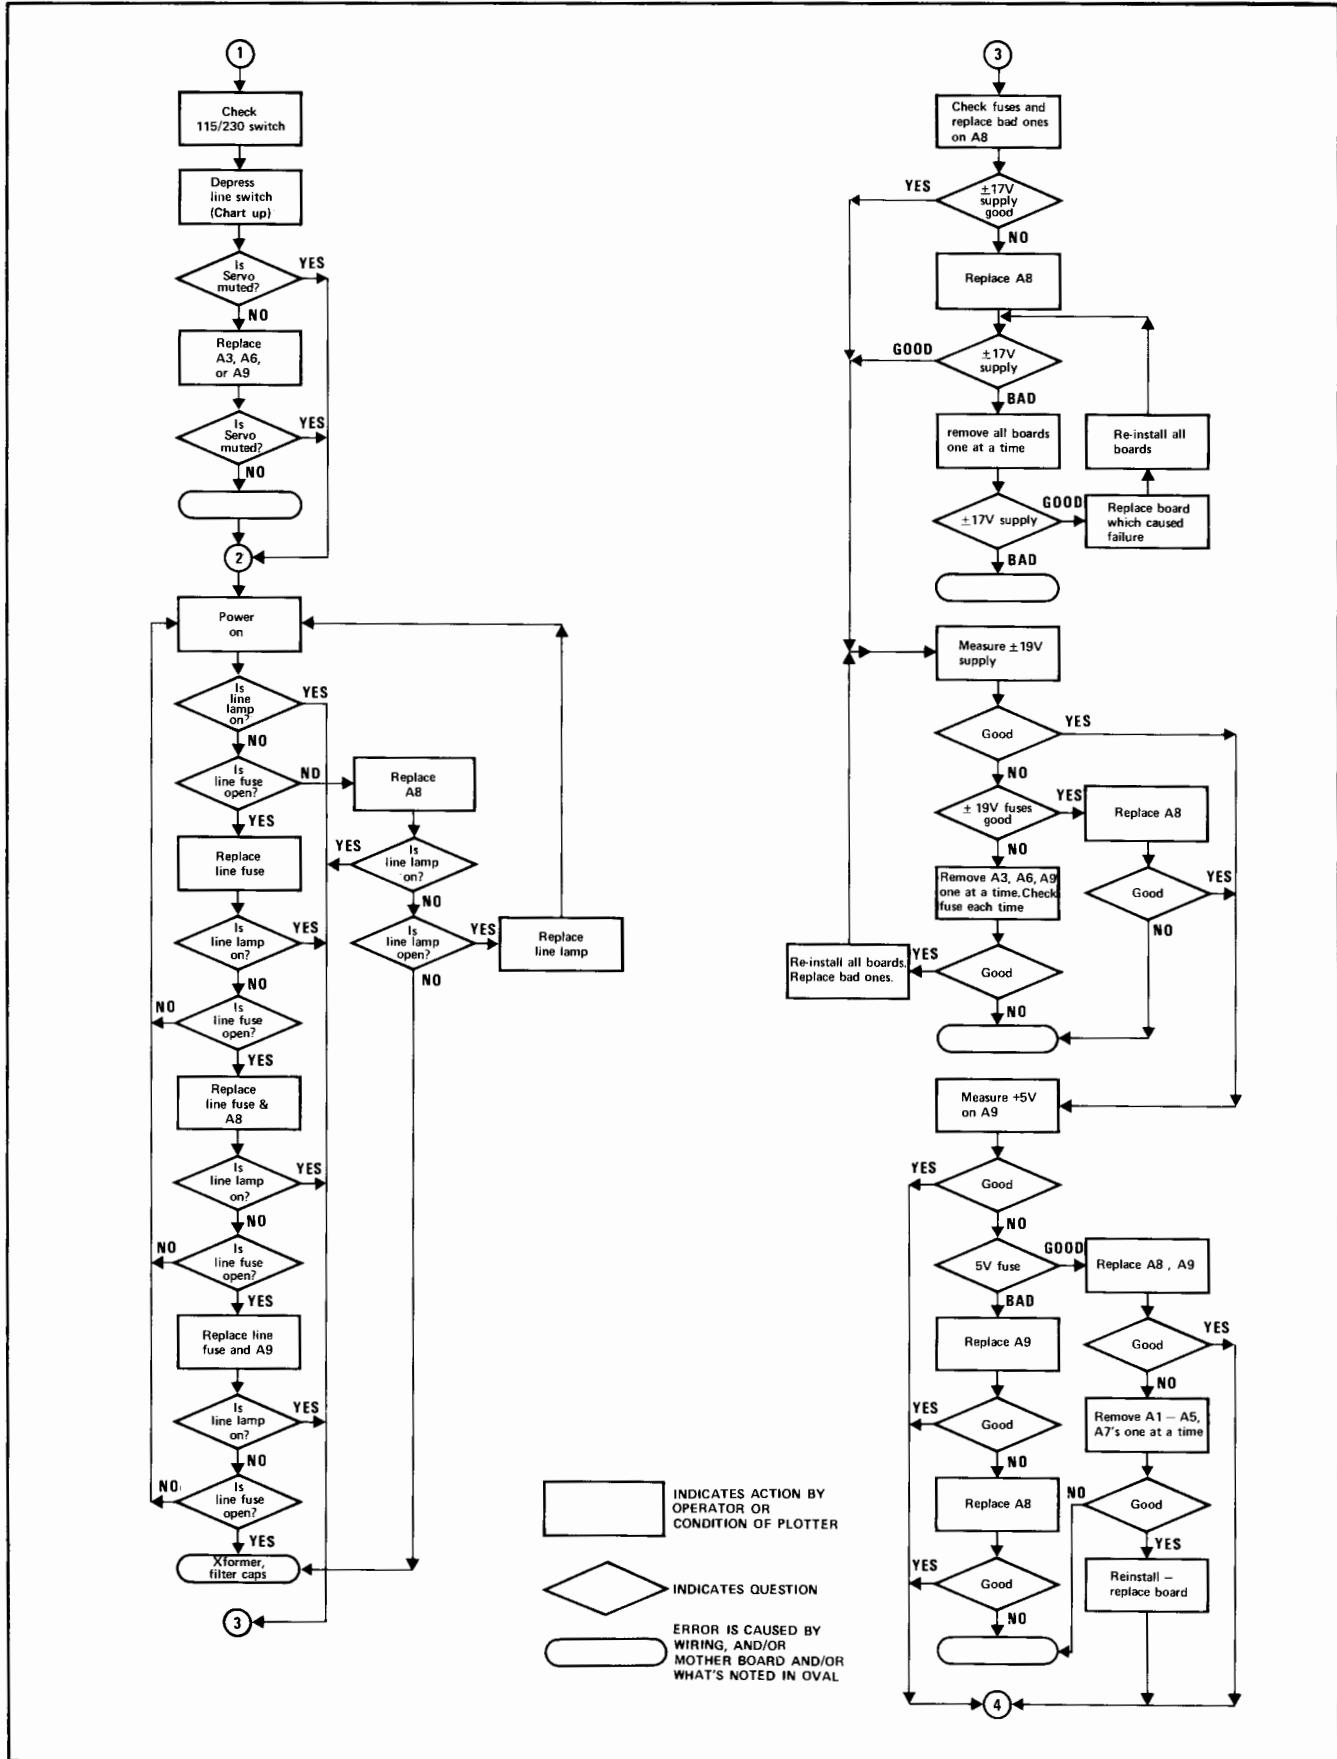


Figure 33. Troubleshooting Chart (Sheet 1 of 5)

TROUBLESHOOTING

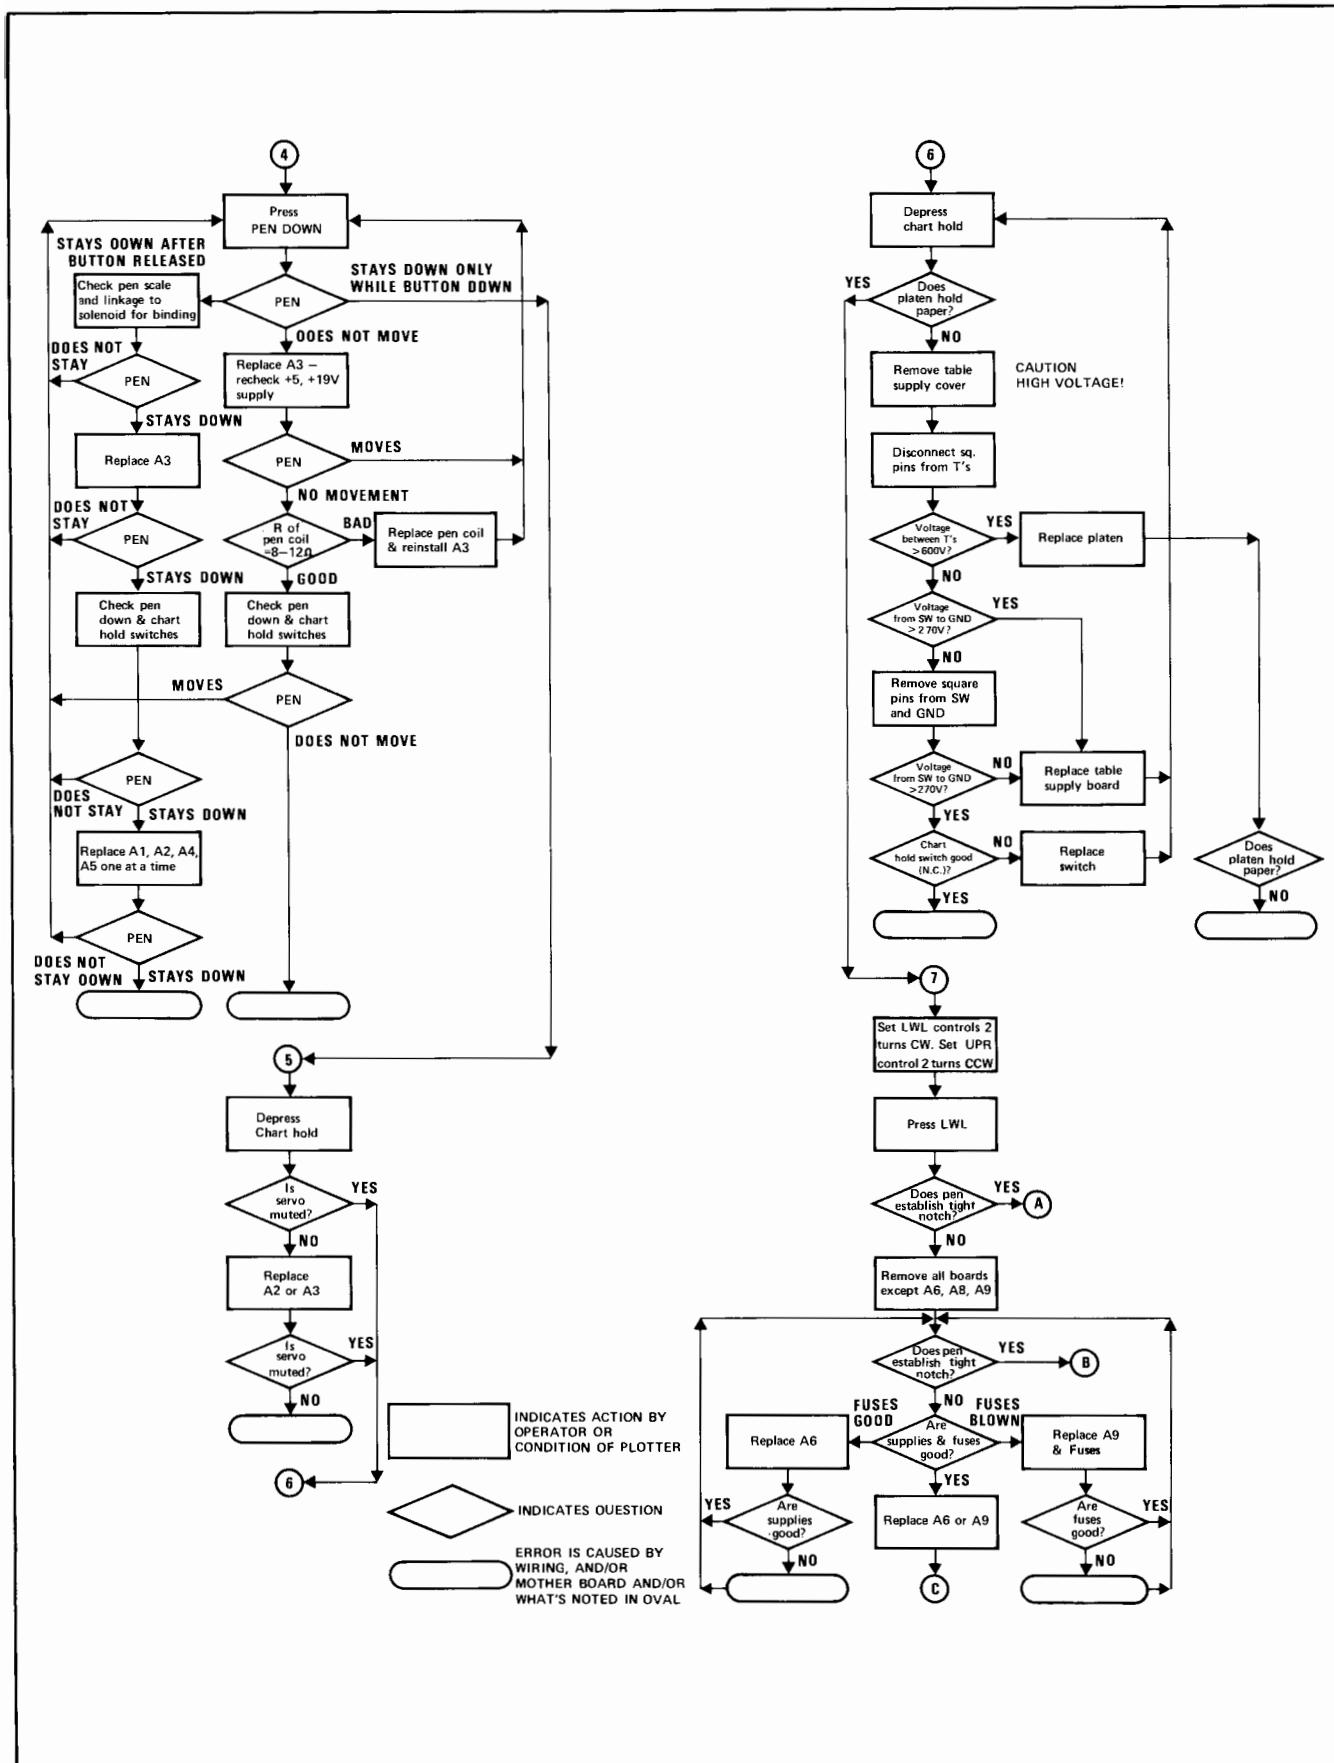


Figure 33. Troubleshooting Chart (Sheet 2 of 5)

TROUBLESHOOTING

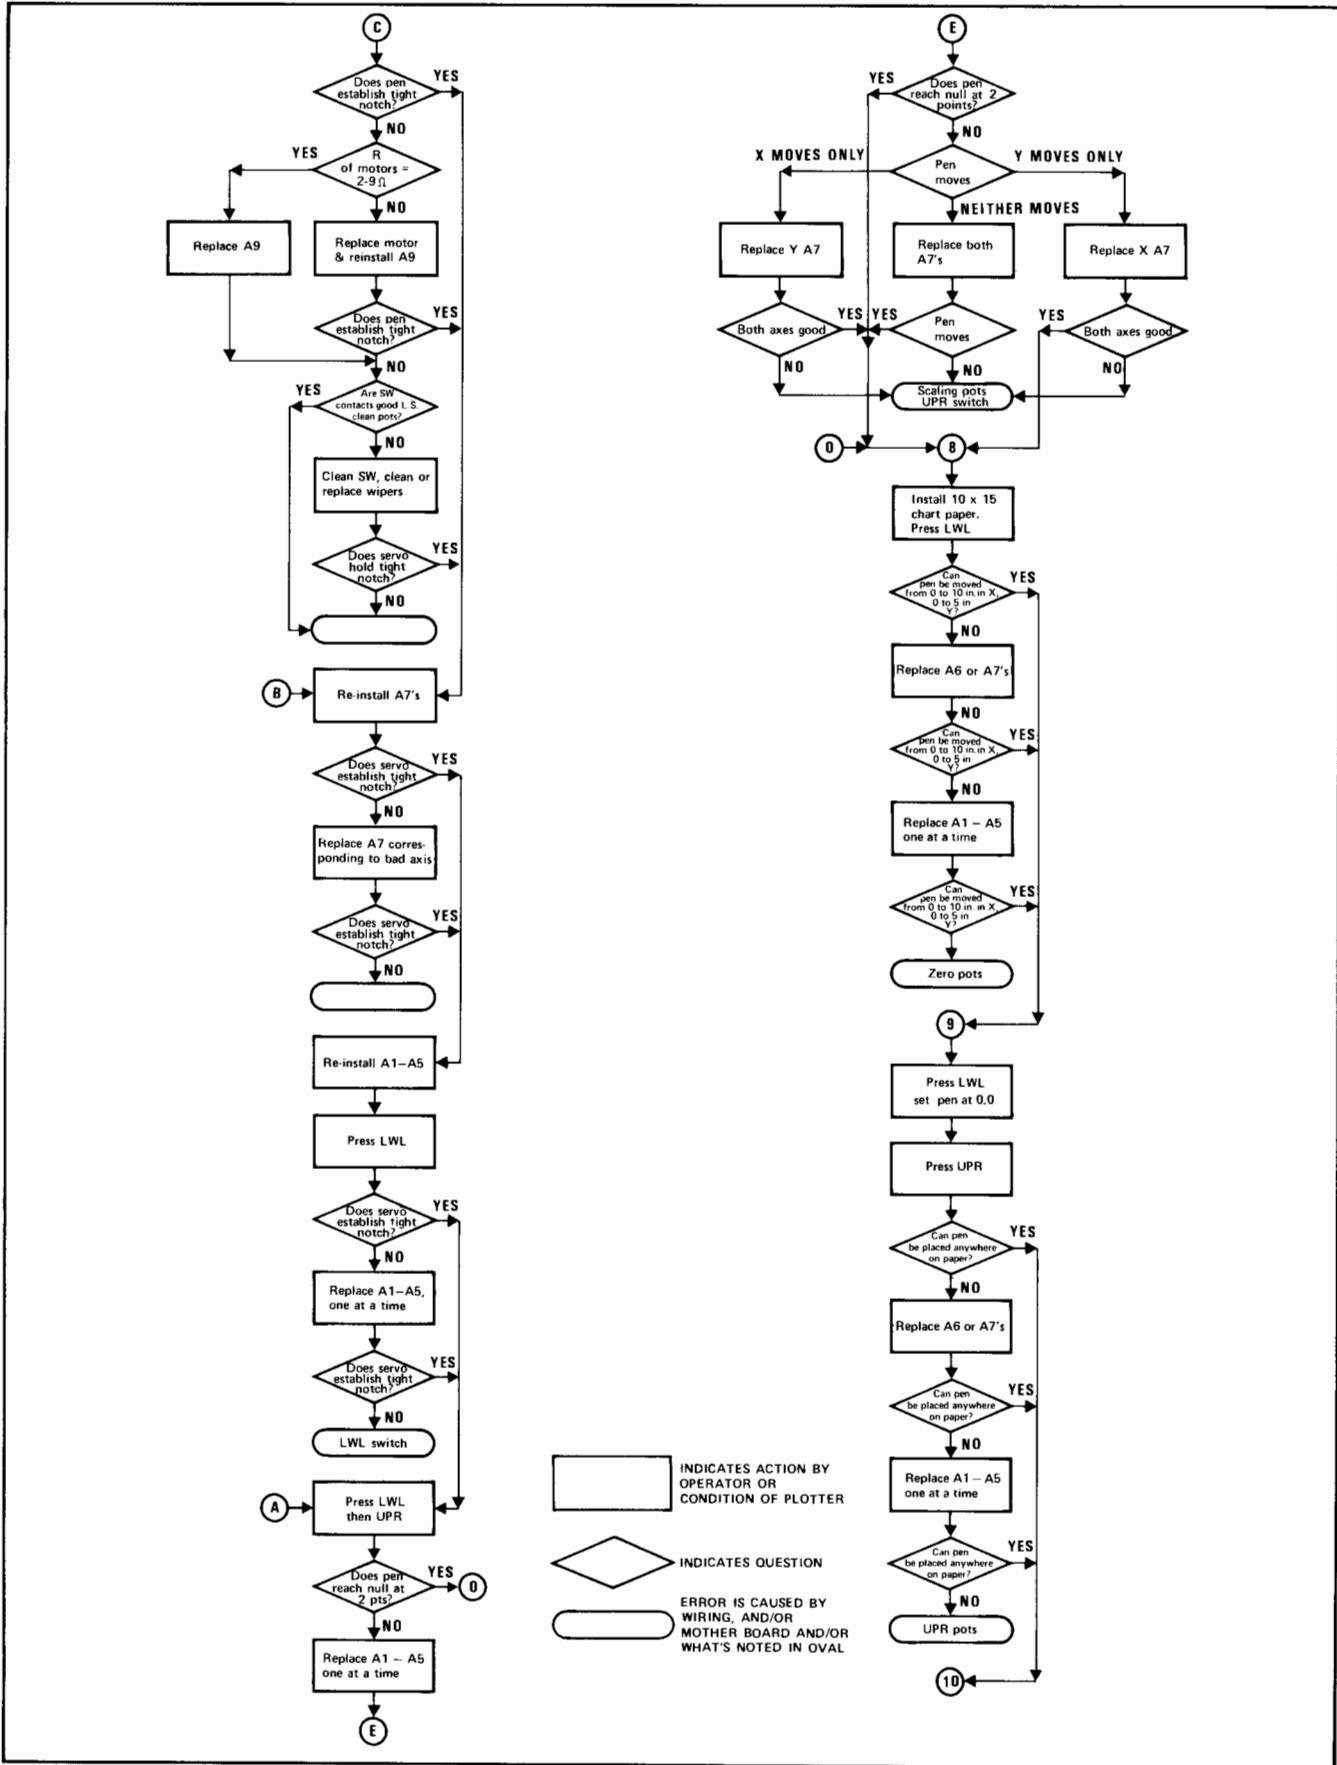


Figure 33. Troubleshooting Chart (Sheet 3 of 5)

TROUBLESHOOTING

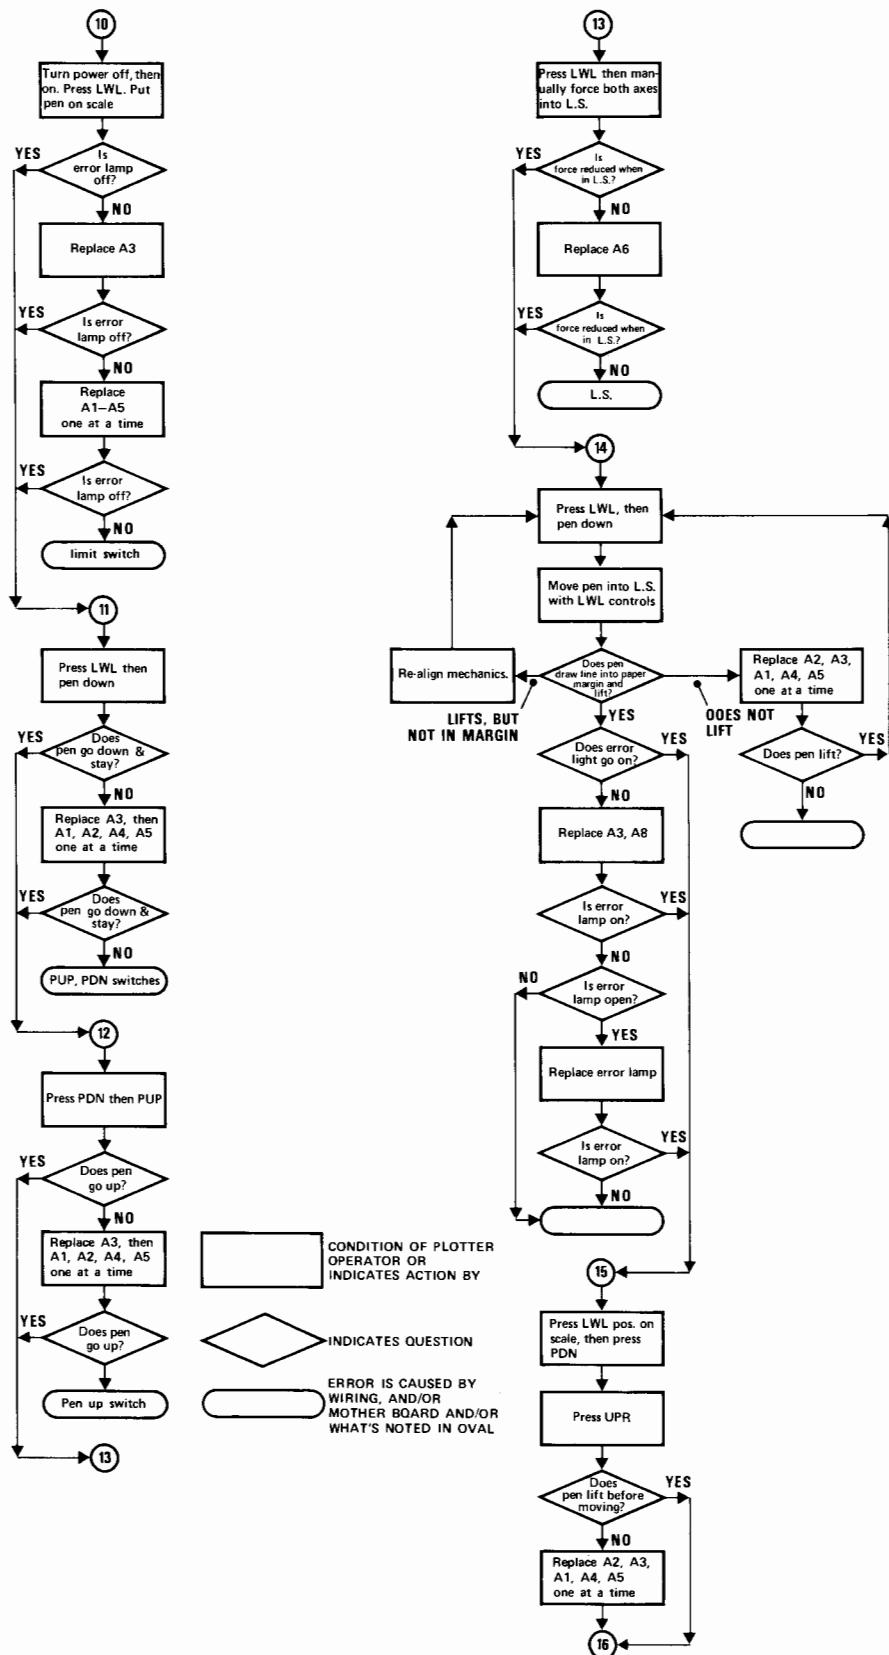


Figure 33. Troubleshooting Chart (Sheet 4 of 5)

TROUBLESHOOTING

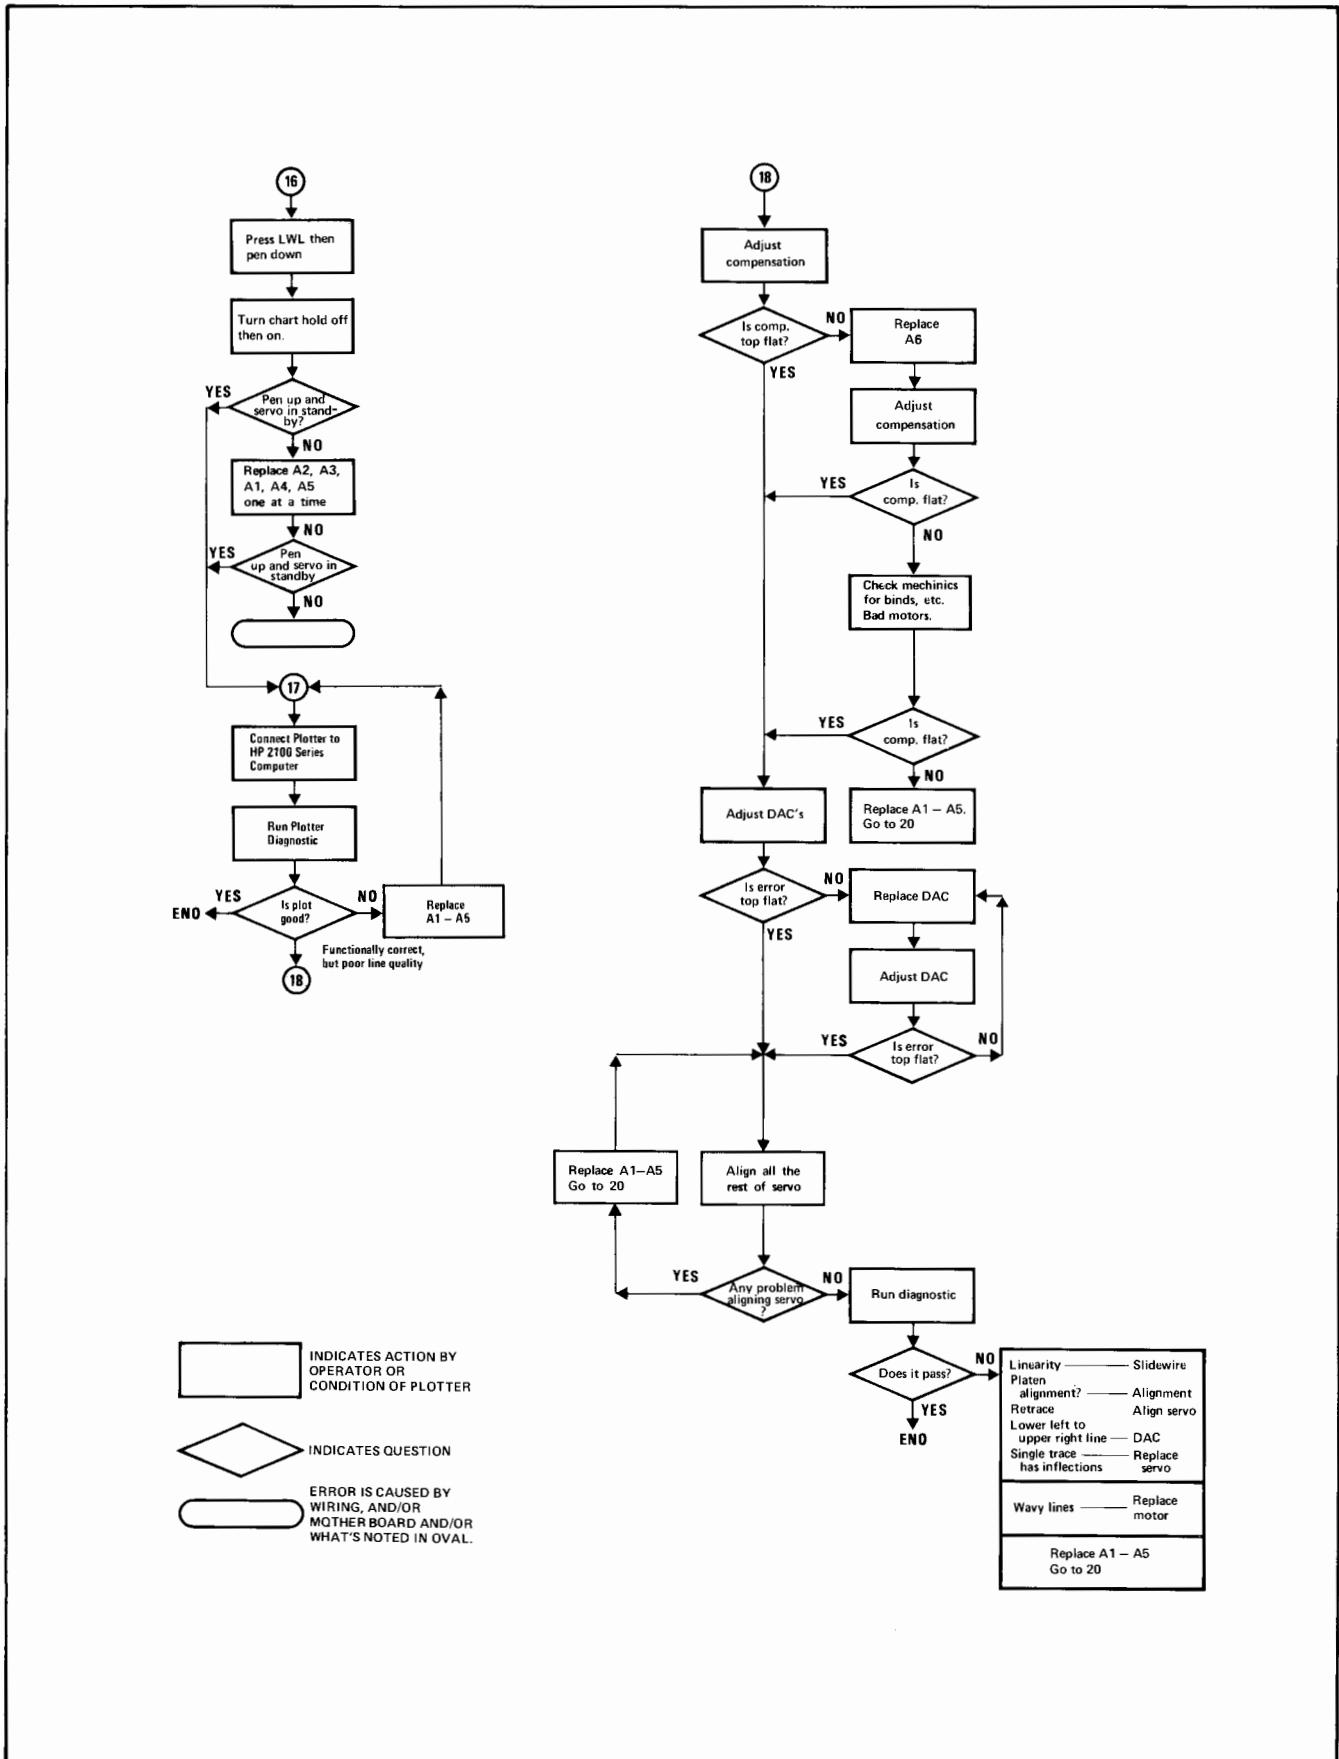


Figure 33. Troubleshooting Chart (Sheet 5 of 5)

APPENDIX A

MNEMONICS GLOSSARY

<u>MNEMONIC</u>	<u>MEANING</u>
4BW	Four Bit Word
5UF	5 Volts Unfiltered
8BW	Eight Bit Word
A	A Buss (Input to Arithmetic Unit)
AC	High Voltage AC to Chart Hold
AST	Clock (Astable)
B	B Buss (Input to Arithmetic Unit)
B15	Port 15 of B Buss
C	Output C Register
C14	Clear F14 Flop
CCC	Clear Cycle Counter
CCF	Clear Control Flops
CDE	Code (BCD or Binary Command Line)
CHD	Chart Hold
CLC	Clear Last Pen Command
CLP	Clamp (Status Line and Servo Clamp)
CMO	Command Multiplexer Output
CRY	Carry (Arithmetic Unit)
CSR	Clear Shift Registers
CTL	Control (Transfer Line)
DMO	Data Multiplexer Output
DXS	Delta X Sign (Command Line)
DYS	Delta Y Sign (Command Line)
F	Output F Register
F1-5	Temporary Storage Flops
F10-14	Cycle Counter Flops
FLD	Format Light Driver
FLG	Flag (Transfer Line)
FLS	Format Lamp Supply
FMT	Format (Status Line)
I0-16	Input Data Lines
ISC	Increment State Counter
LS	Limit Switch
LSC	Load State Counter
LSP	Last Sum Positive
LWL	Lower Left (Front Panel Switch)
MDE	Mode (Delta or Absolute Command Line)
MVR	Maneuver (Position or Pen Command Line)

APPENDIX A

MNEMONICS GLOSSARY

<u>MNEMONIC</u>	<u>MEANING</u>
P015	System Strobe Pulses Generated Each Machine Cycle
PDN	Pen Down (Front Panel Switch)
PEN	Pen (Status Line)
PLS	Power Lamp Supply
PNC	Pen Command (Command Line)
PNH	Pen Driver - High Side
PNL	Pen Driver - Low Side
PSC	Preset Clamp
PUP	Pen Up (Front Panel Switch)
QFR	Qualifier
QMO	Qualifier Multiplexer Output
R00-9	ROM Outputs
RDY	Ready (Status Line)
S15	Port 15 Control Flop Decoder
SBY	Standby (Status Line)
SFT	Shift (Memory Registers)
SHD	Shift DAC's
SKP	Skip
SPH	Sample Hold
SSY	Servo Standby
SUM	Sum (Arithmetic)
SW	Chart Hold Disabling Switch
SYC	Synchronization (Command Line)
T	Table
UPR	Upper Right (Front Panel Switch)
VEL	Velocity
W0-3	Word Select
X0	X Dac Output
X1	Output X1 Register
XC	X Compensation Adjustment Pot
XD	X Deadband Adjustment Pot
XDI	X Dac Input
XOD	X Output Drive
XOF	X Offset Adjustment Pot
X OUTPUT	X Driver Output
XSP	X Scaling Pot
XSW	ArmX Slidewire
XSW-	Bottom X Slidewire

APPENDIX A

MNEMONICS GLOSSARY

<u>MNEMONIC</u>	<u>MEANING</u>
XZP	X Zero Pot
YØ	Y Dac Output
Y1	Output Y1 Register
YC	Y Compensation Adjustment Pot
YD	Y Deadband Adjustment Pot
YDI	Y Dac Input
YG	Y Gain Adjustment Pot
YOD	Y Output Drive
YOF	Y Offset Adjustment Pot
Y OUTPUT	Y Driver Output
YSP	Y Scaling Pot
YSW	Arm - Y Slidewire
YSW+	Top - Y Slidewire
YSW-	Bottom - Y Slidewire
YZP	Y Zero Pot

APPENDIX B

LOGIC CIRCUIT

This Appendix contains the Logic Circuit Diagram plus its associated Timing Diagram. For detailed circuit diagrams, refer to Appendix C.

APPENDIX B LOGIC CIRCUIT

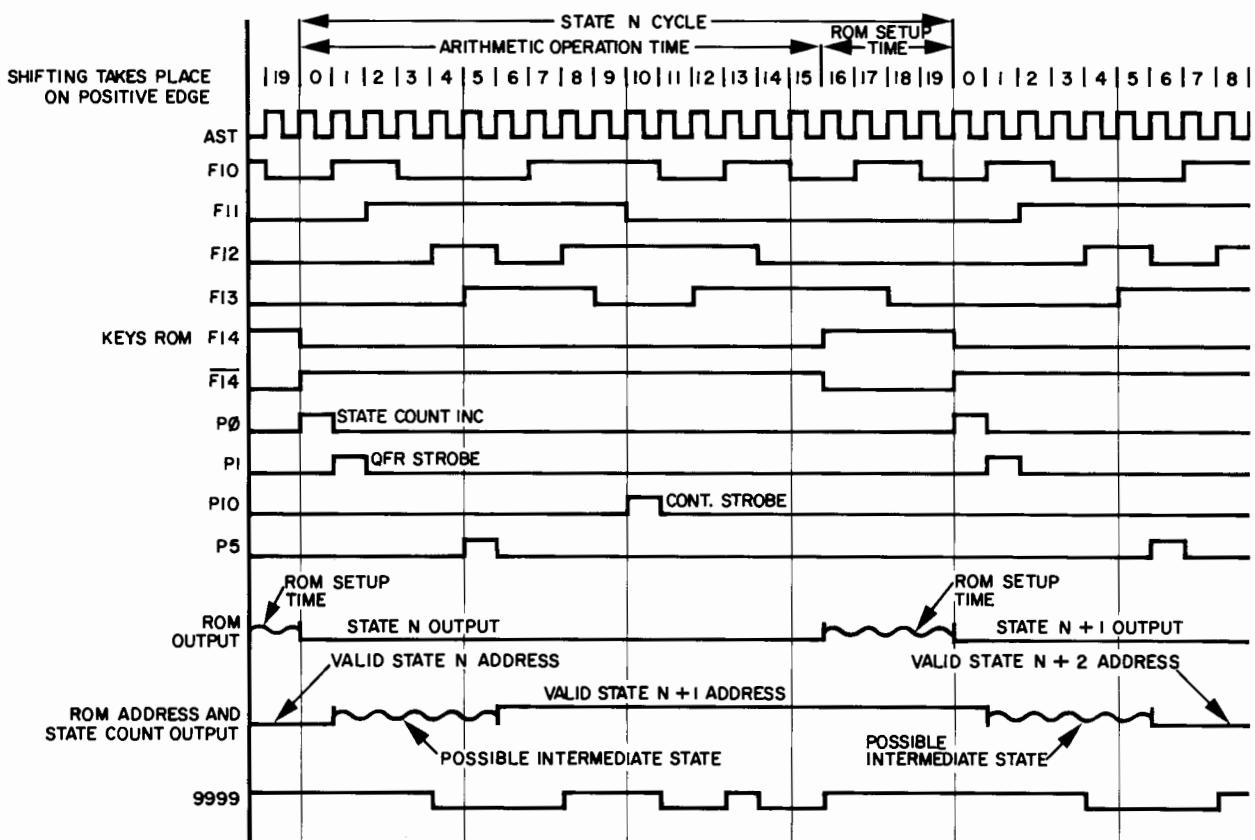


Figure 34. Timing Diagram

3-QFR CONTROL FLOP BOARD



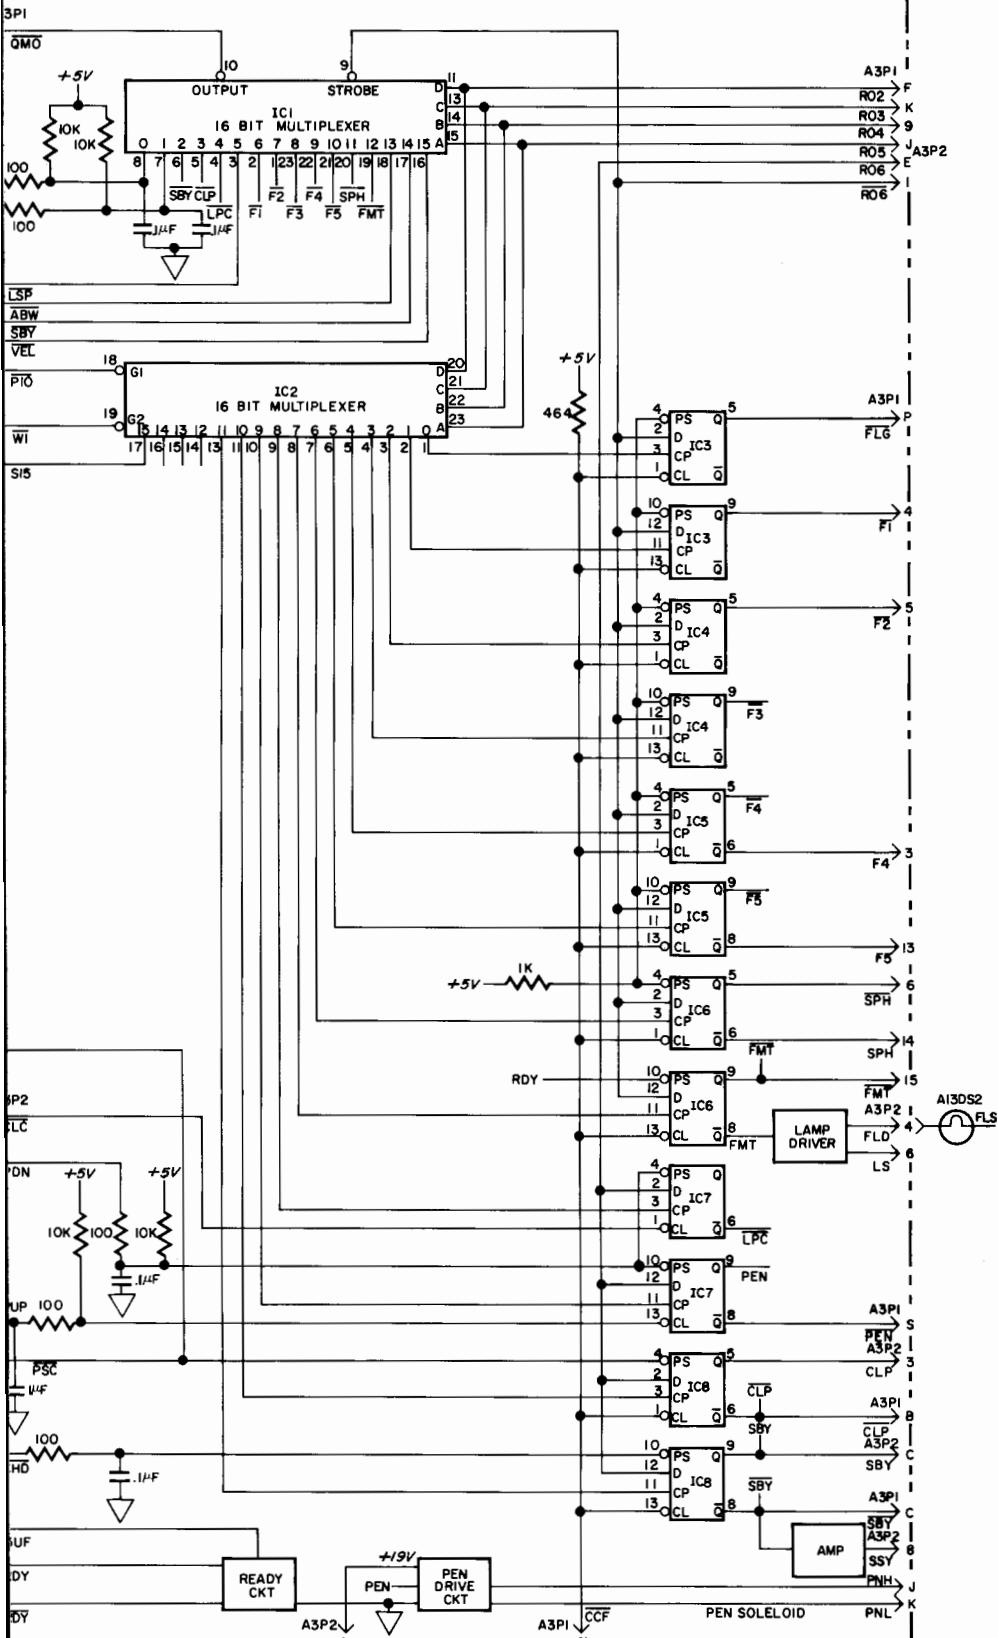


Figure 35. Logic
Circuit Diagram

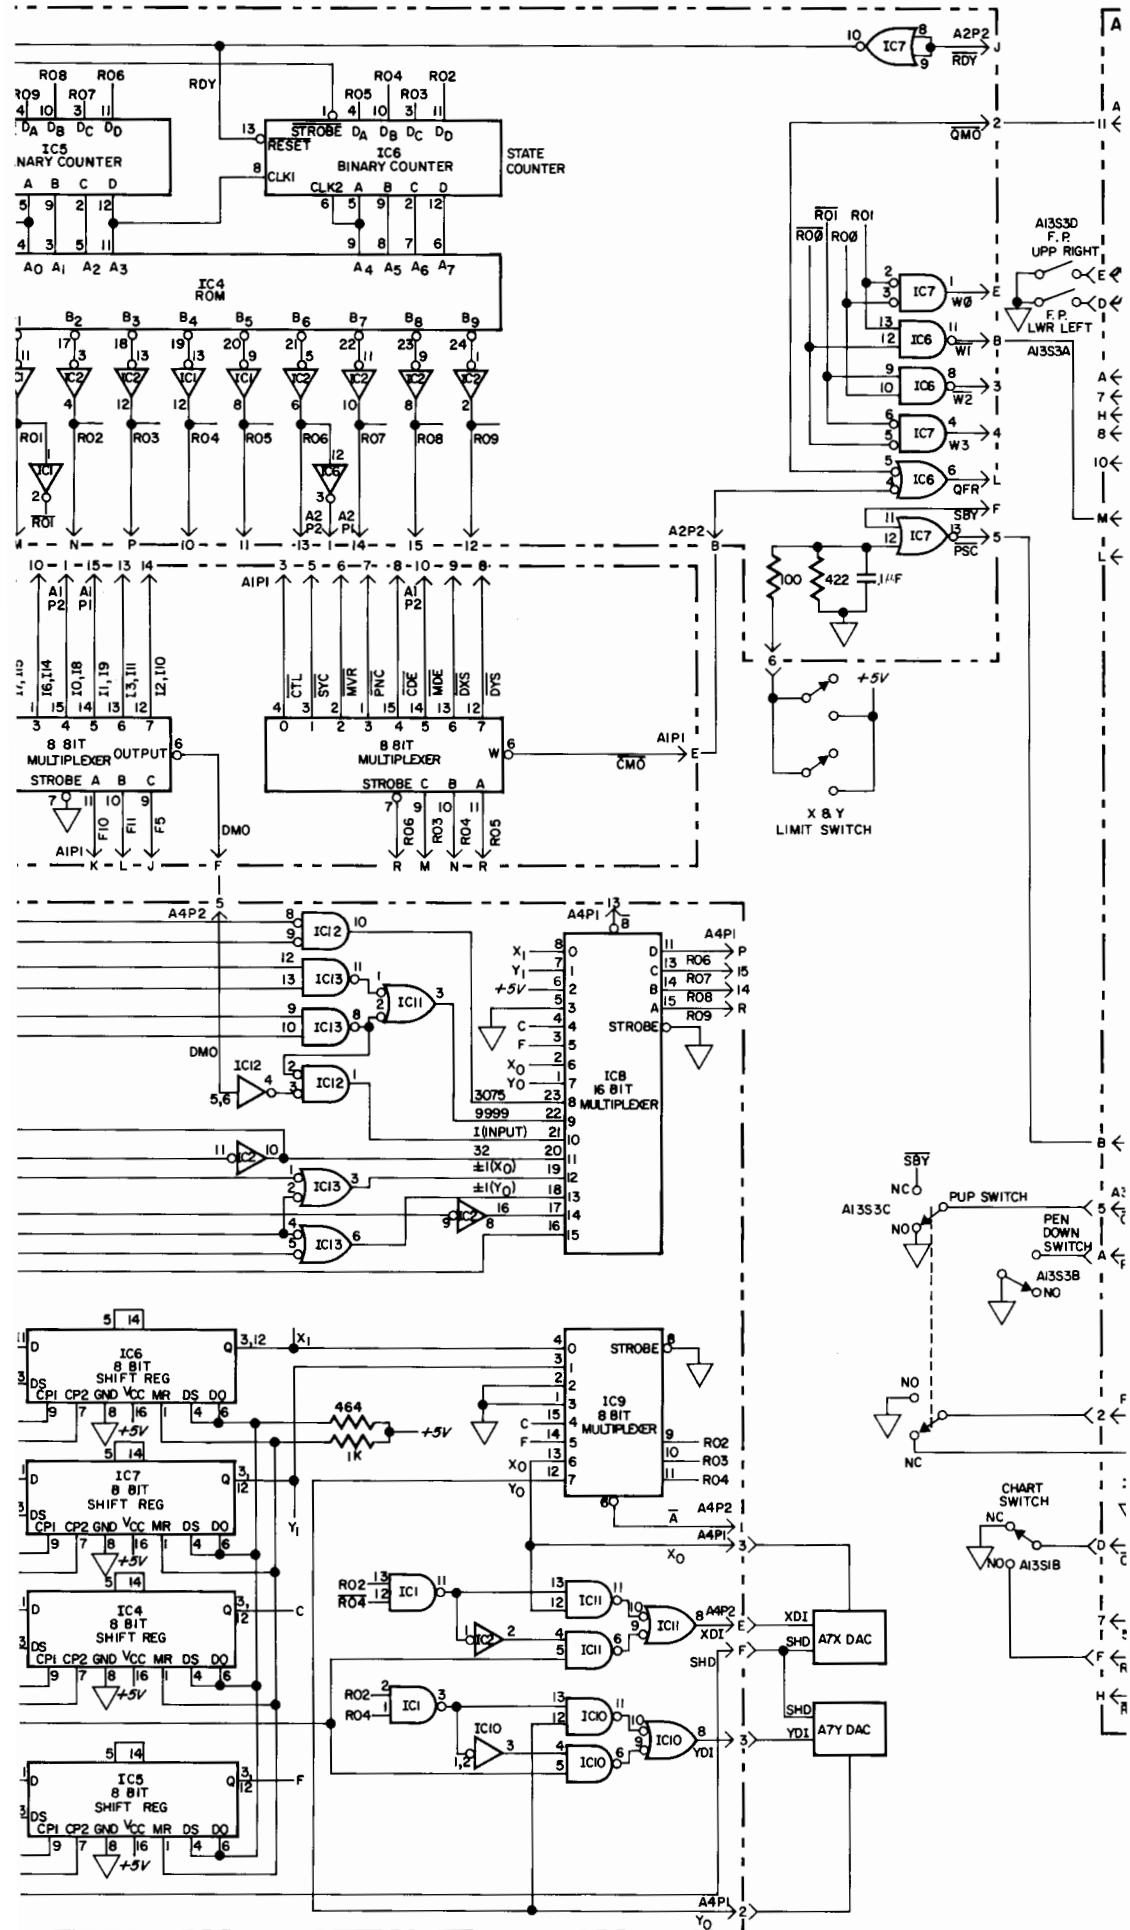

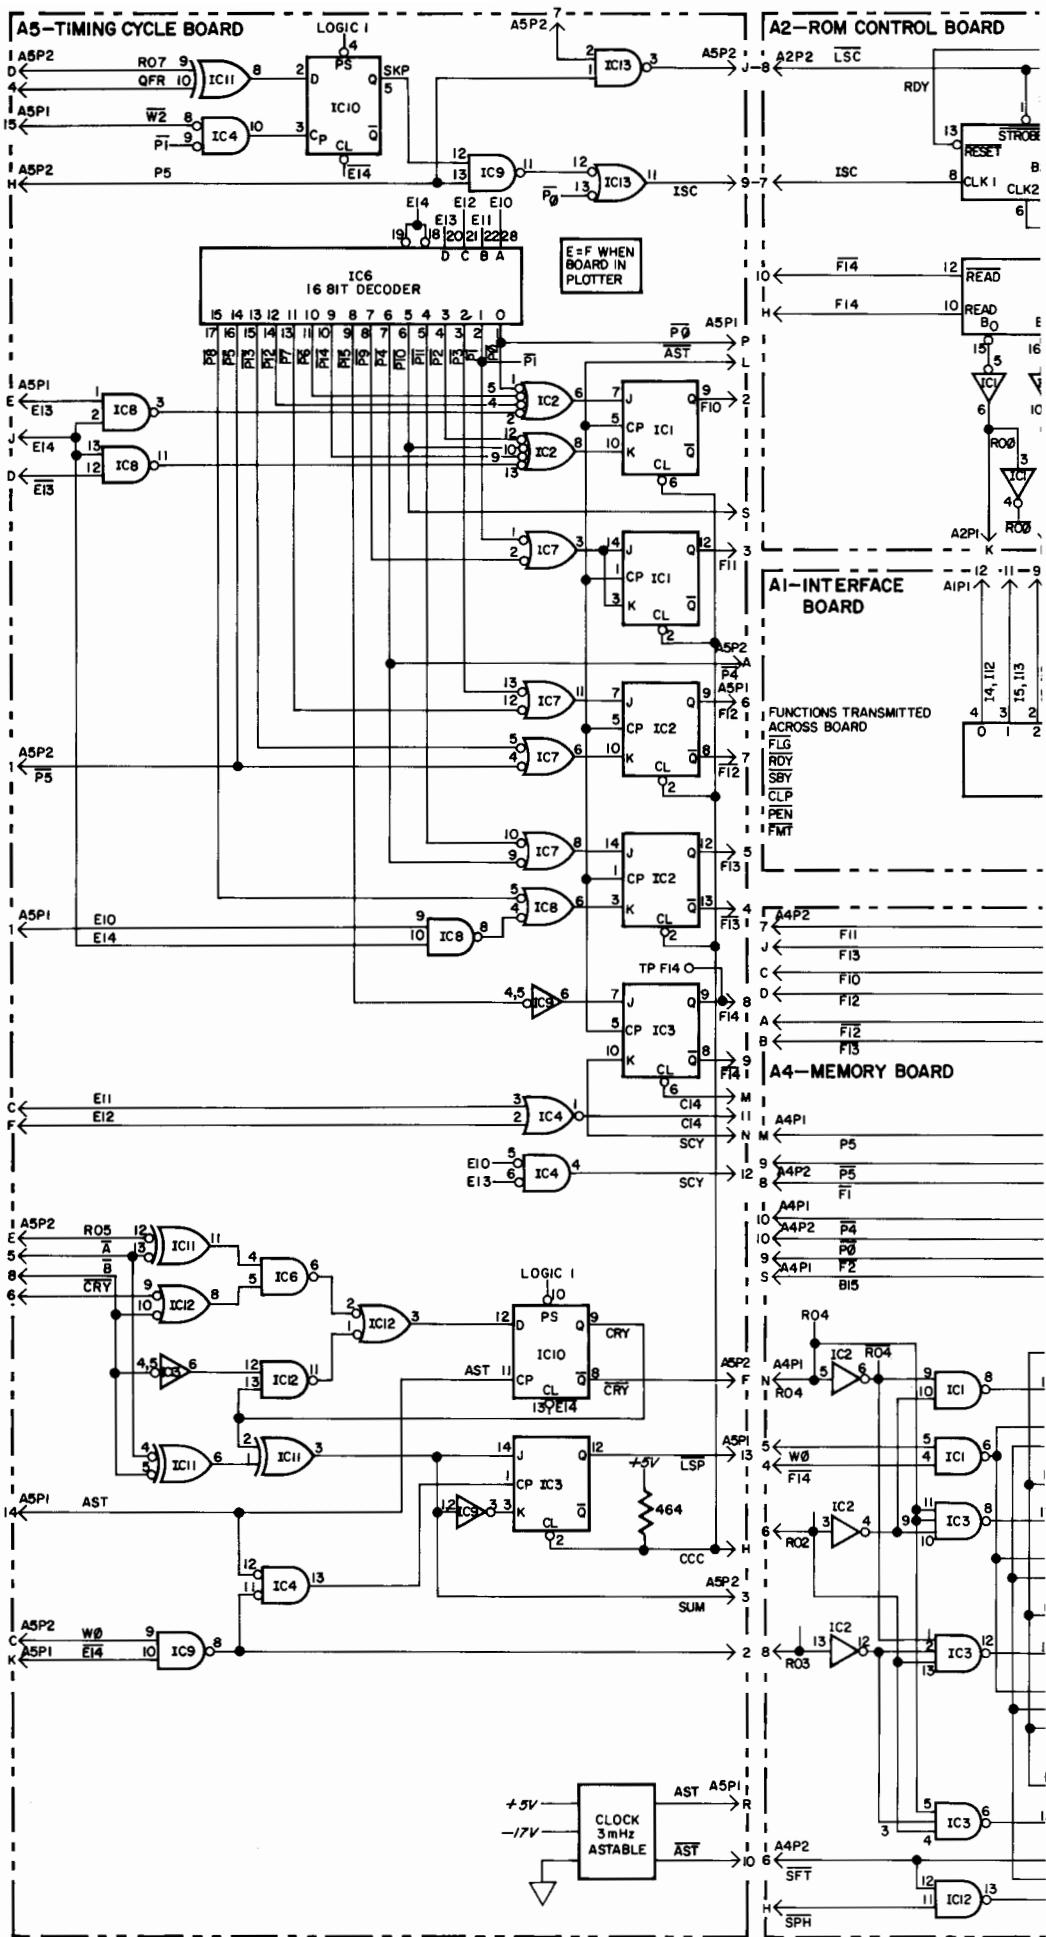

APPENDIX C

SCHEMATICS AND ELECTRICAL PARTS LIST

This Appendix contains Schematics and Electrical Parts Lists. For Mechanical Parts and Miscellaneous Parts information, refer to Chapter four.

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

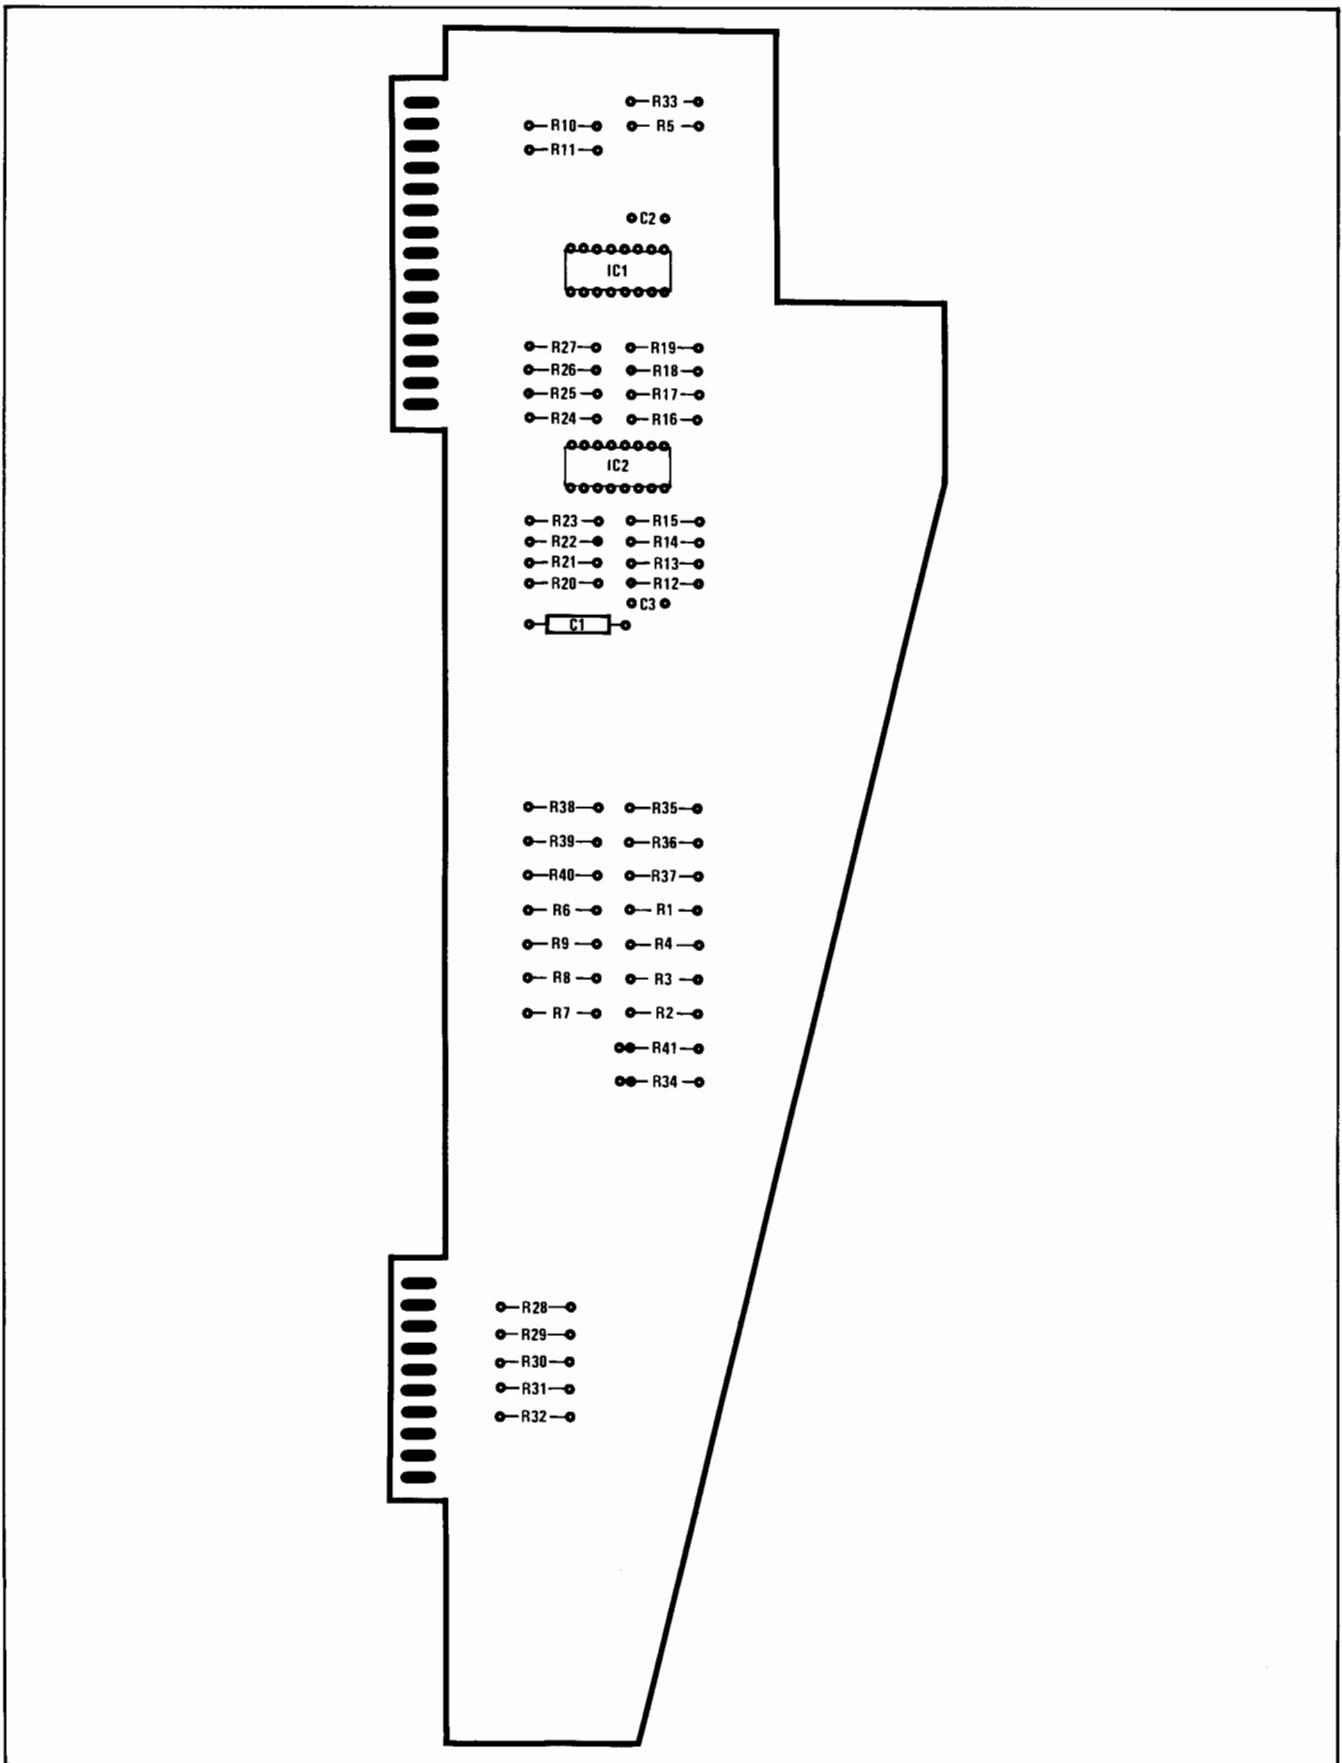


Figure 36. Interface Board

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

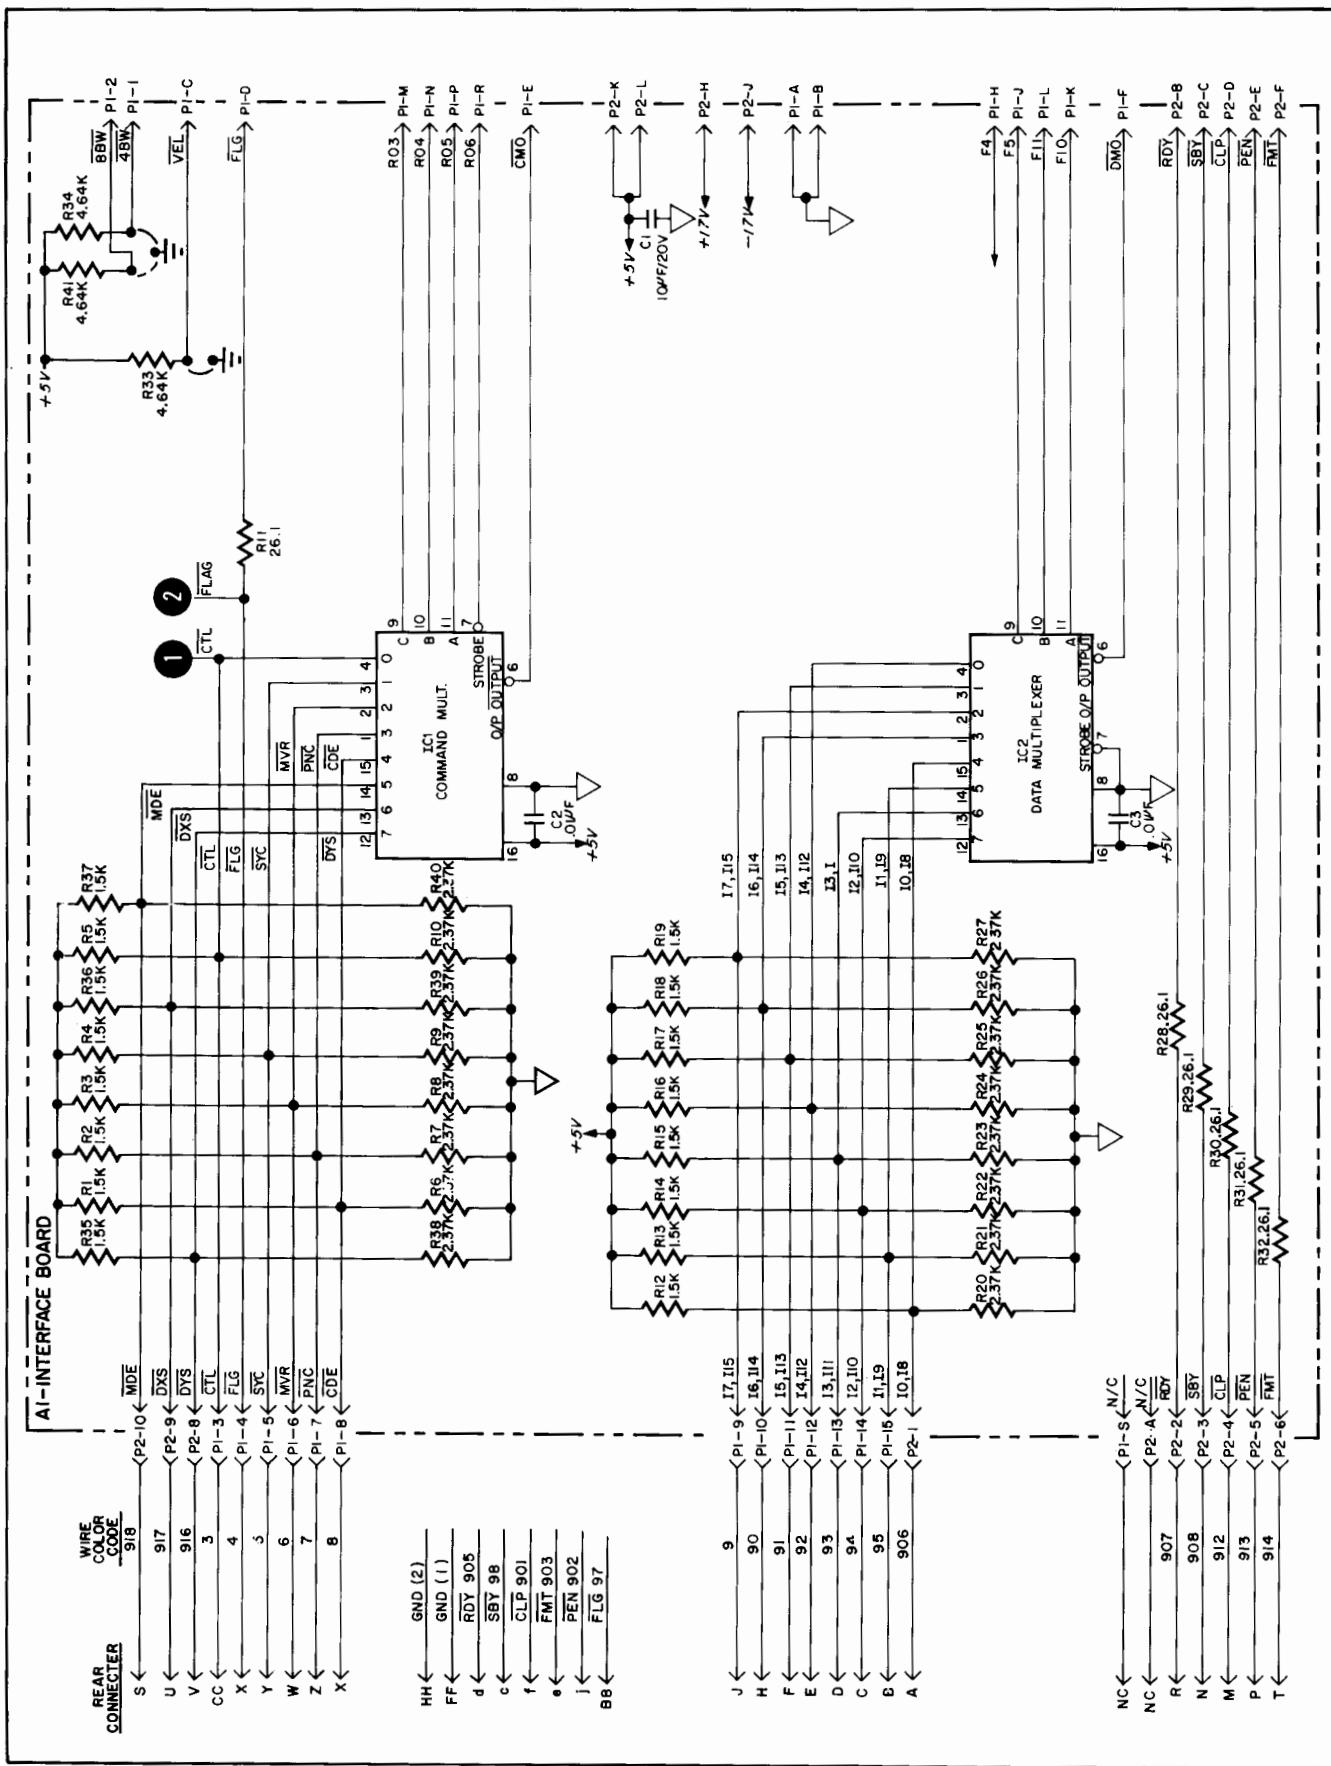


Figure 37. Interface Schematic

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

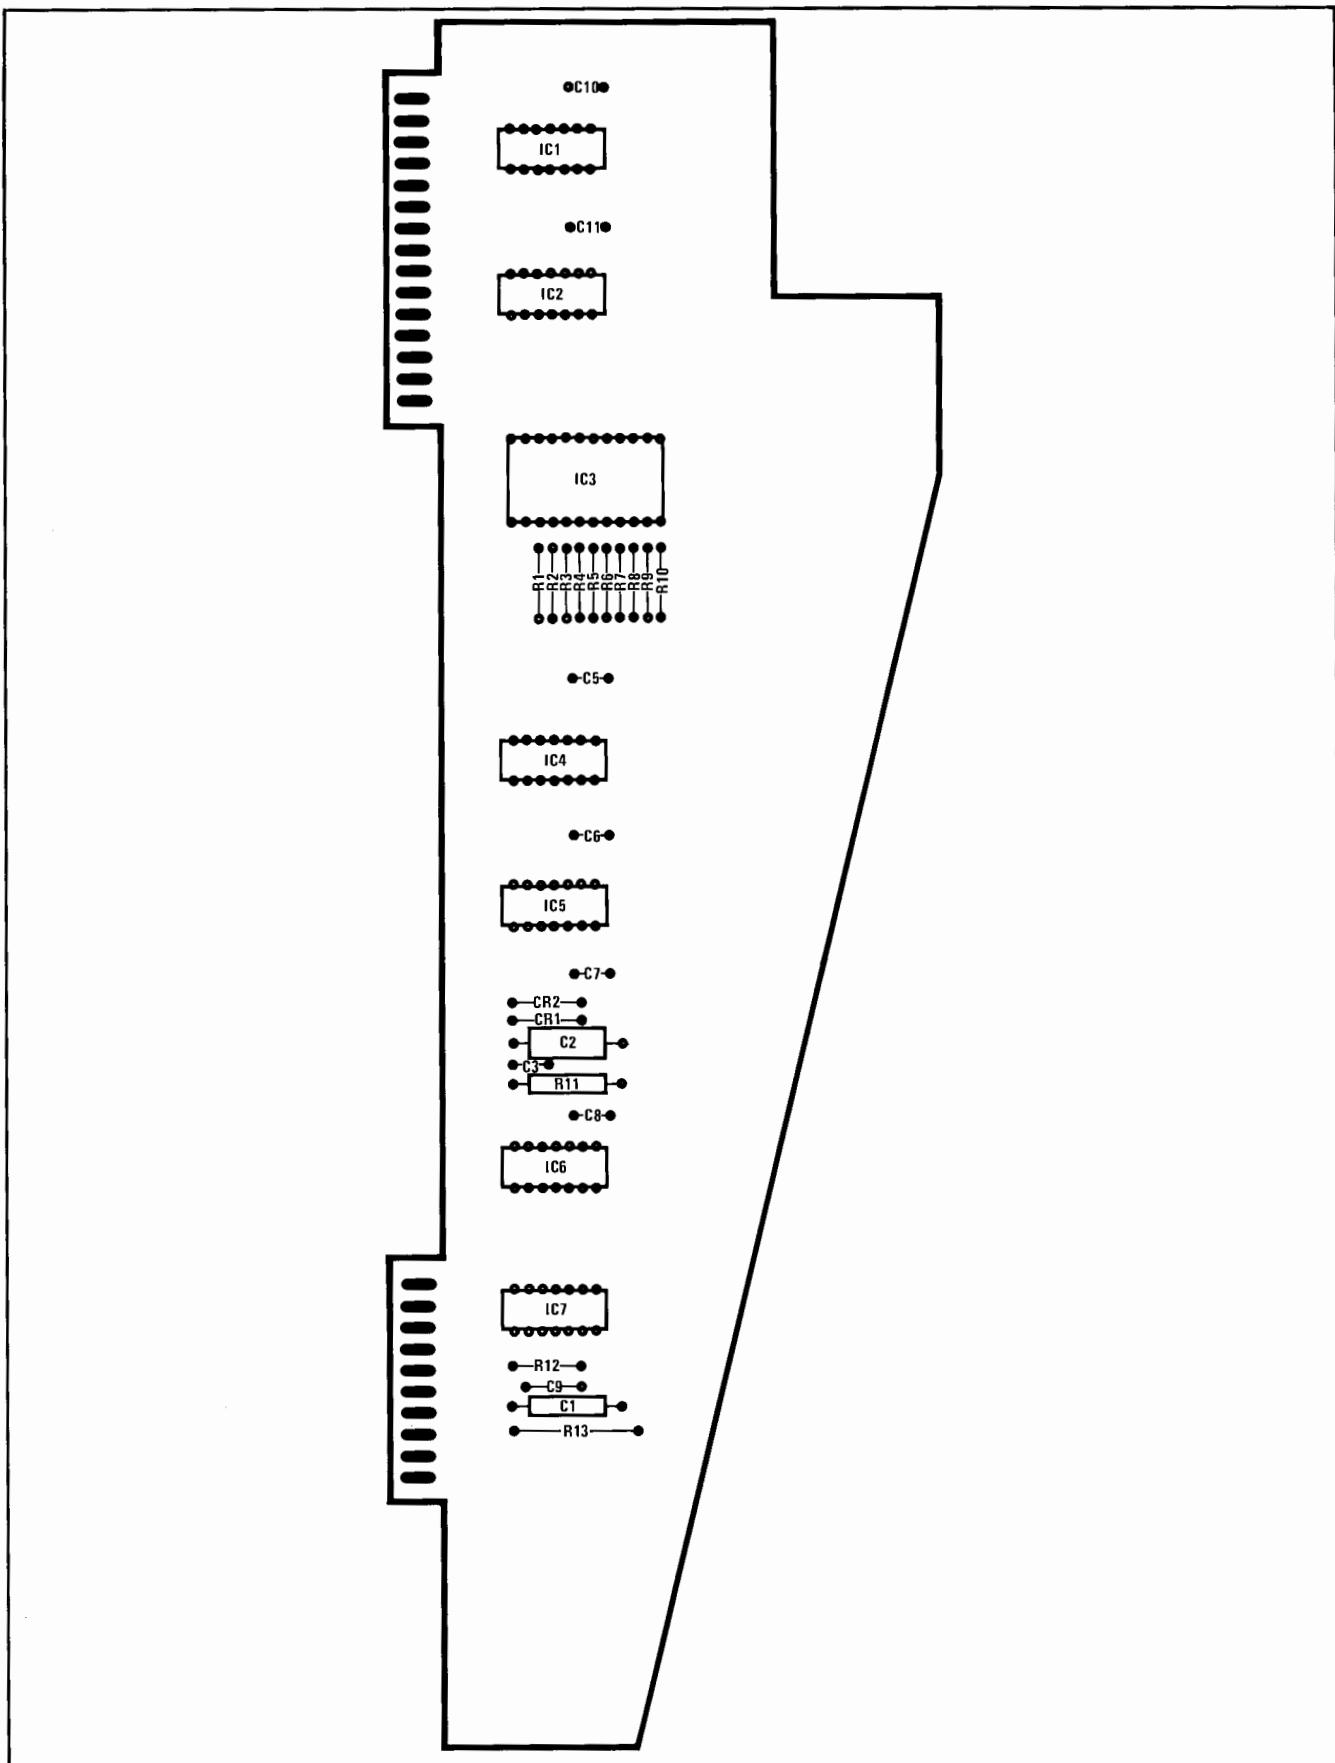


Figure 38. ROM Control Board

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

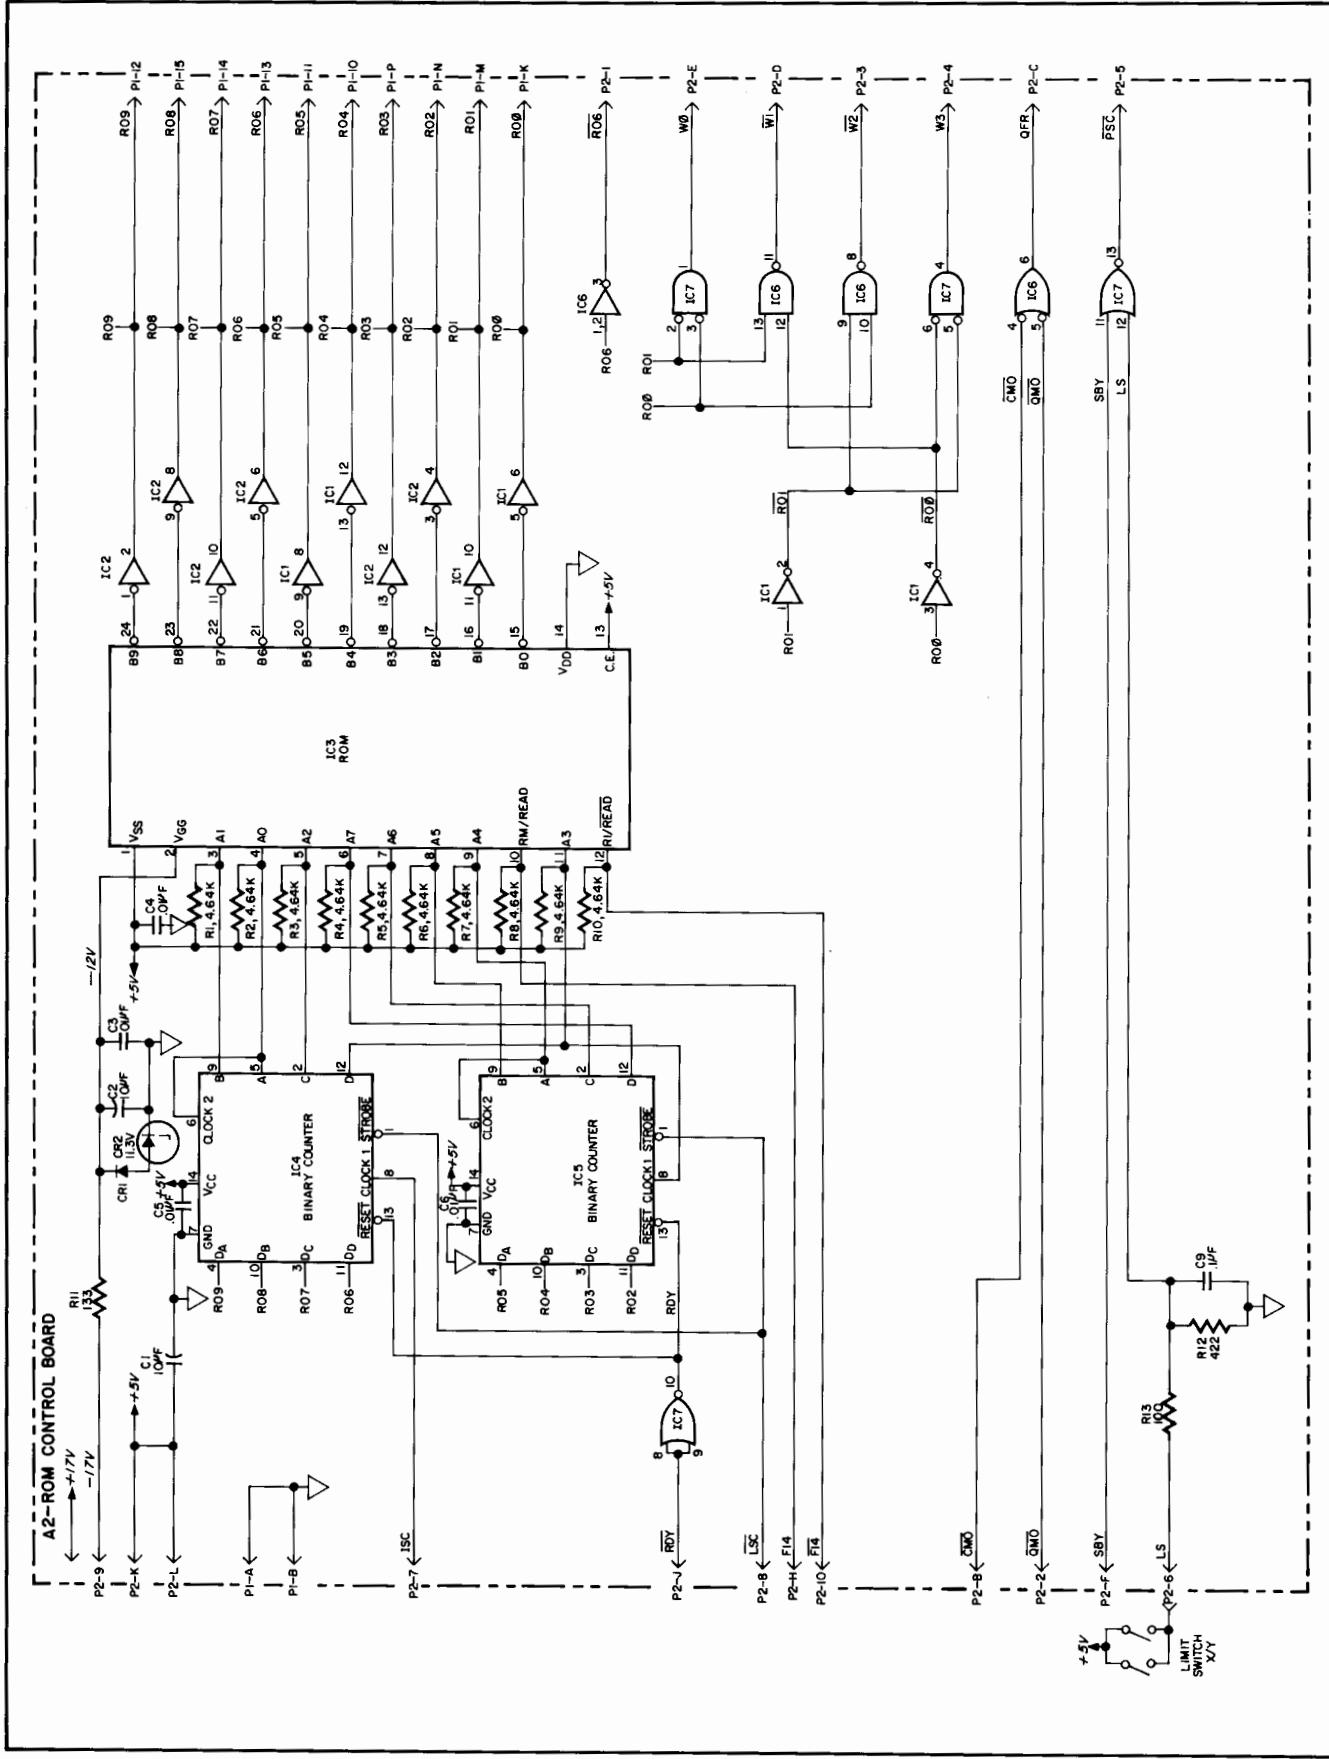


Figure 39. ROM Control Schematic

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

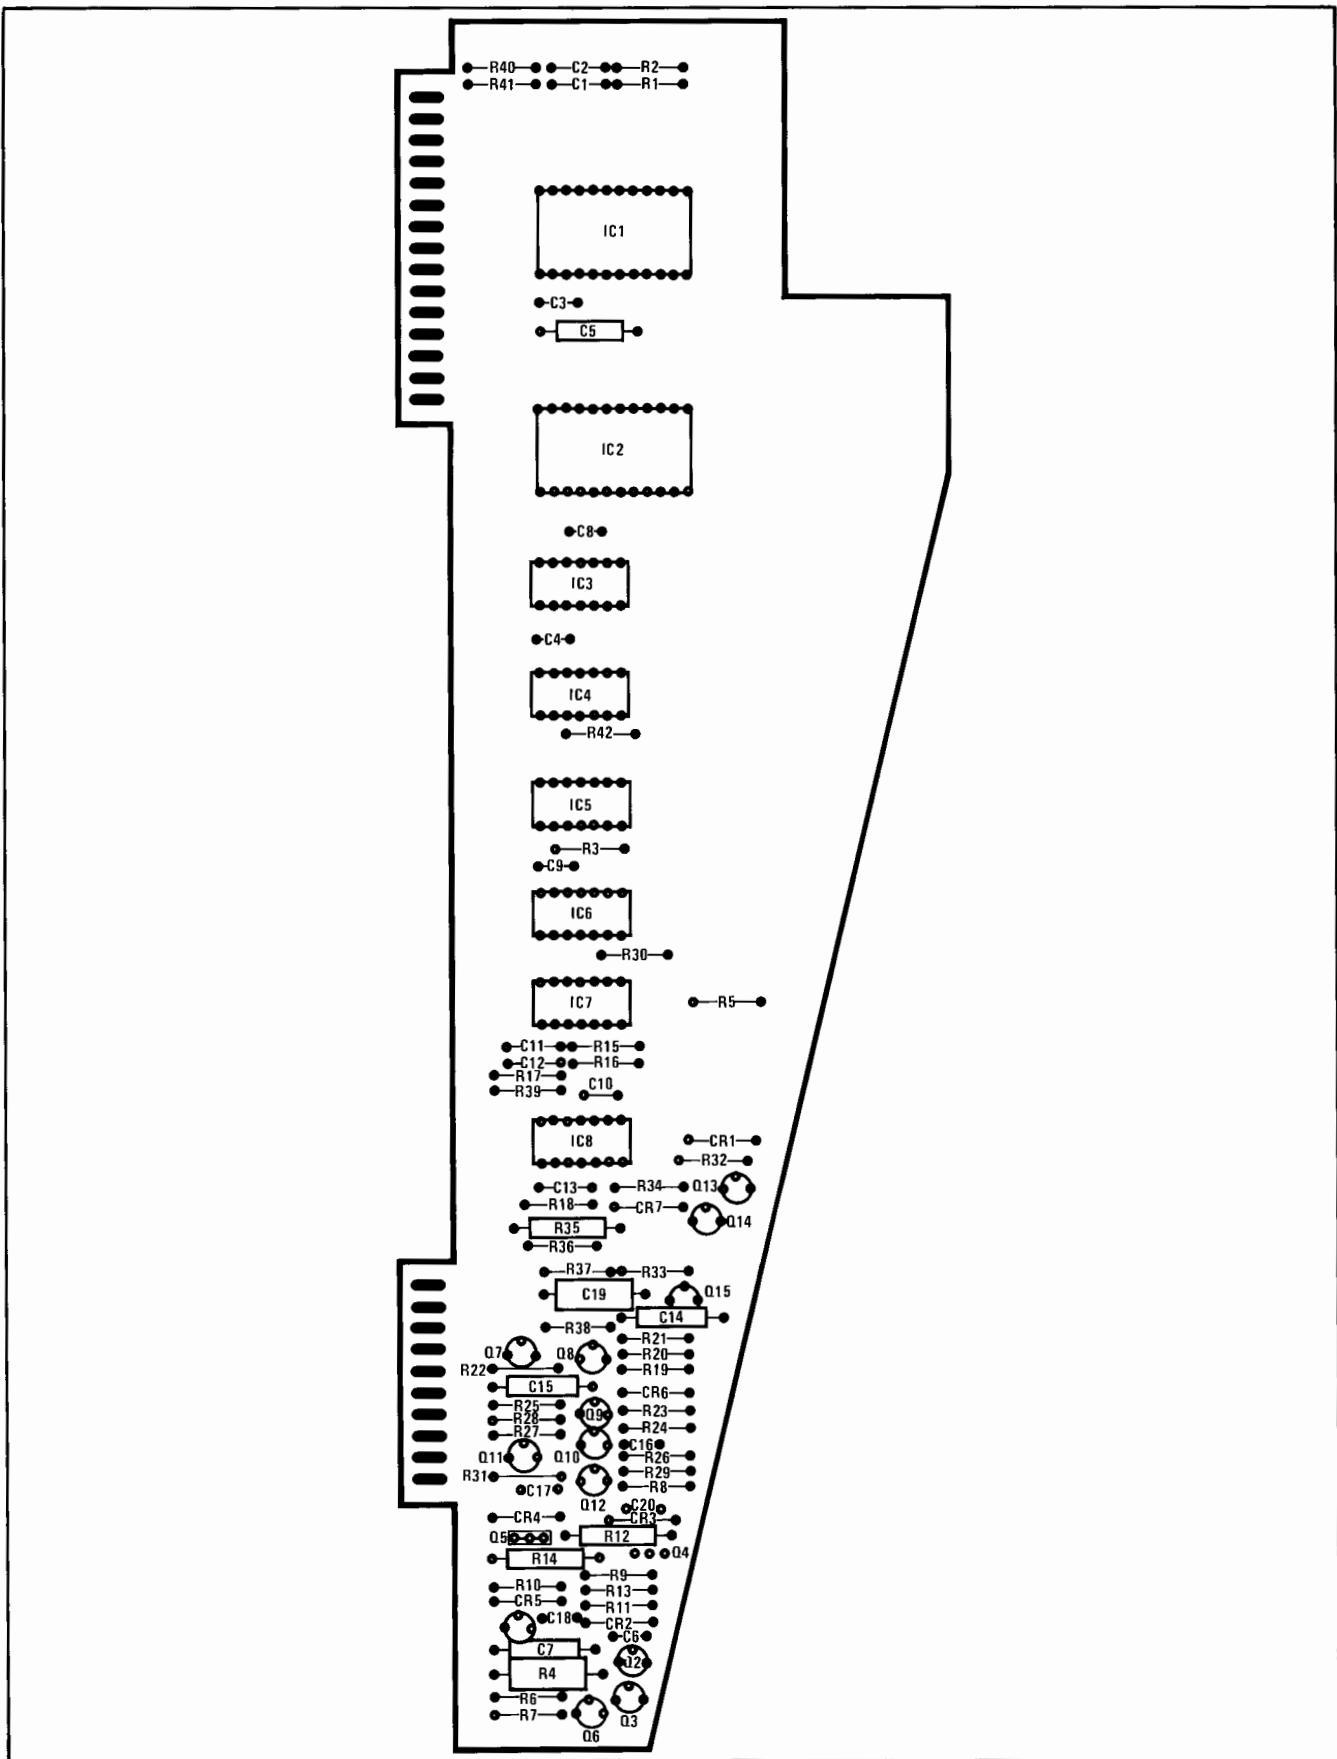


Figure 40. Control Flop Board



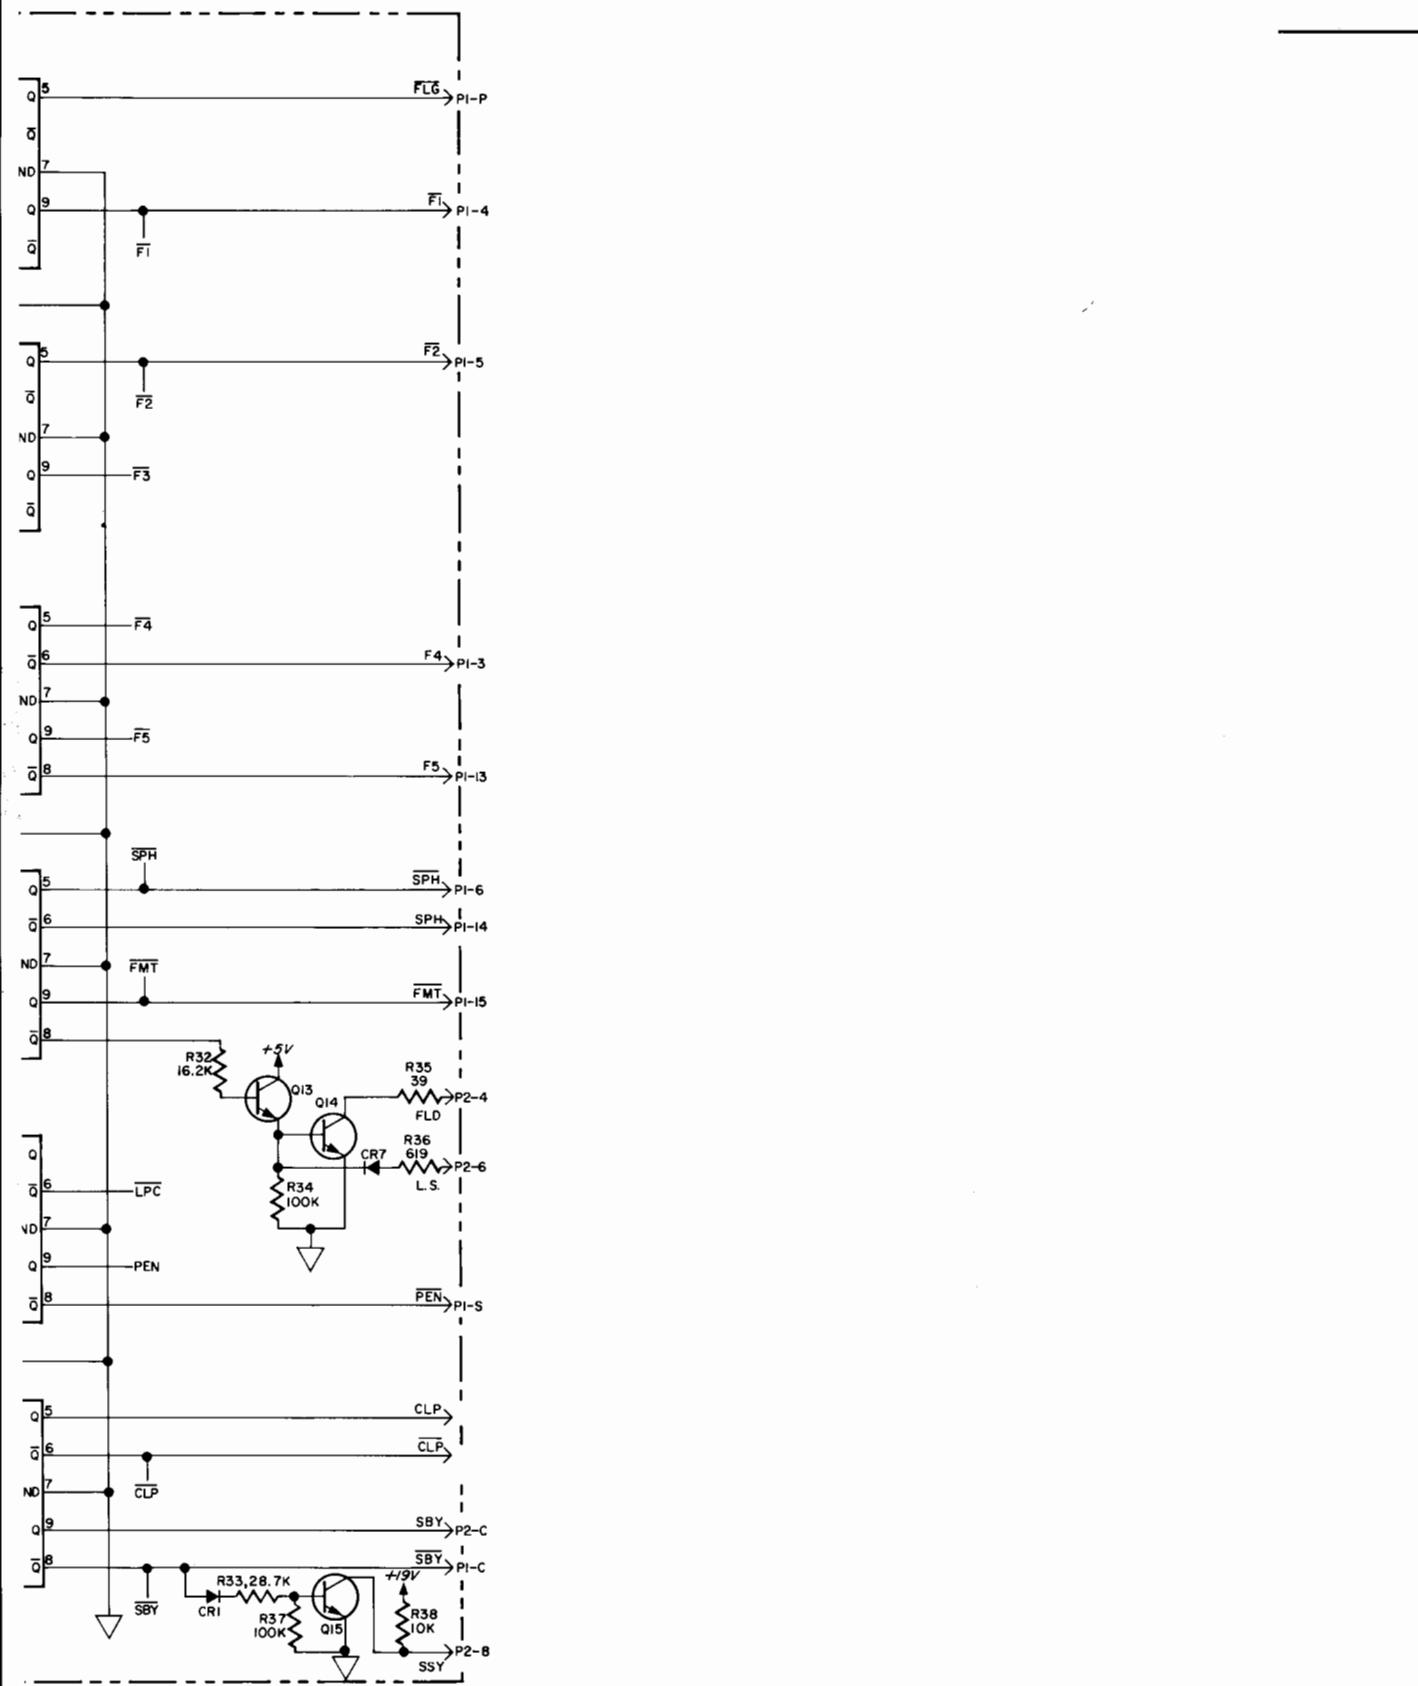


Figure 41.
Control Flop Schematic

QUALIFIER CONTROL FLOP BOARD

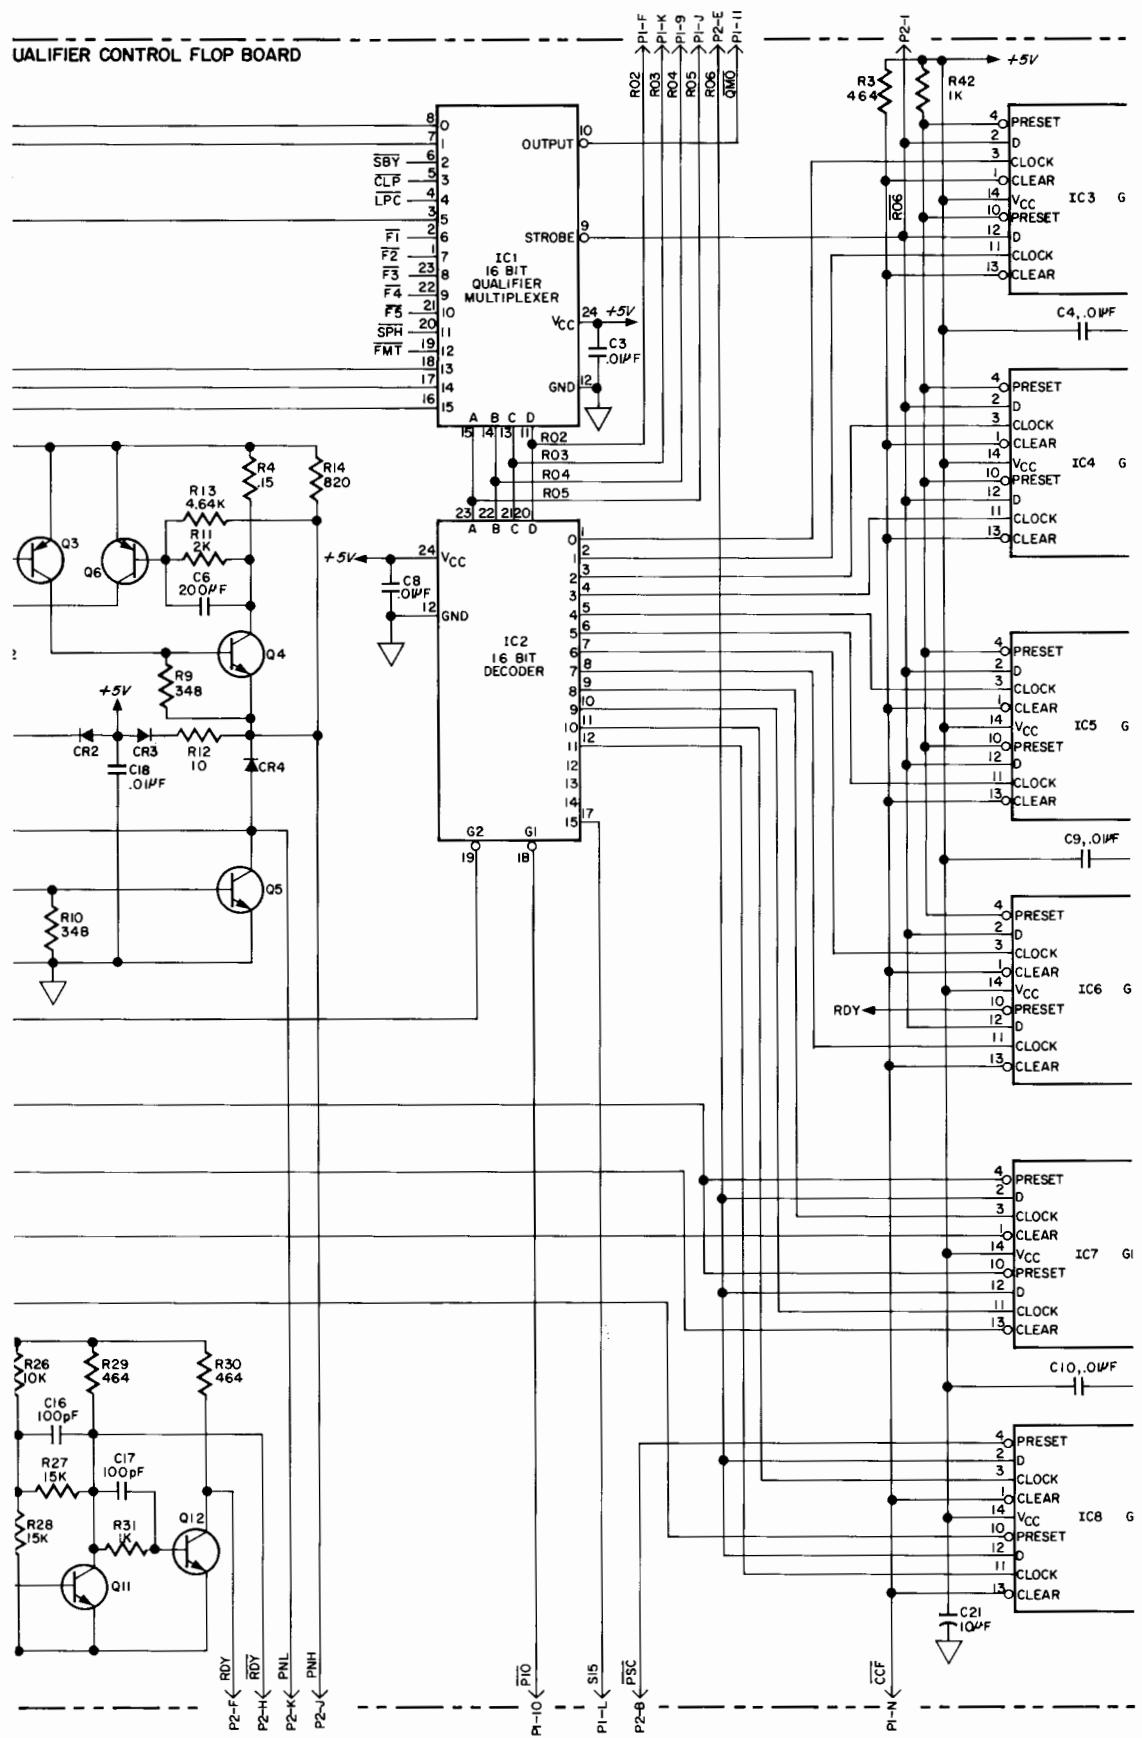

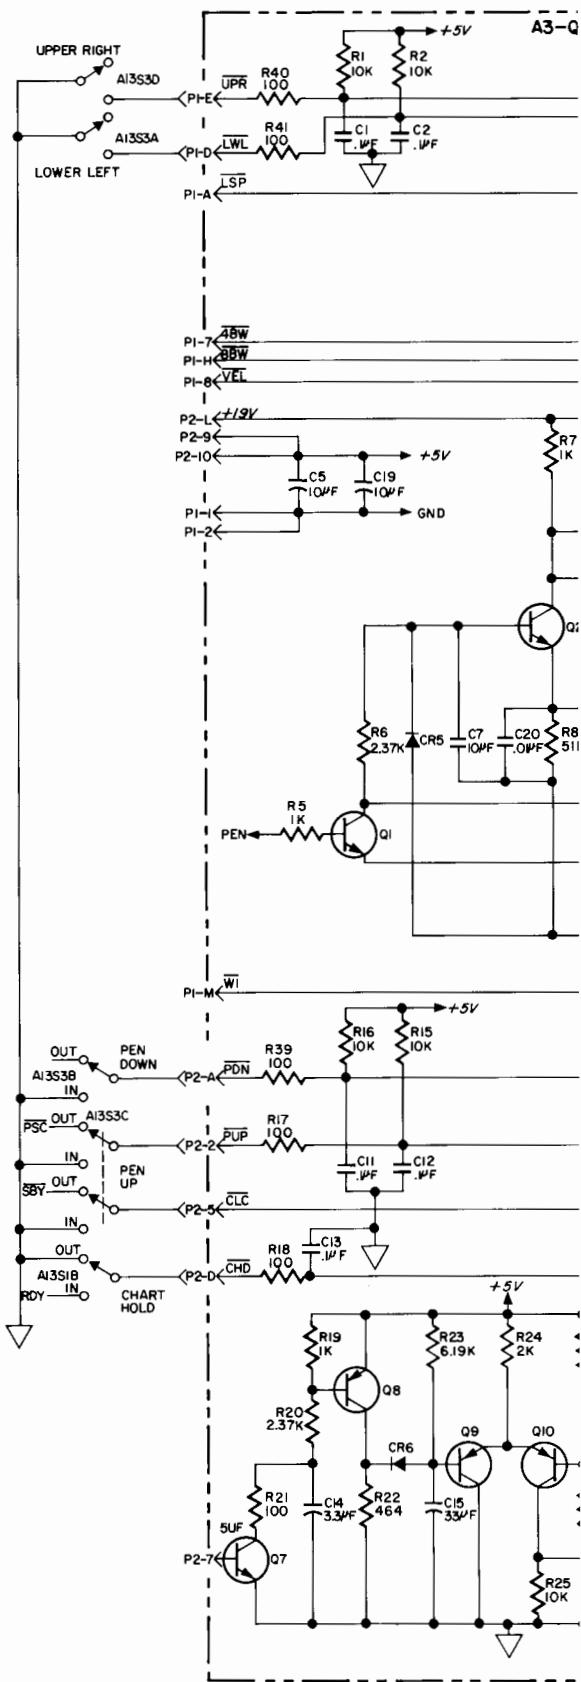

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

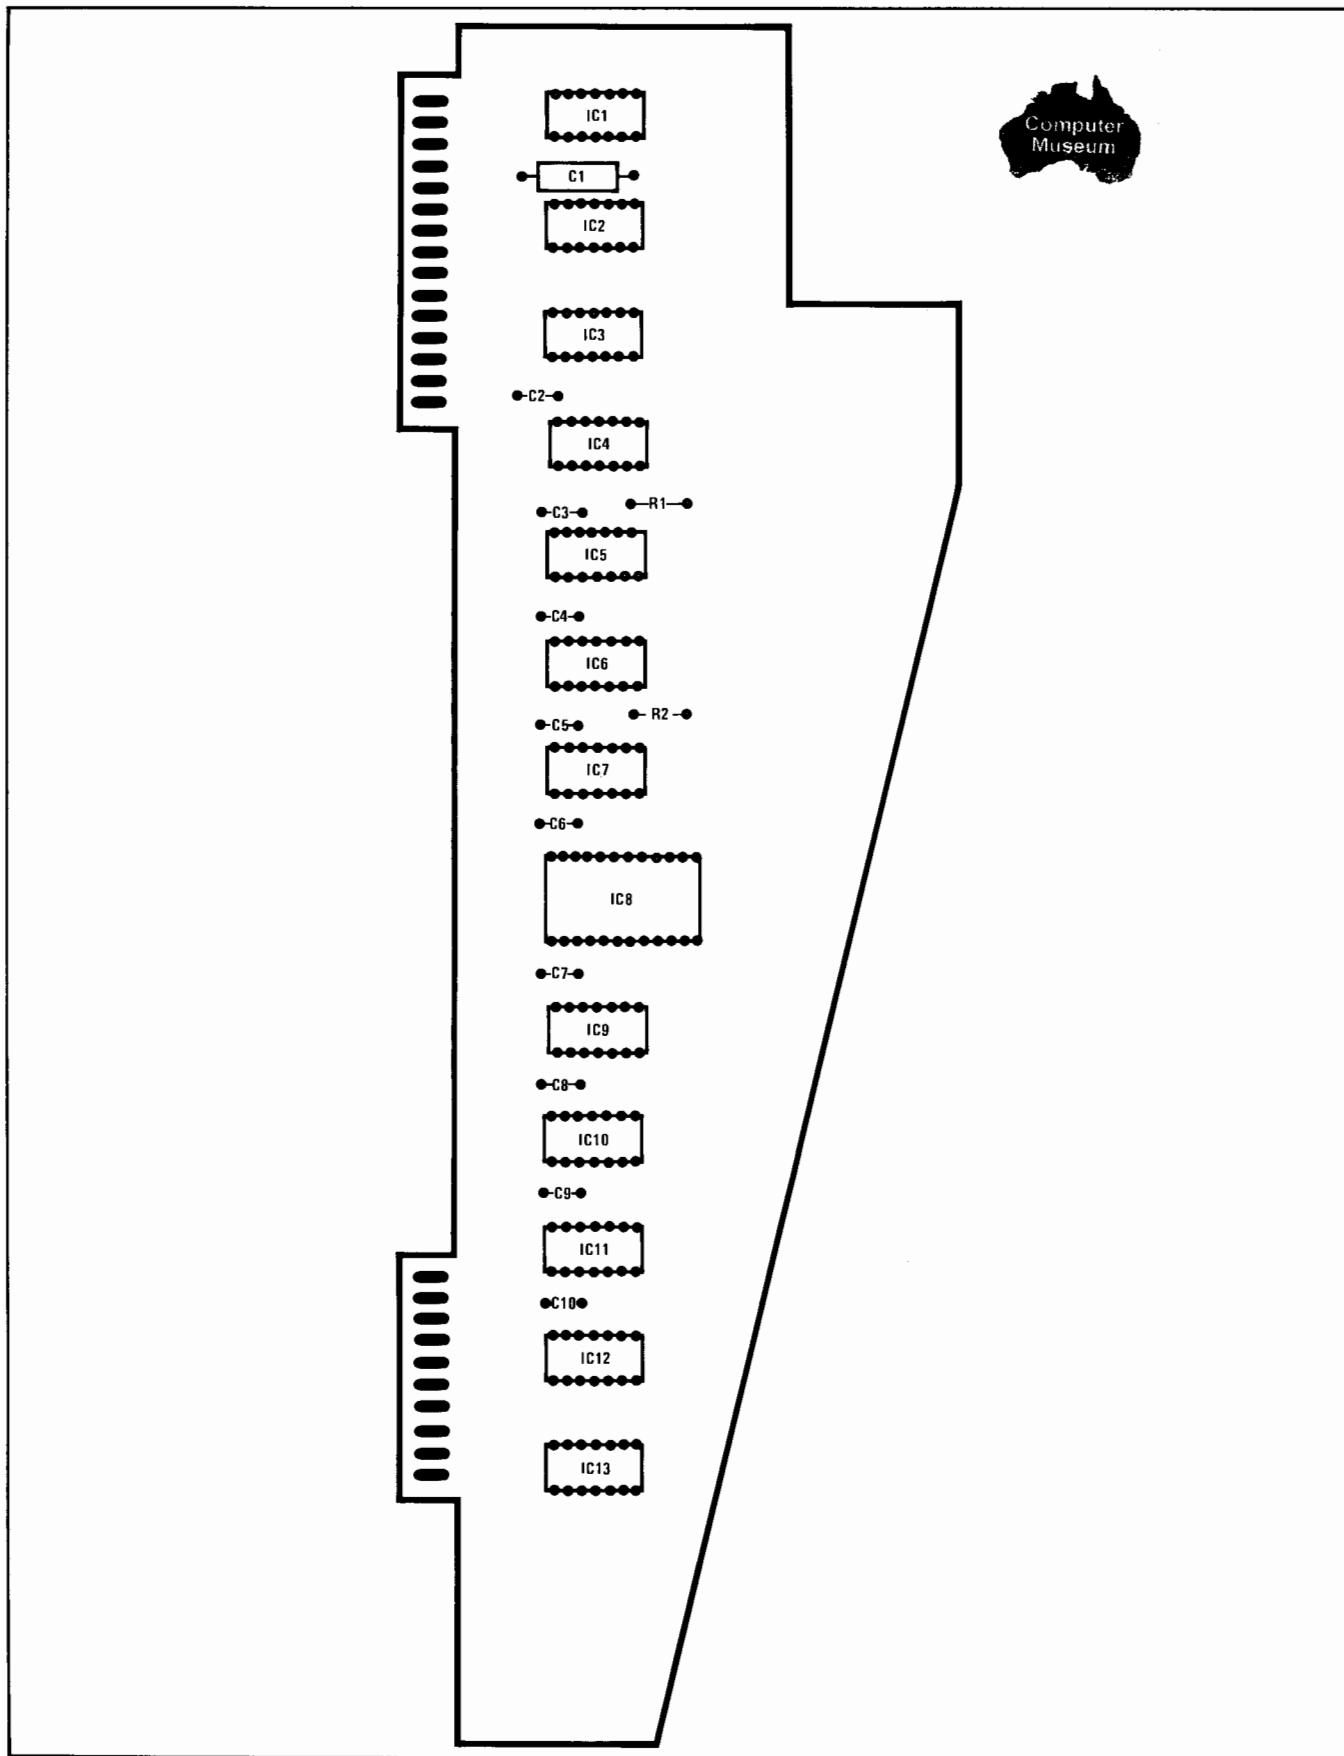


Figure 42. Memory Board

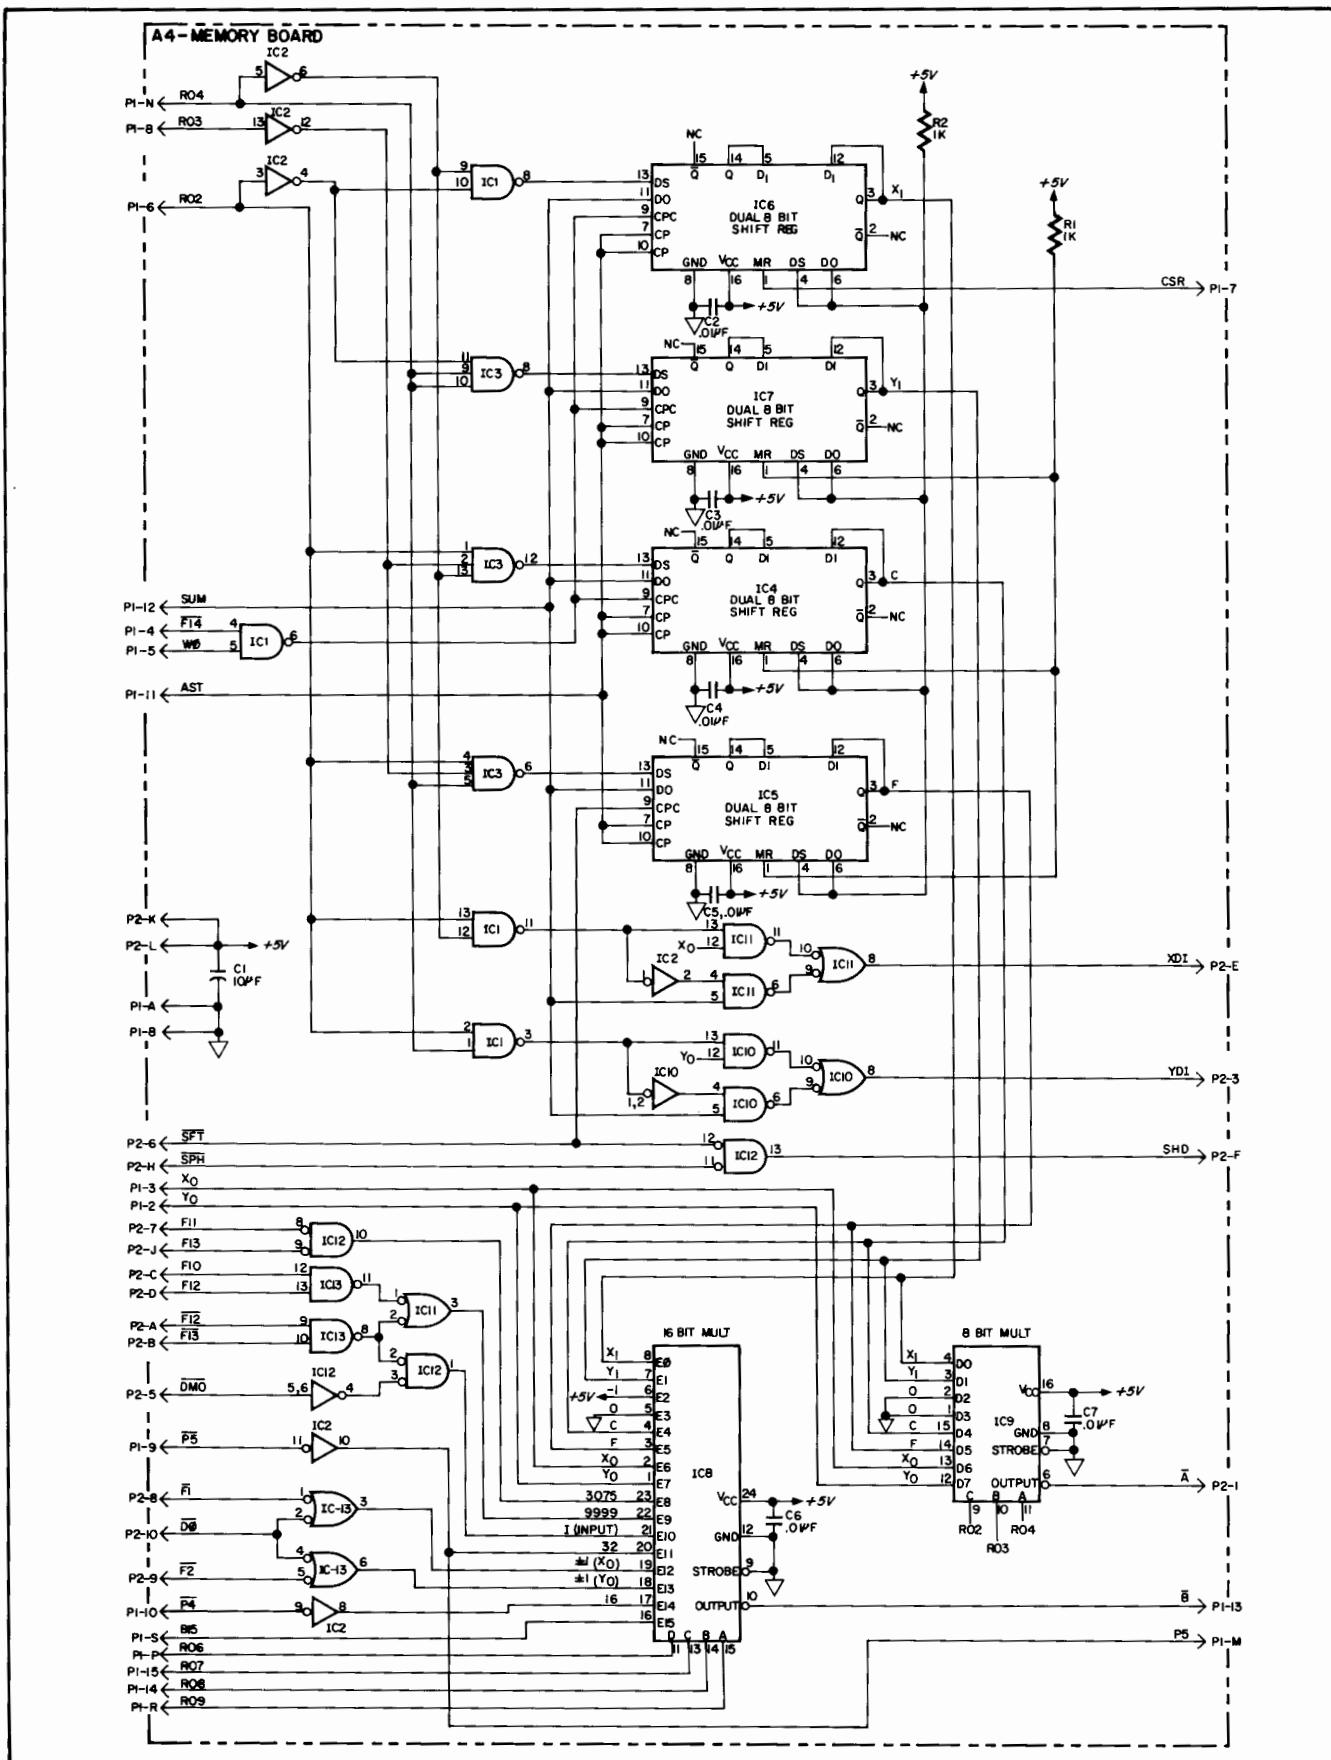


Figure 43. Memory Schematic

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

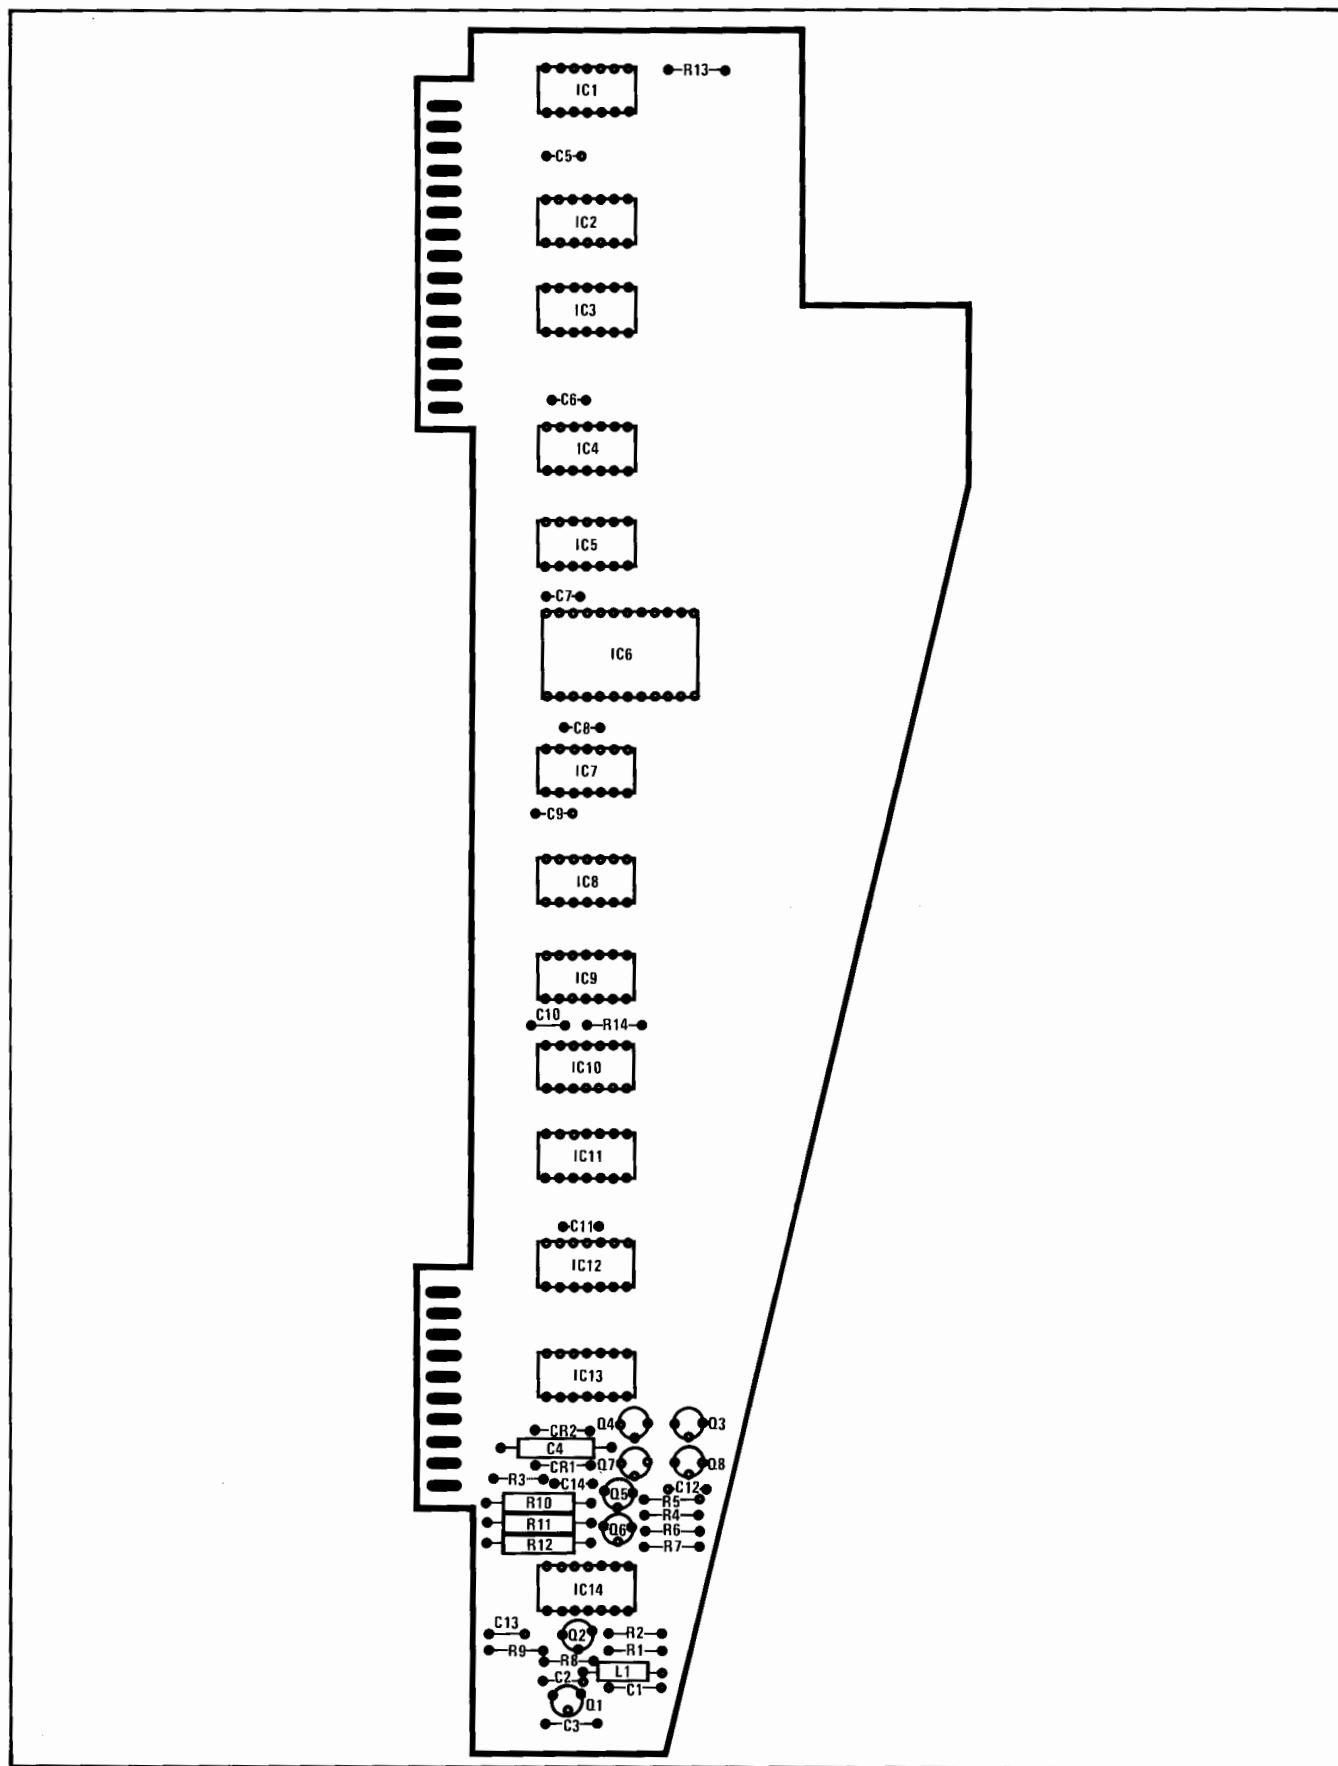


Figure 44. Time Cycle Board

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

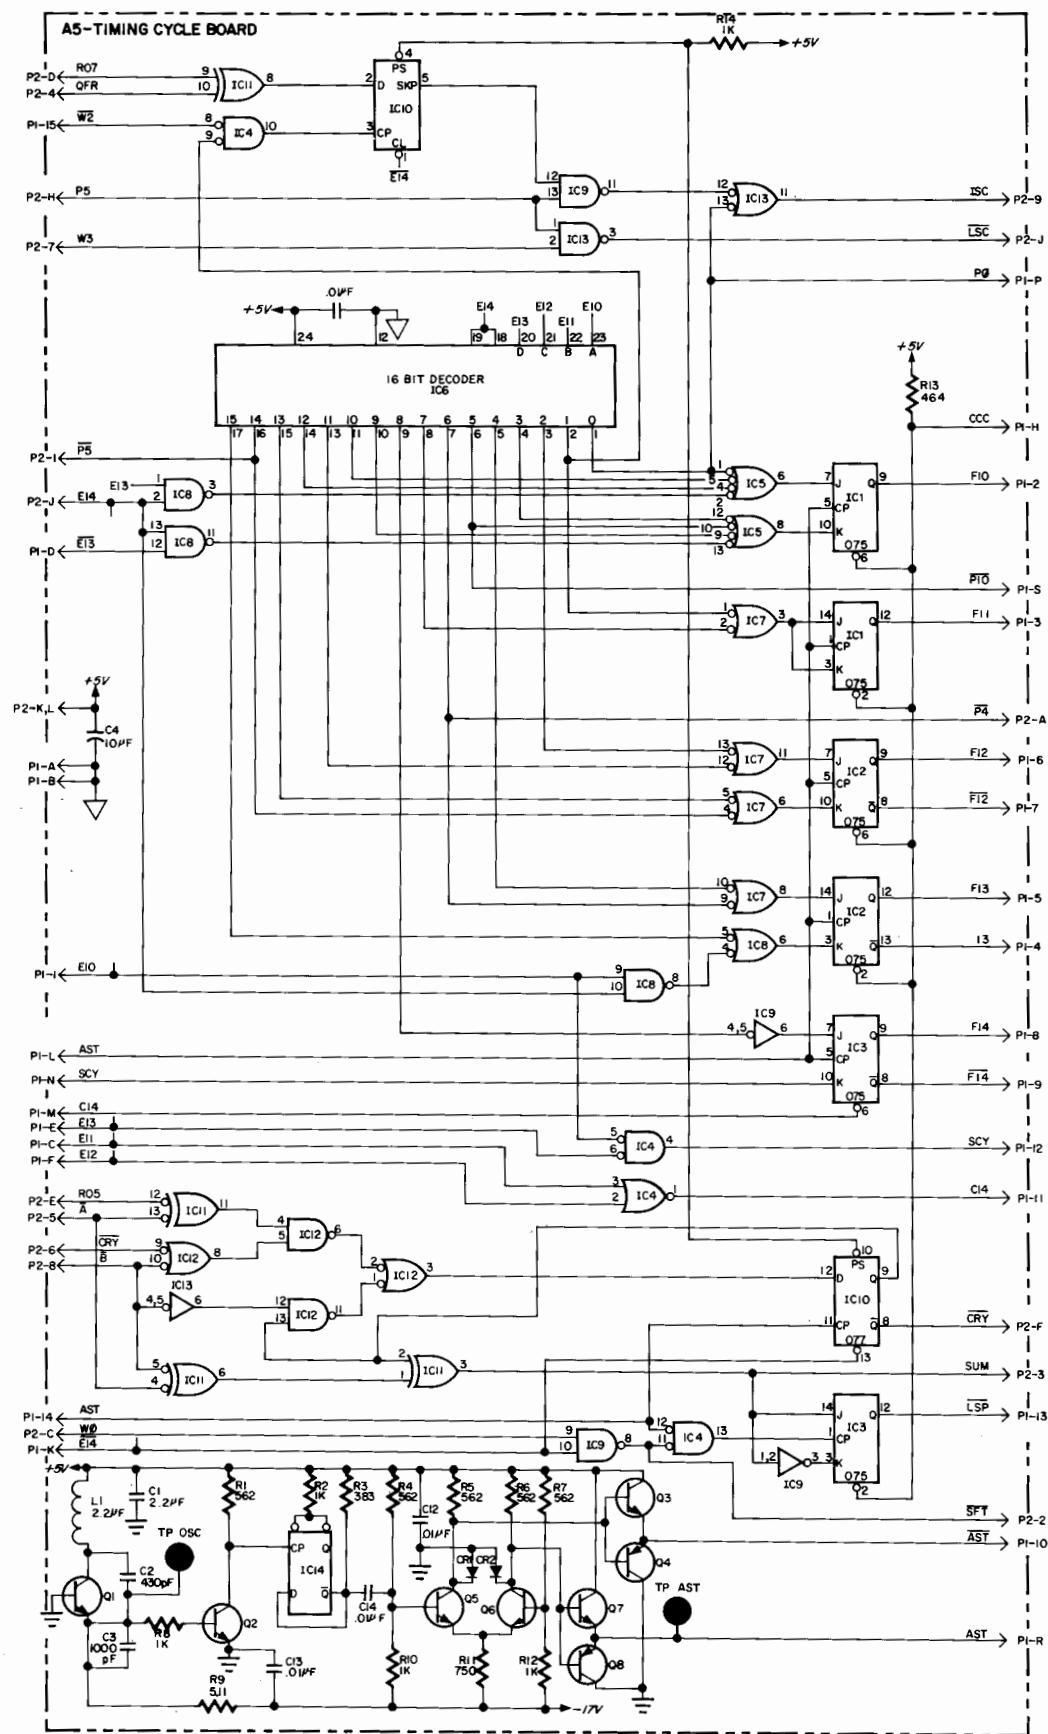


Figure 45. Time Cycle Schematic

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

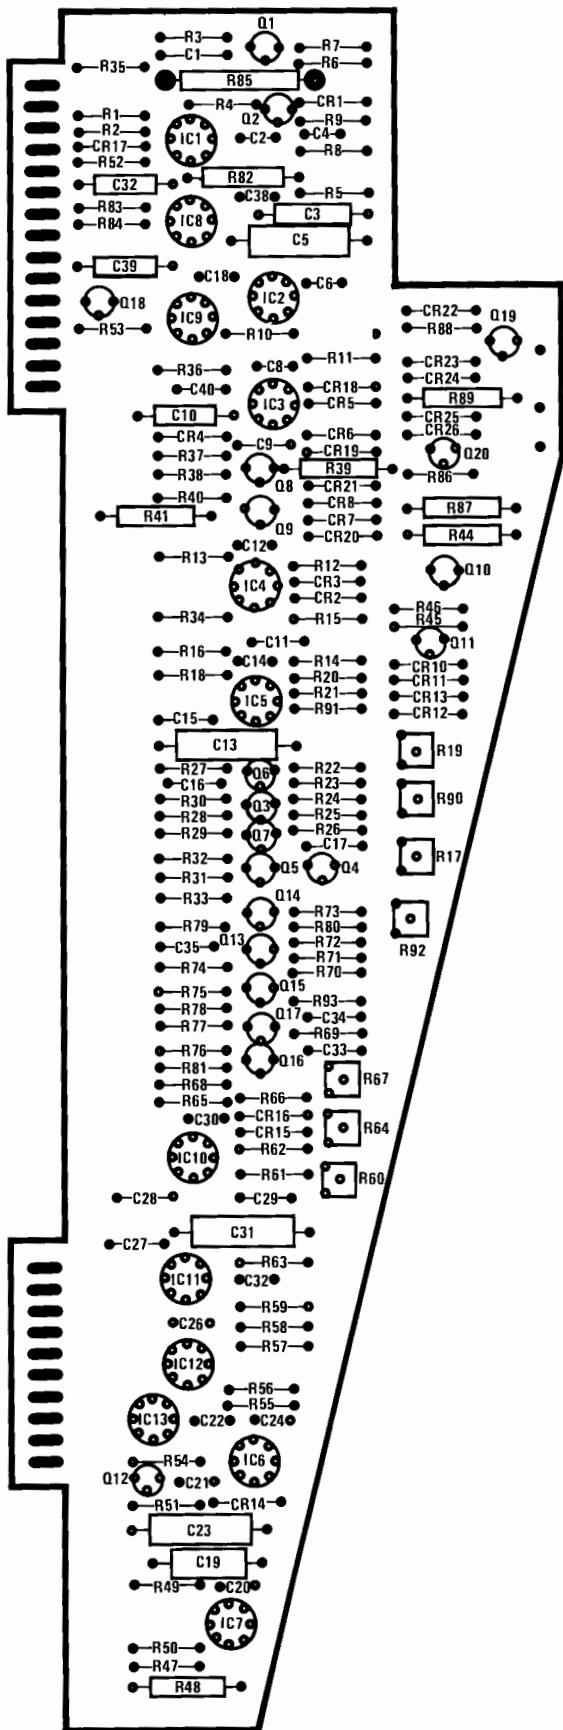


Figure 46. Servo Board



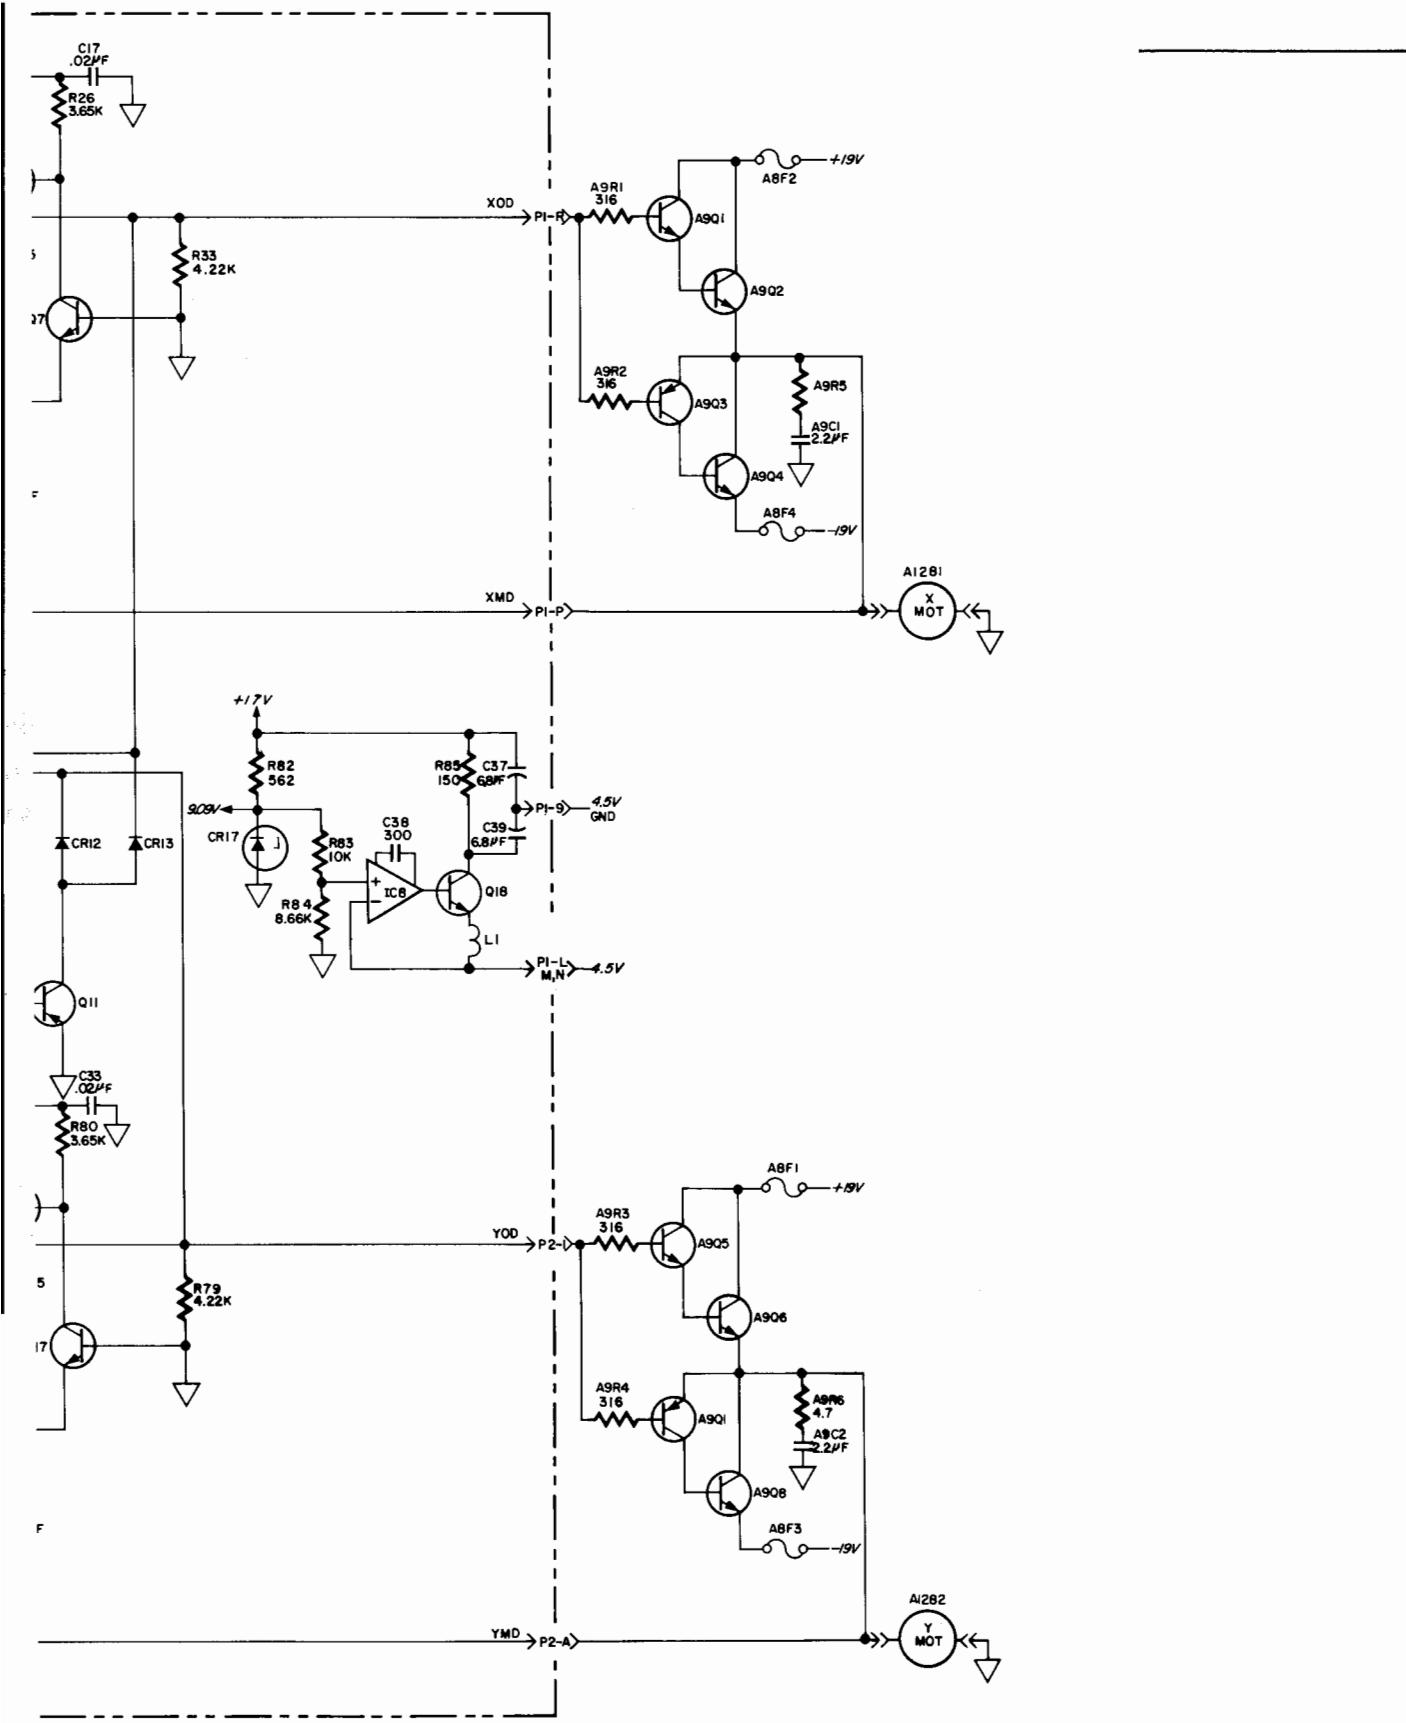


Figure 47.
Servo Schematic

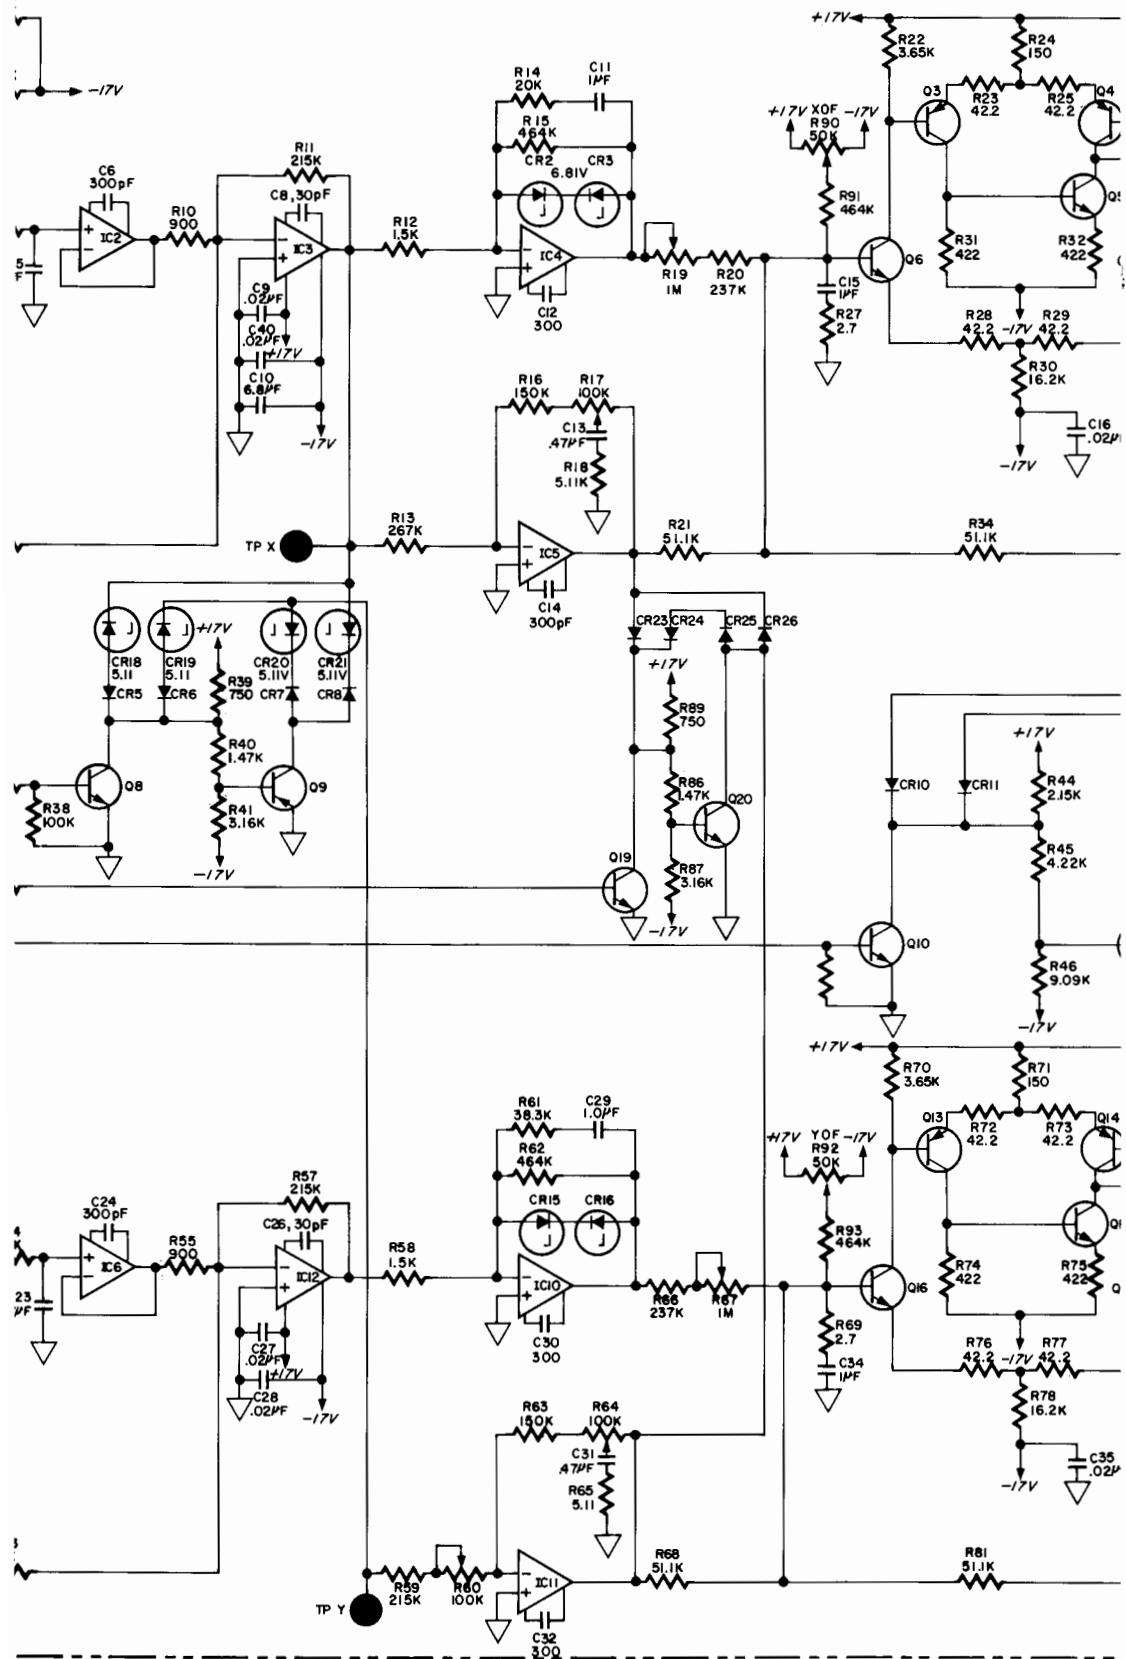

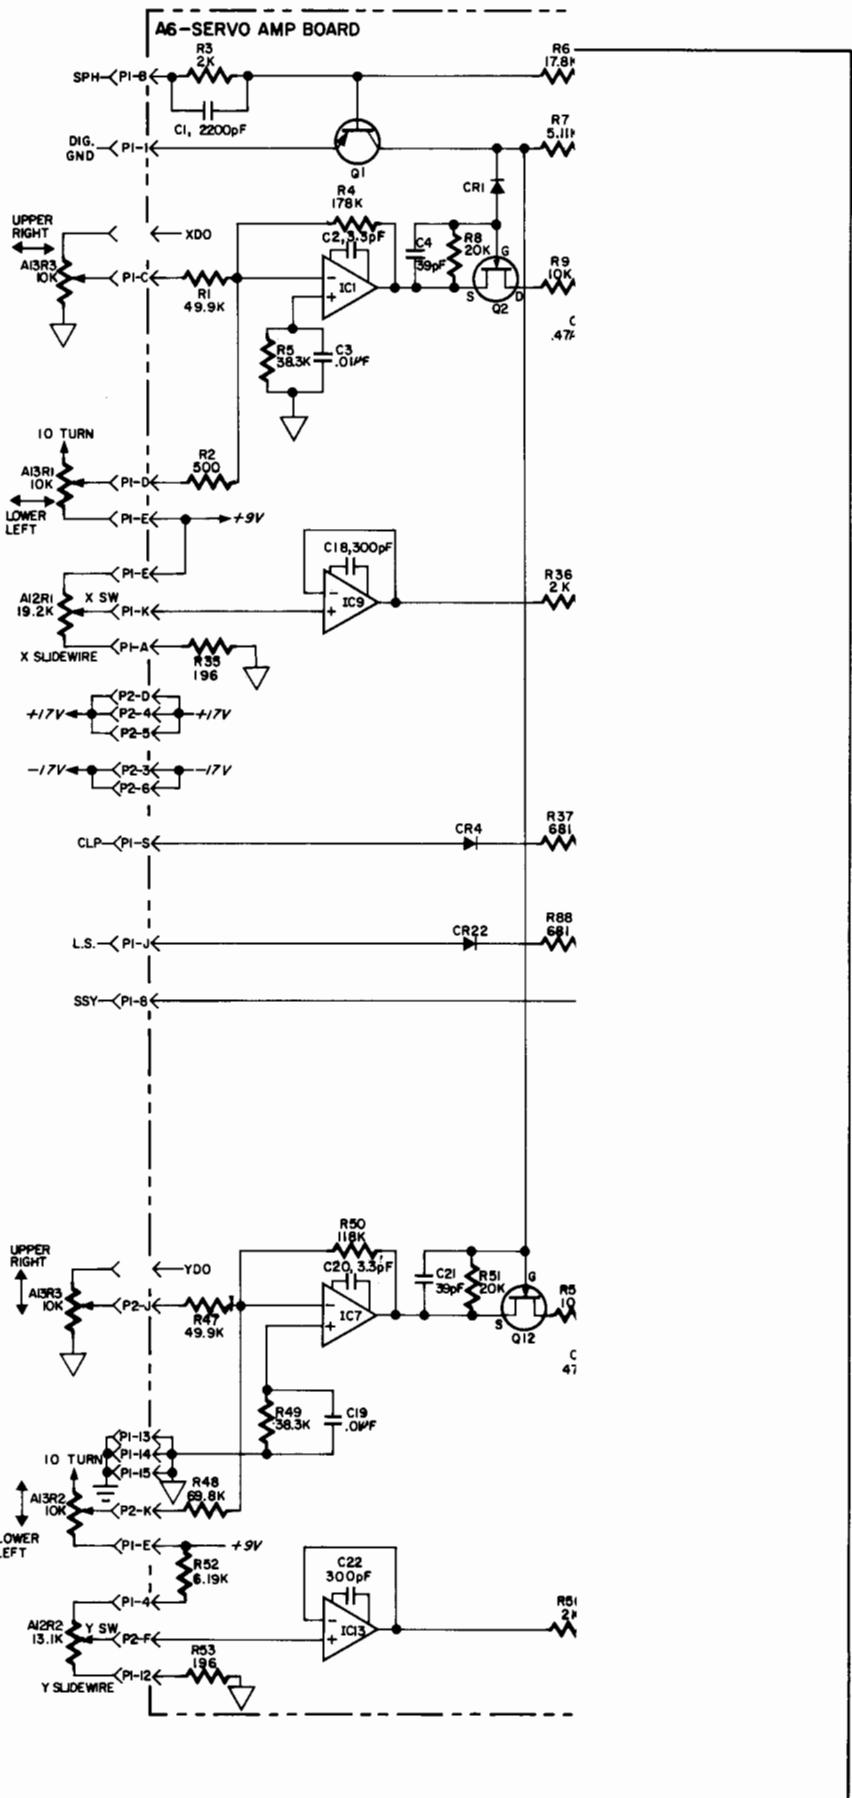

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

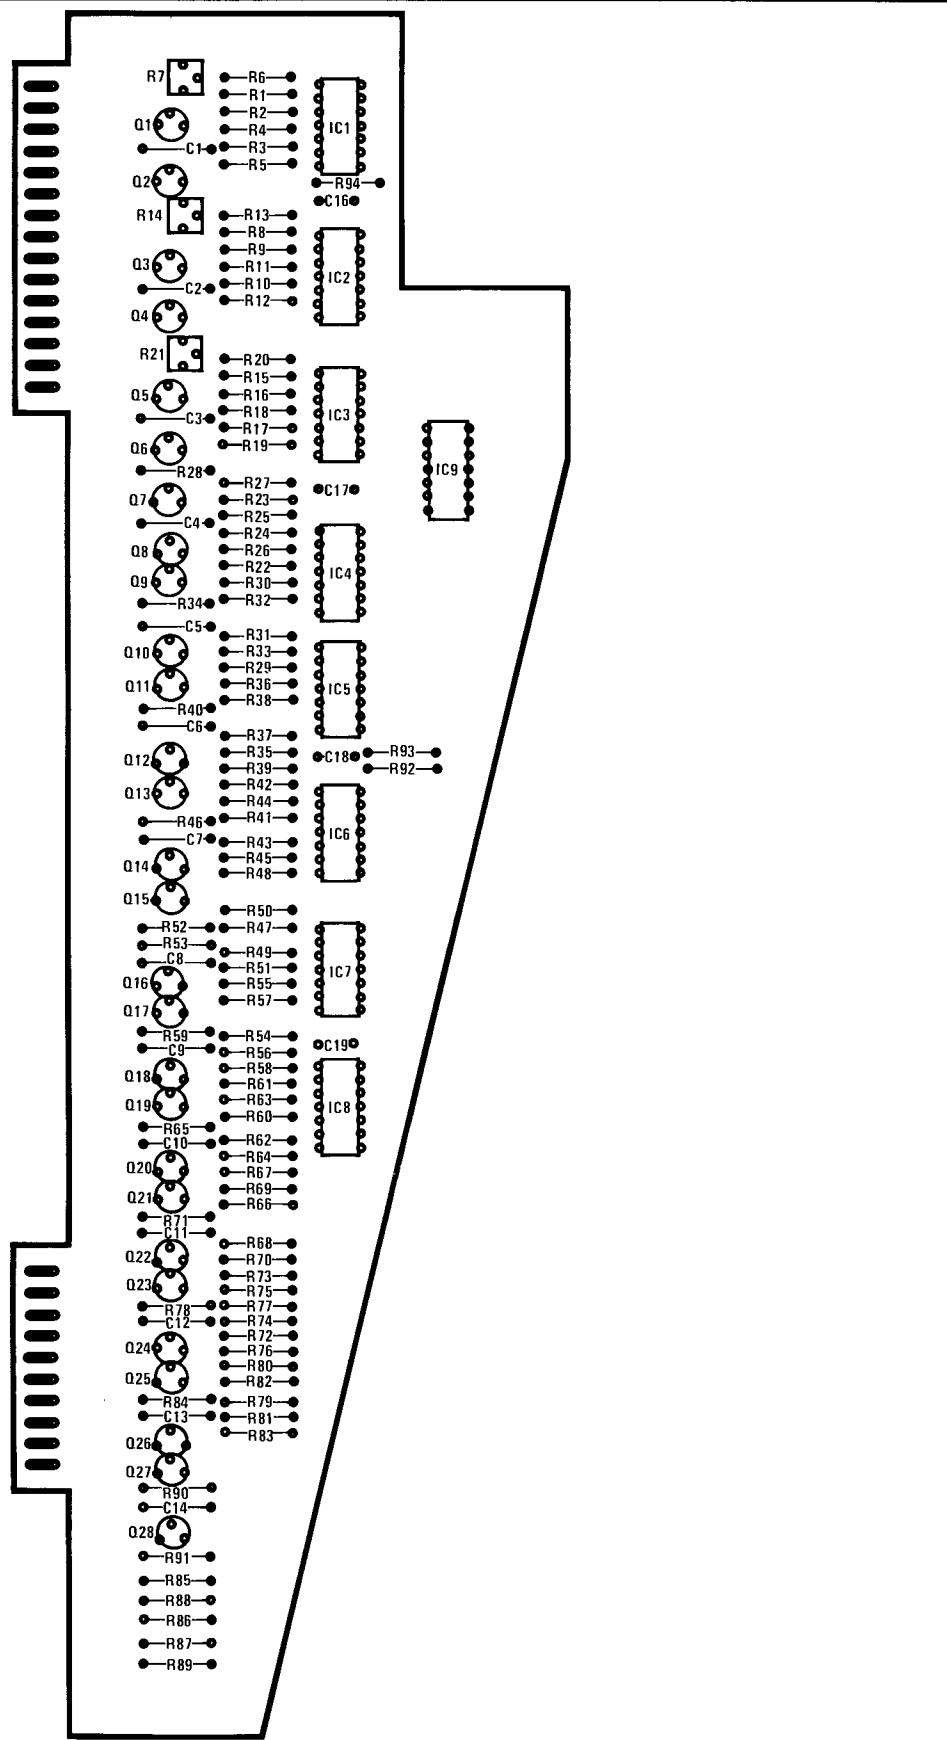


Figure 48. DAC Board




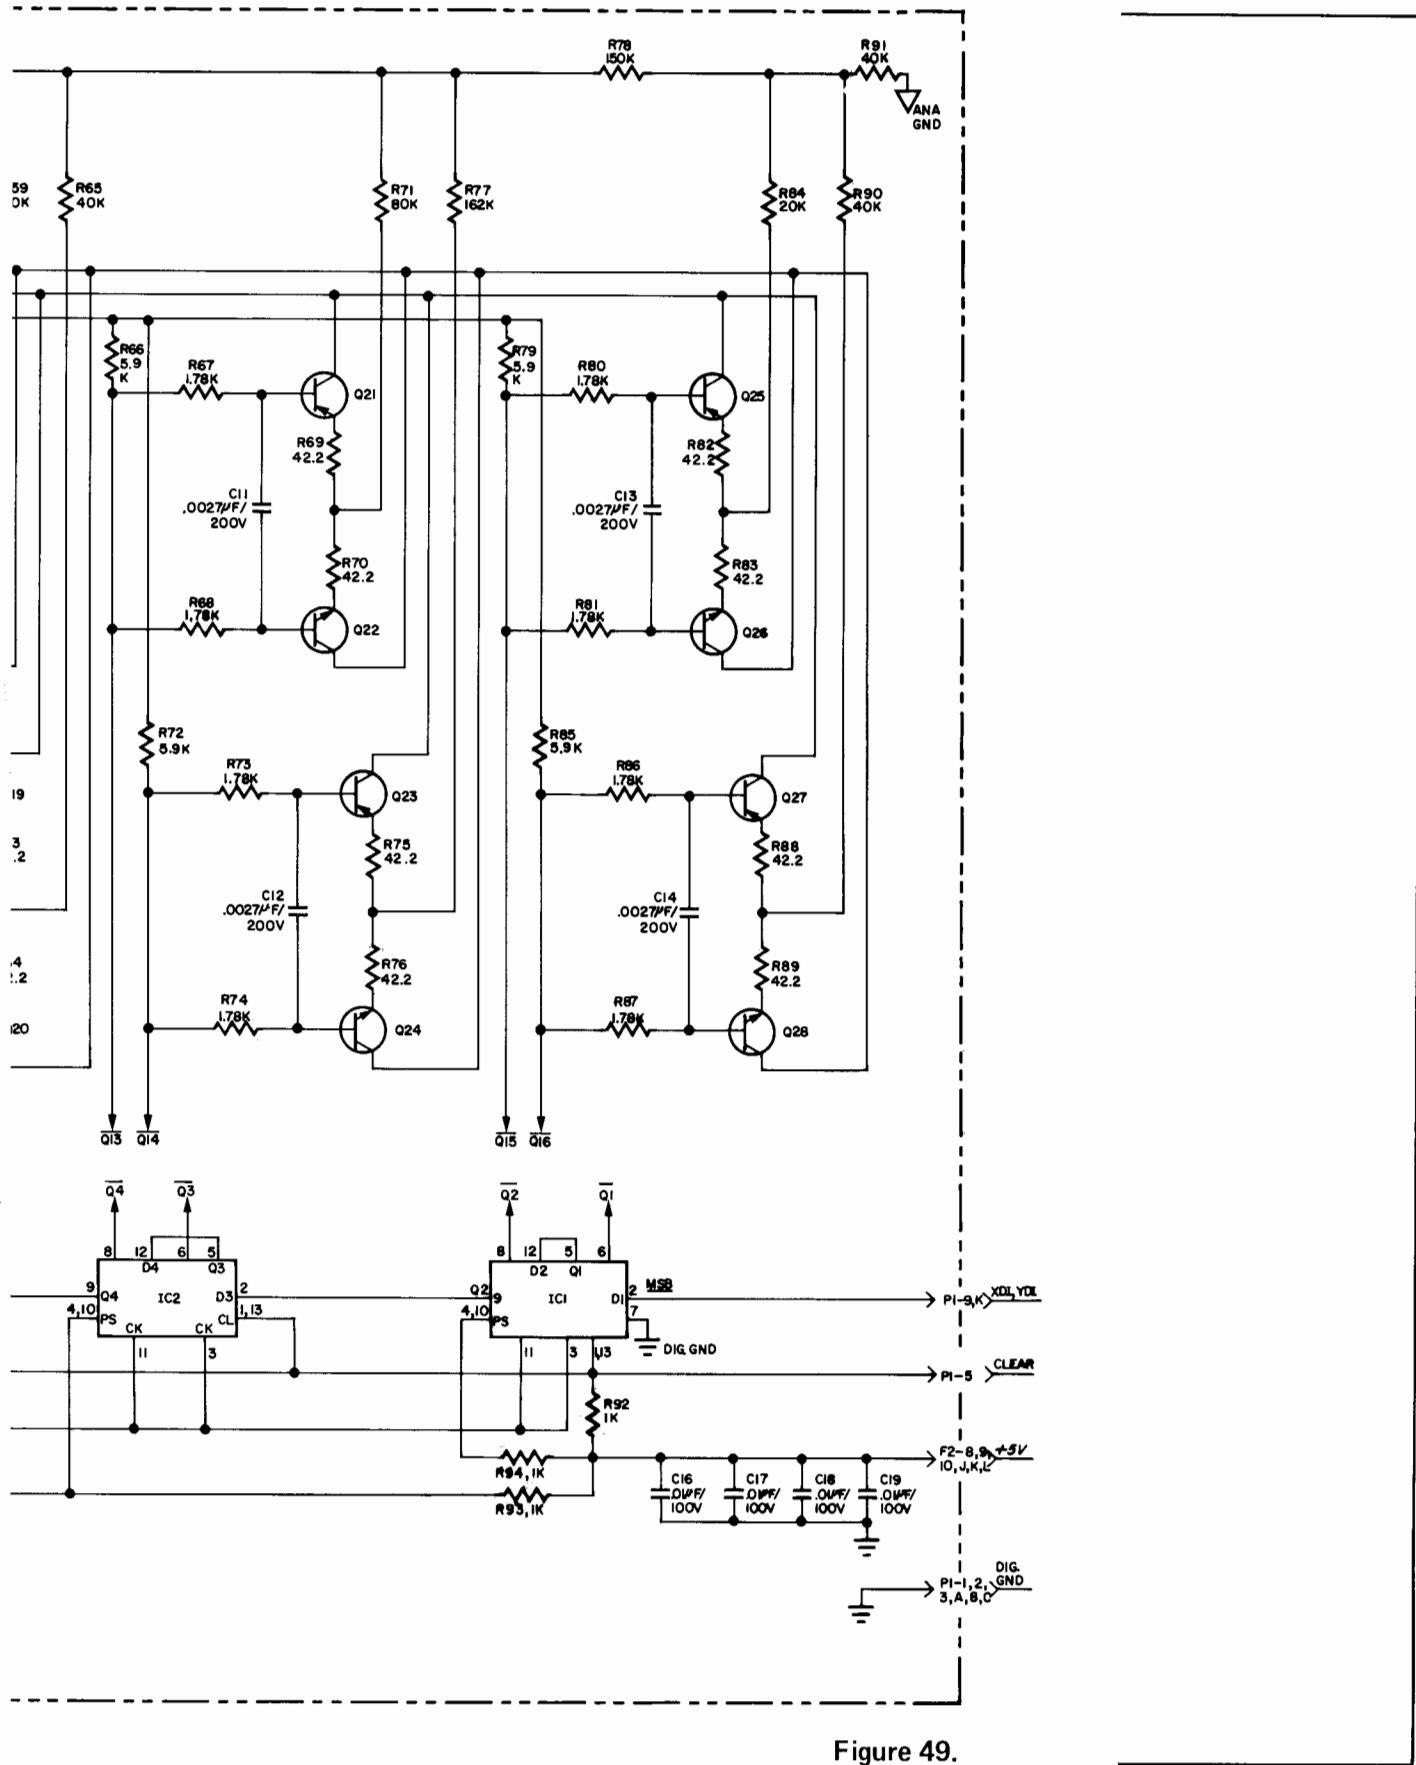


Figure 49.
DAC Schematic

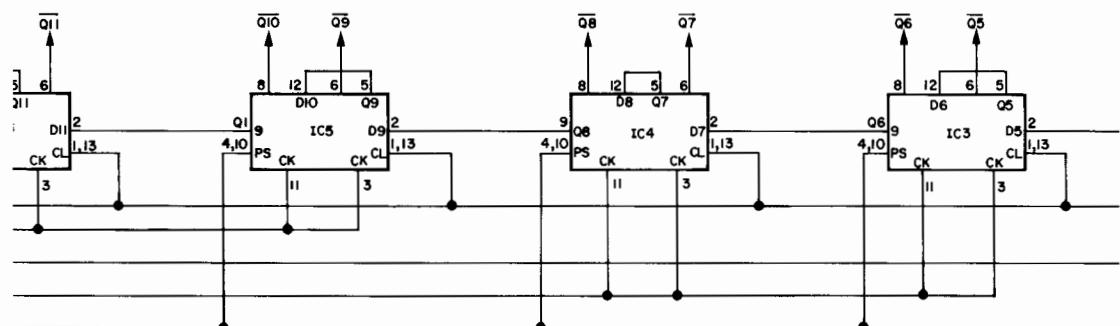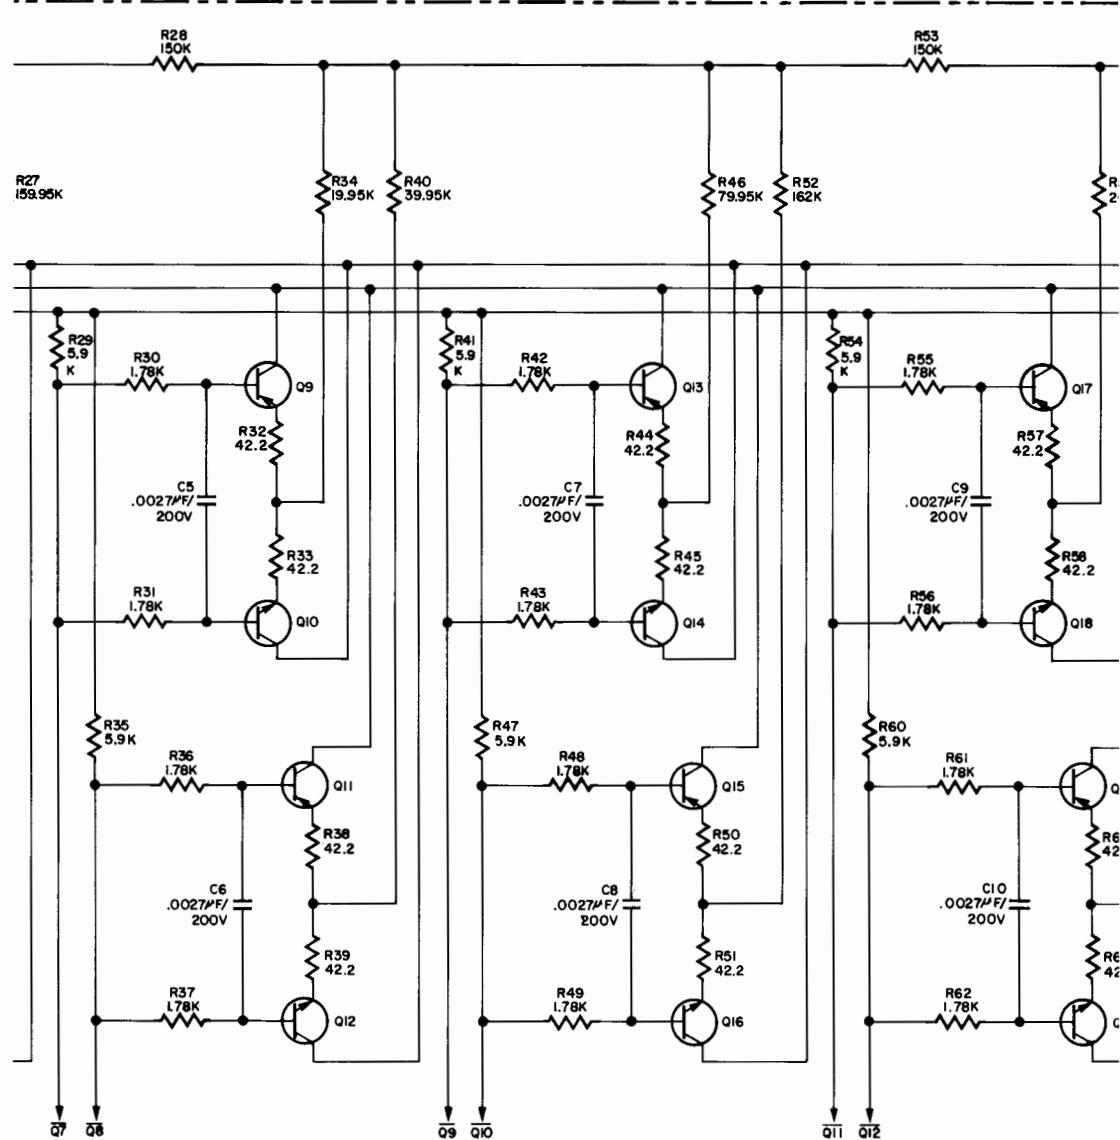

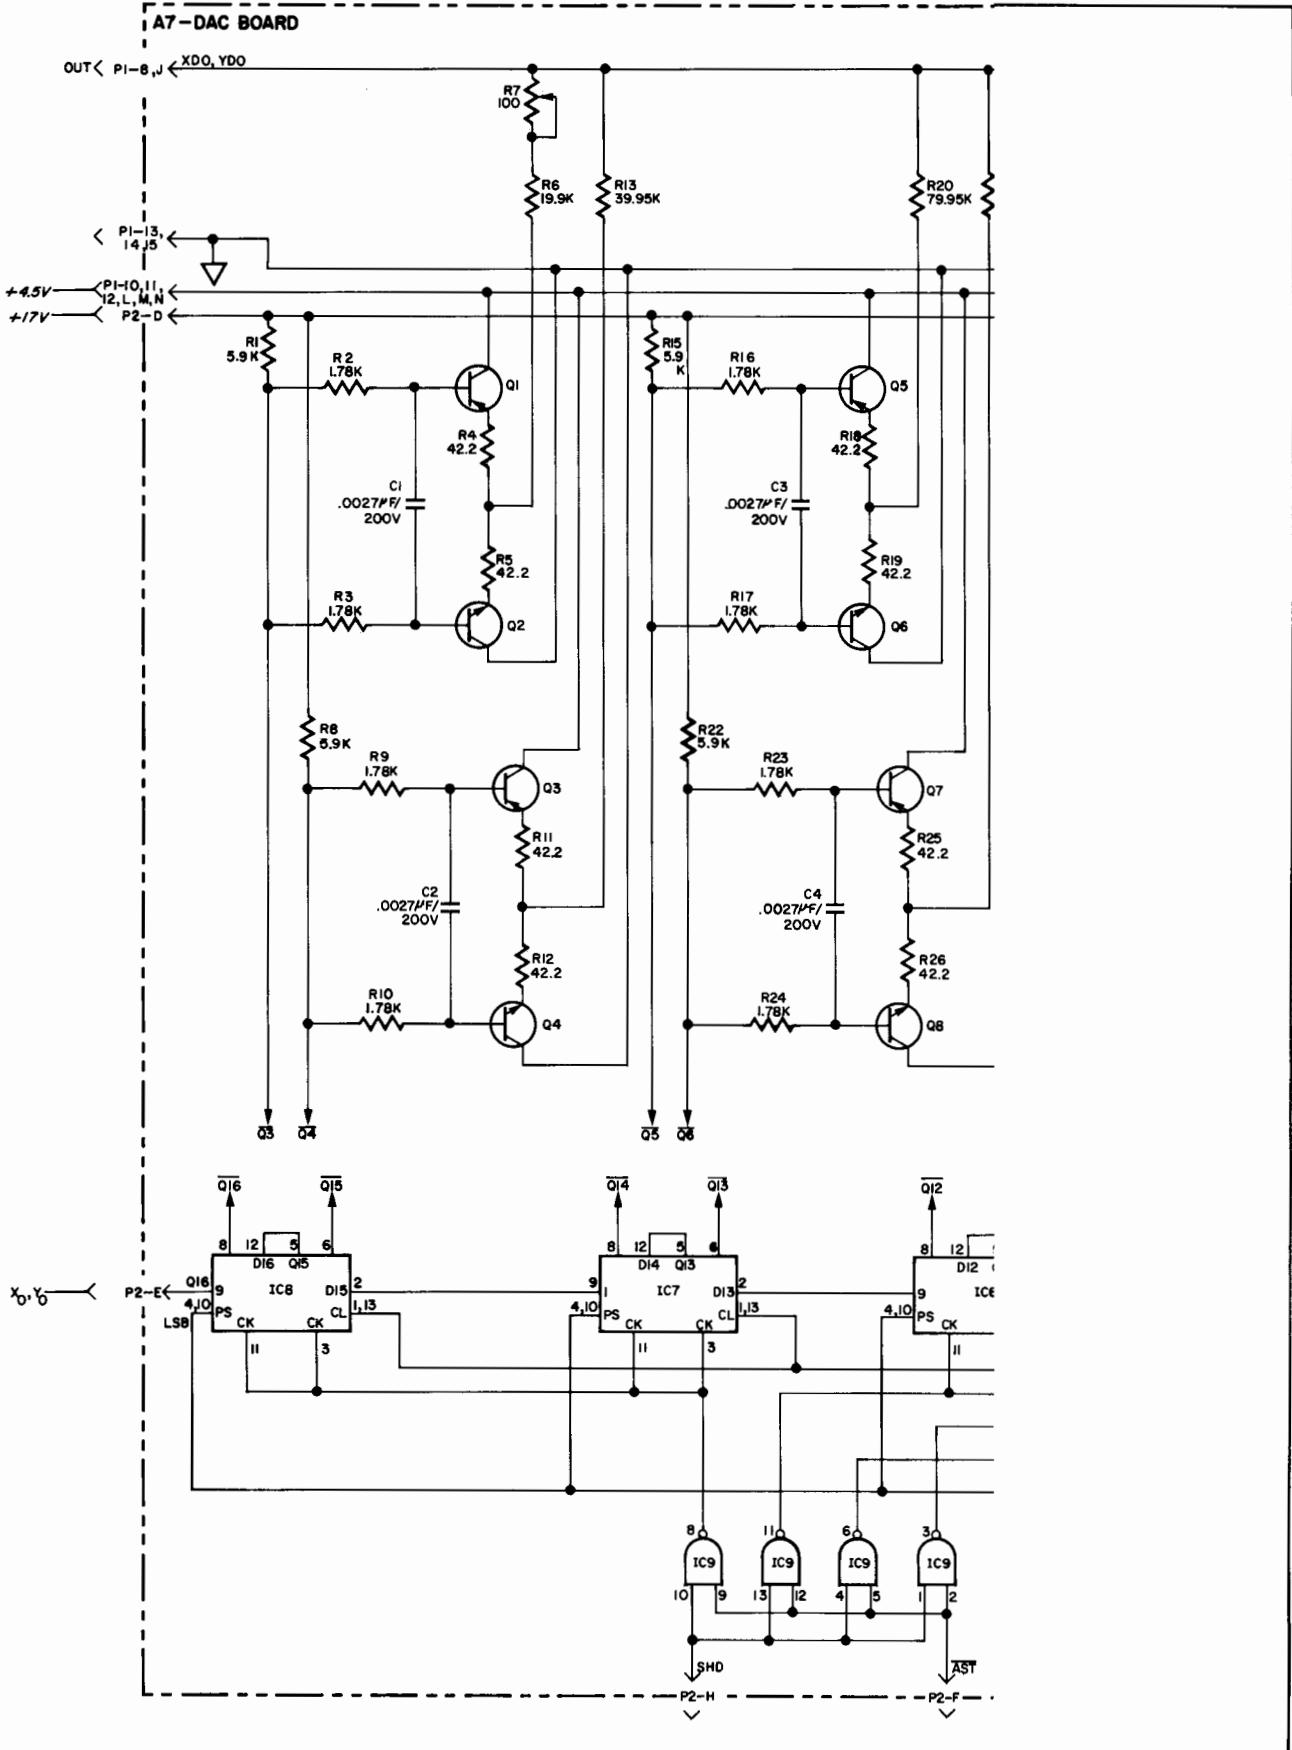

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

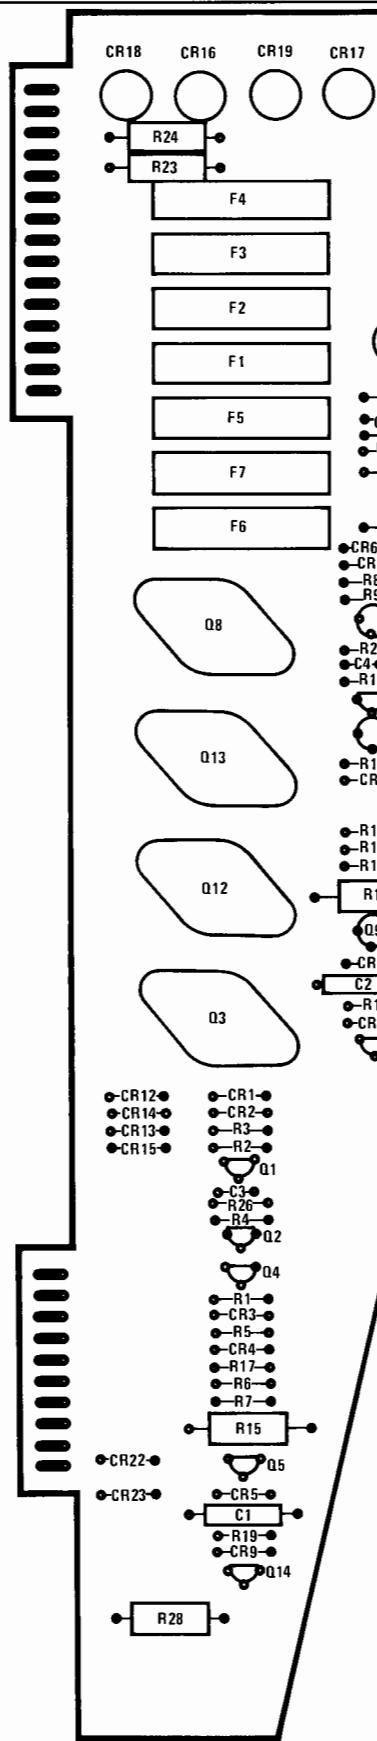


Figure 50. Rectifier Board

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

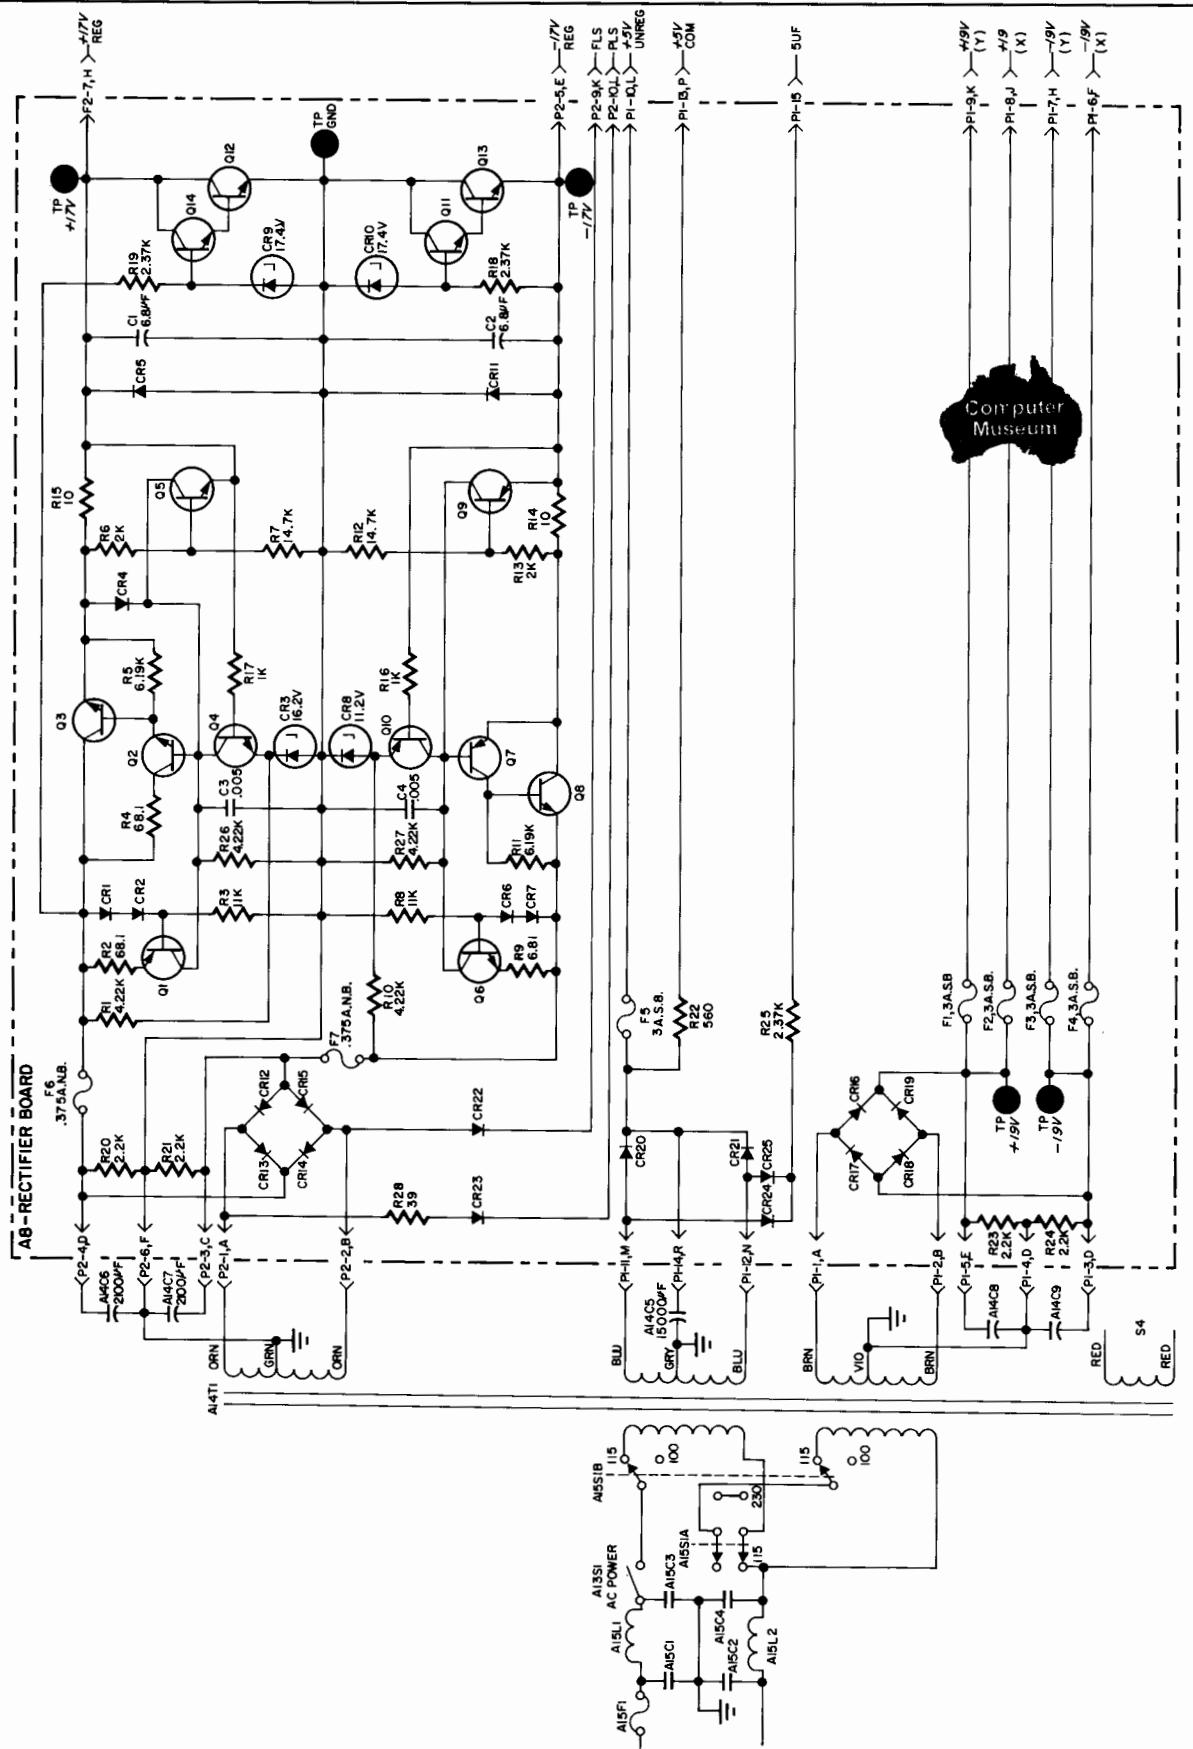


Figure 51. Rectifier Schematic

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

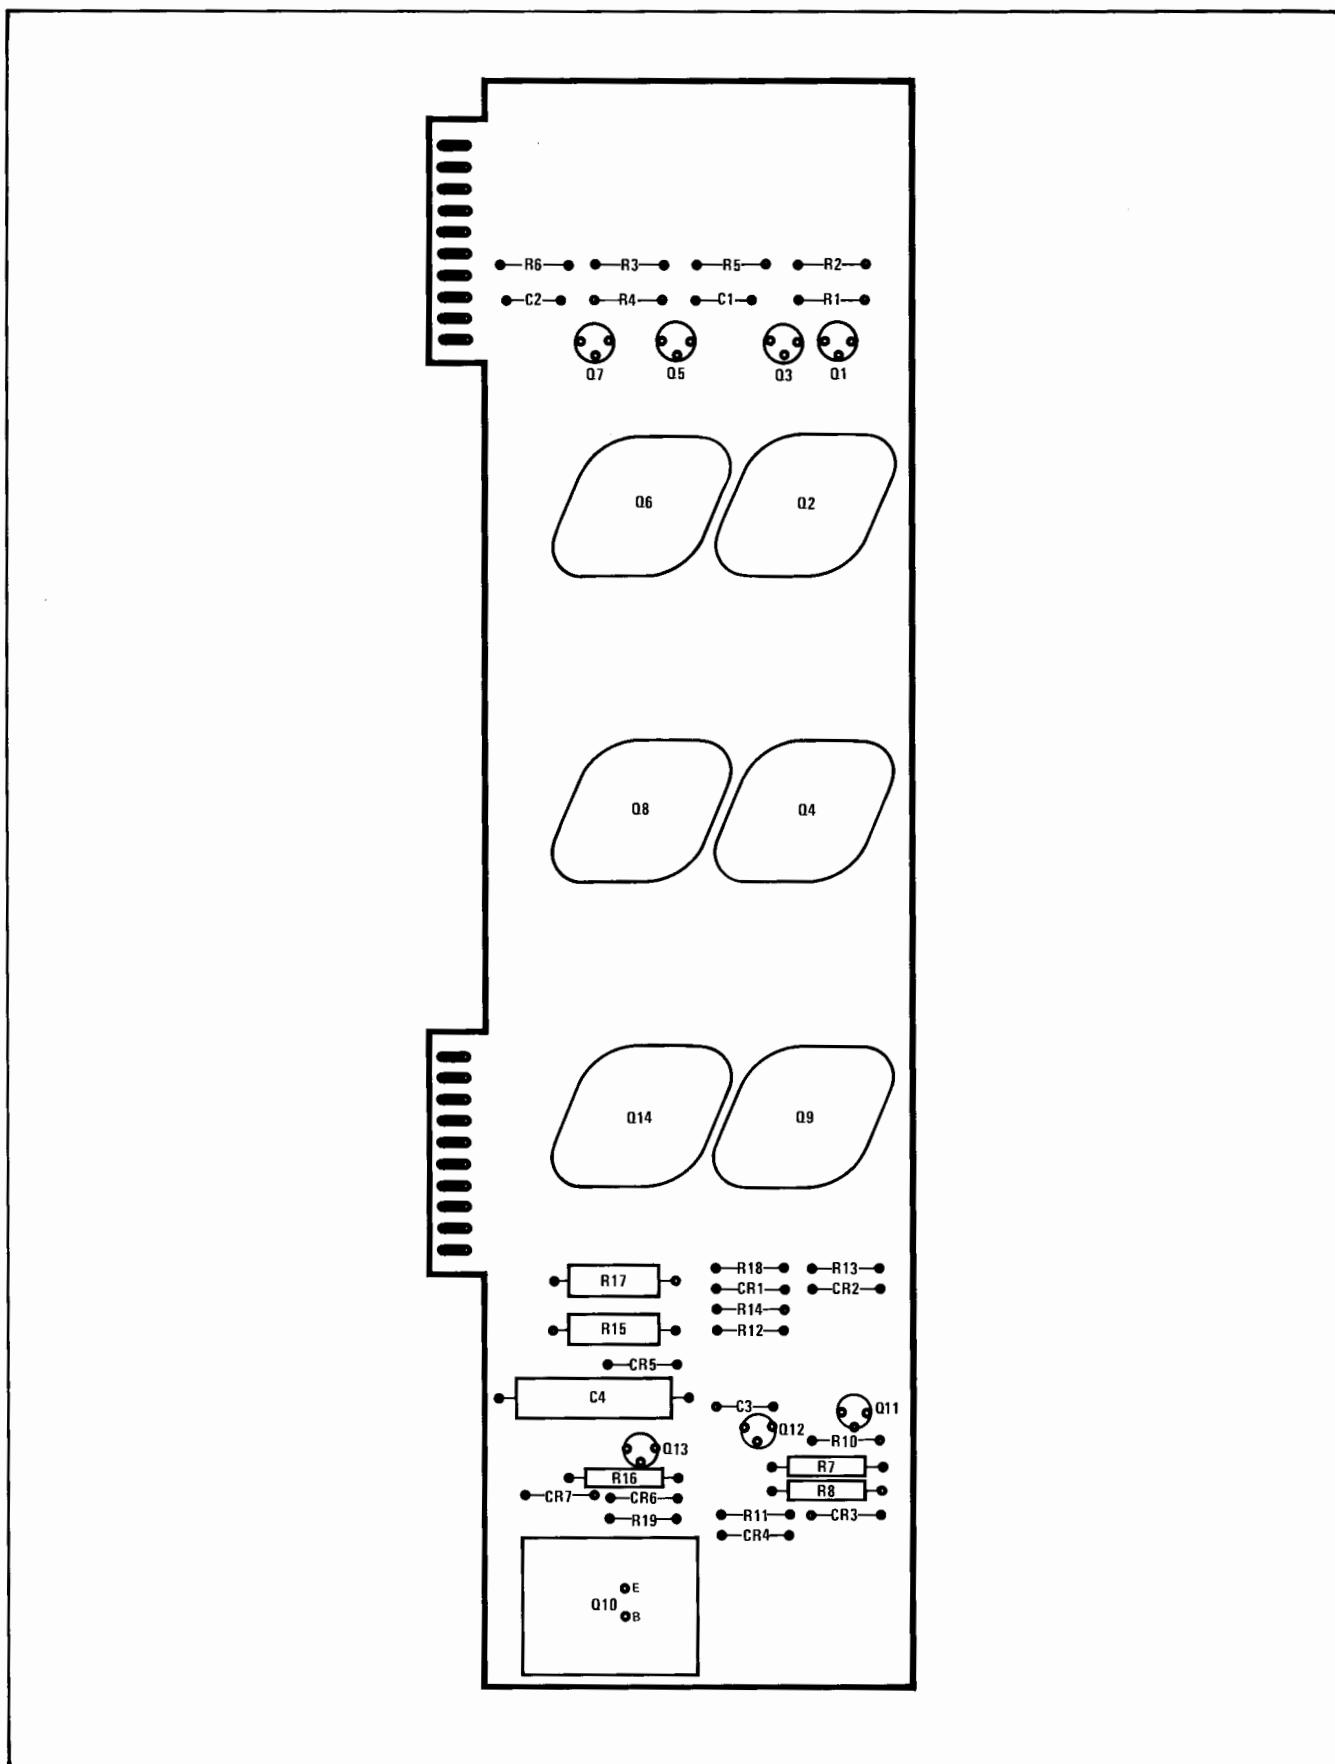


Figure 52. Power Driver Board

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

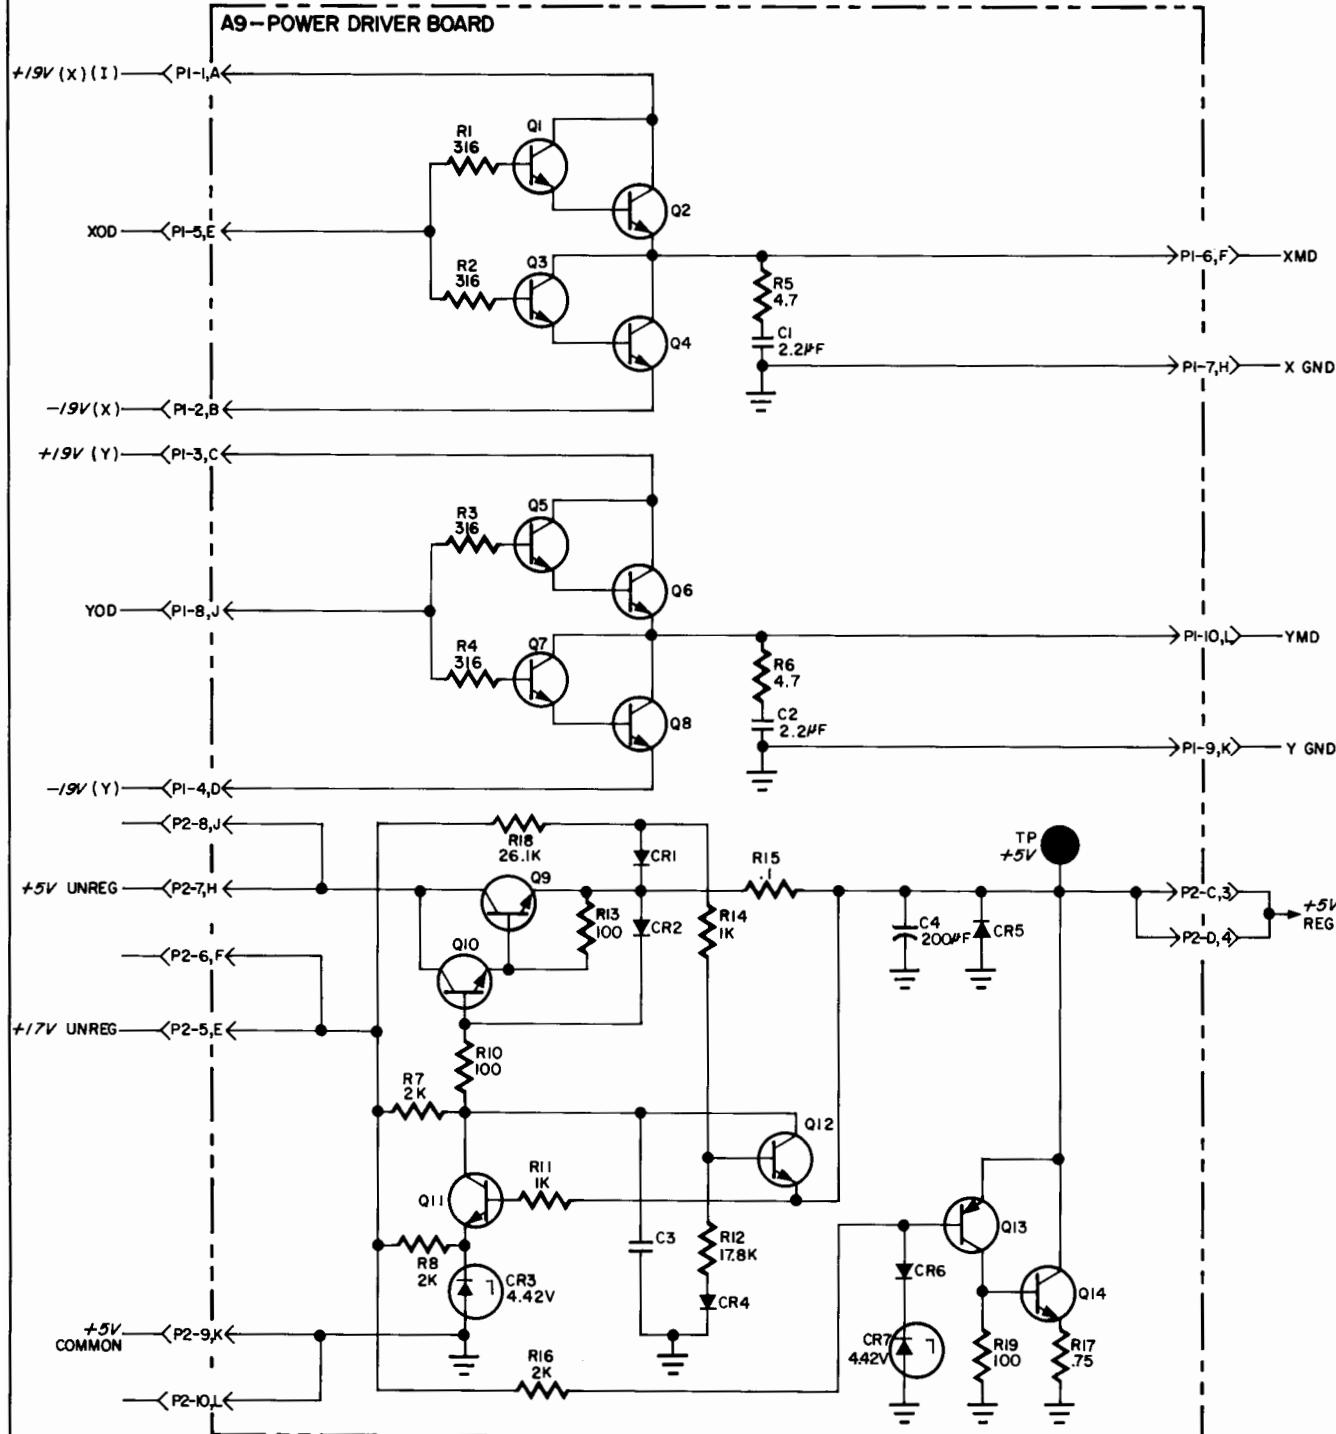


Figure 53. Power Driver Schematic



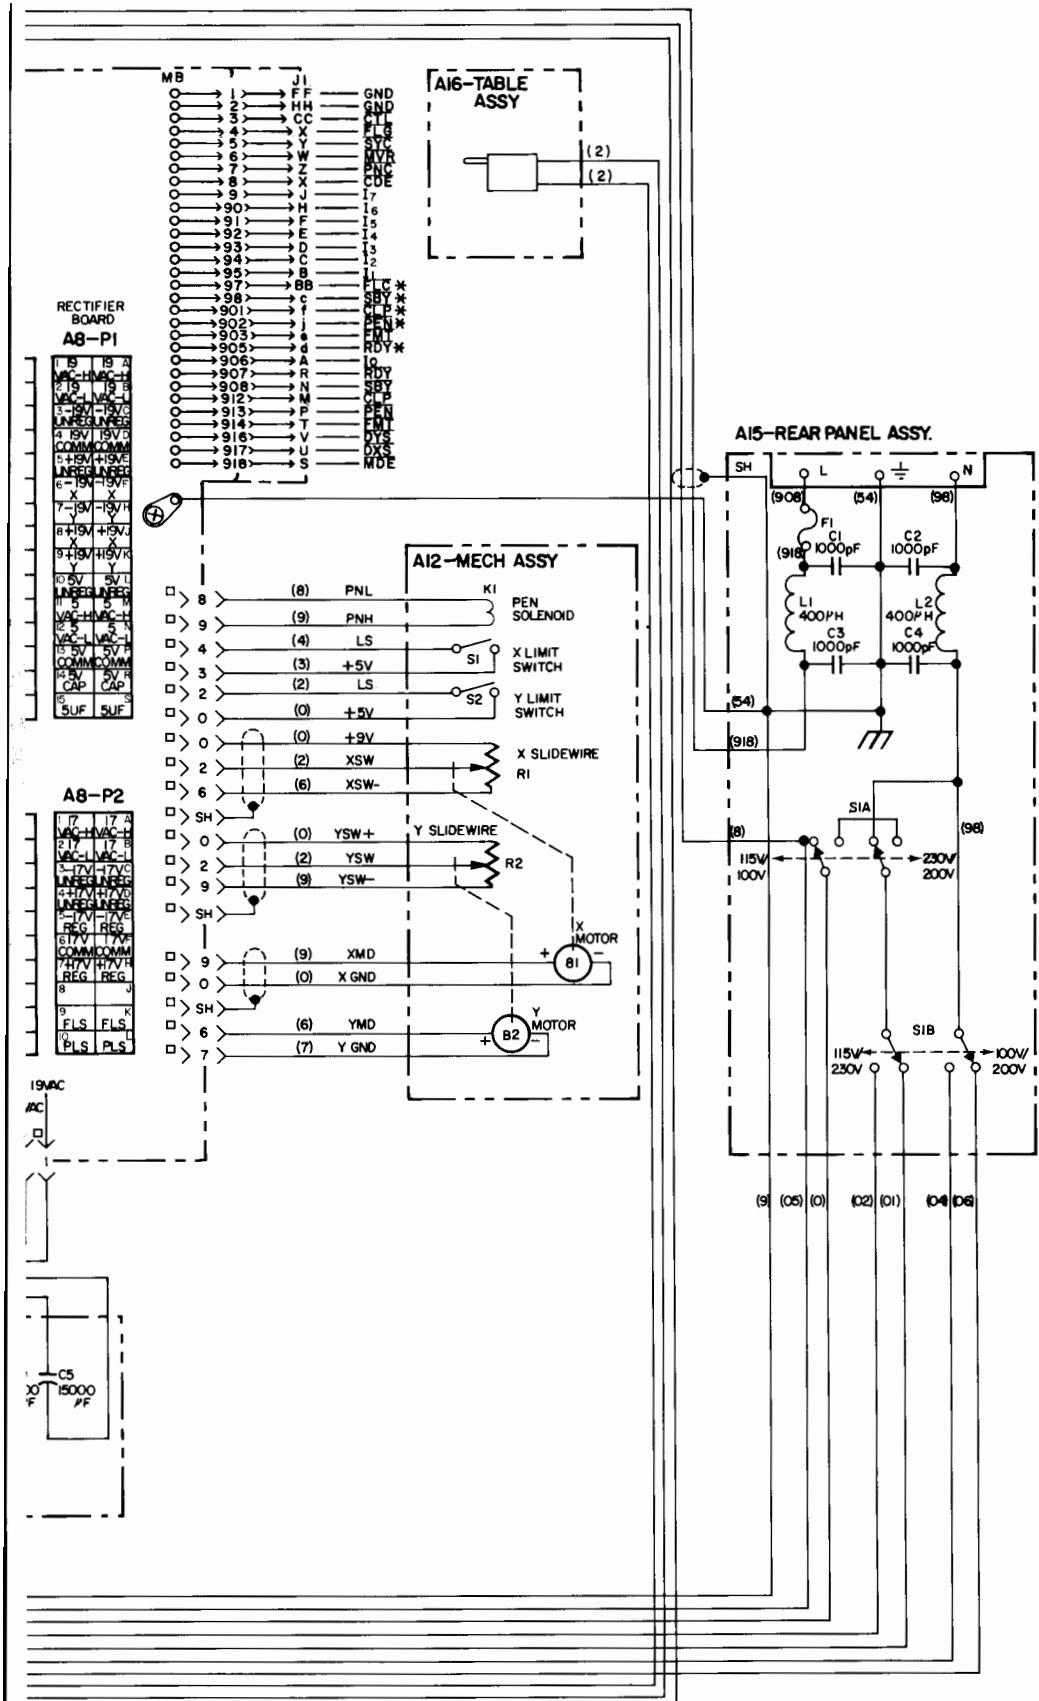


Figure 54.
Mother Board Schematic

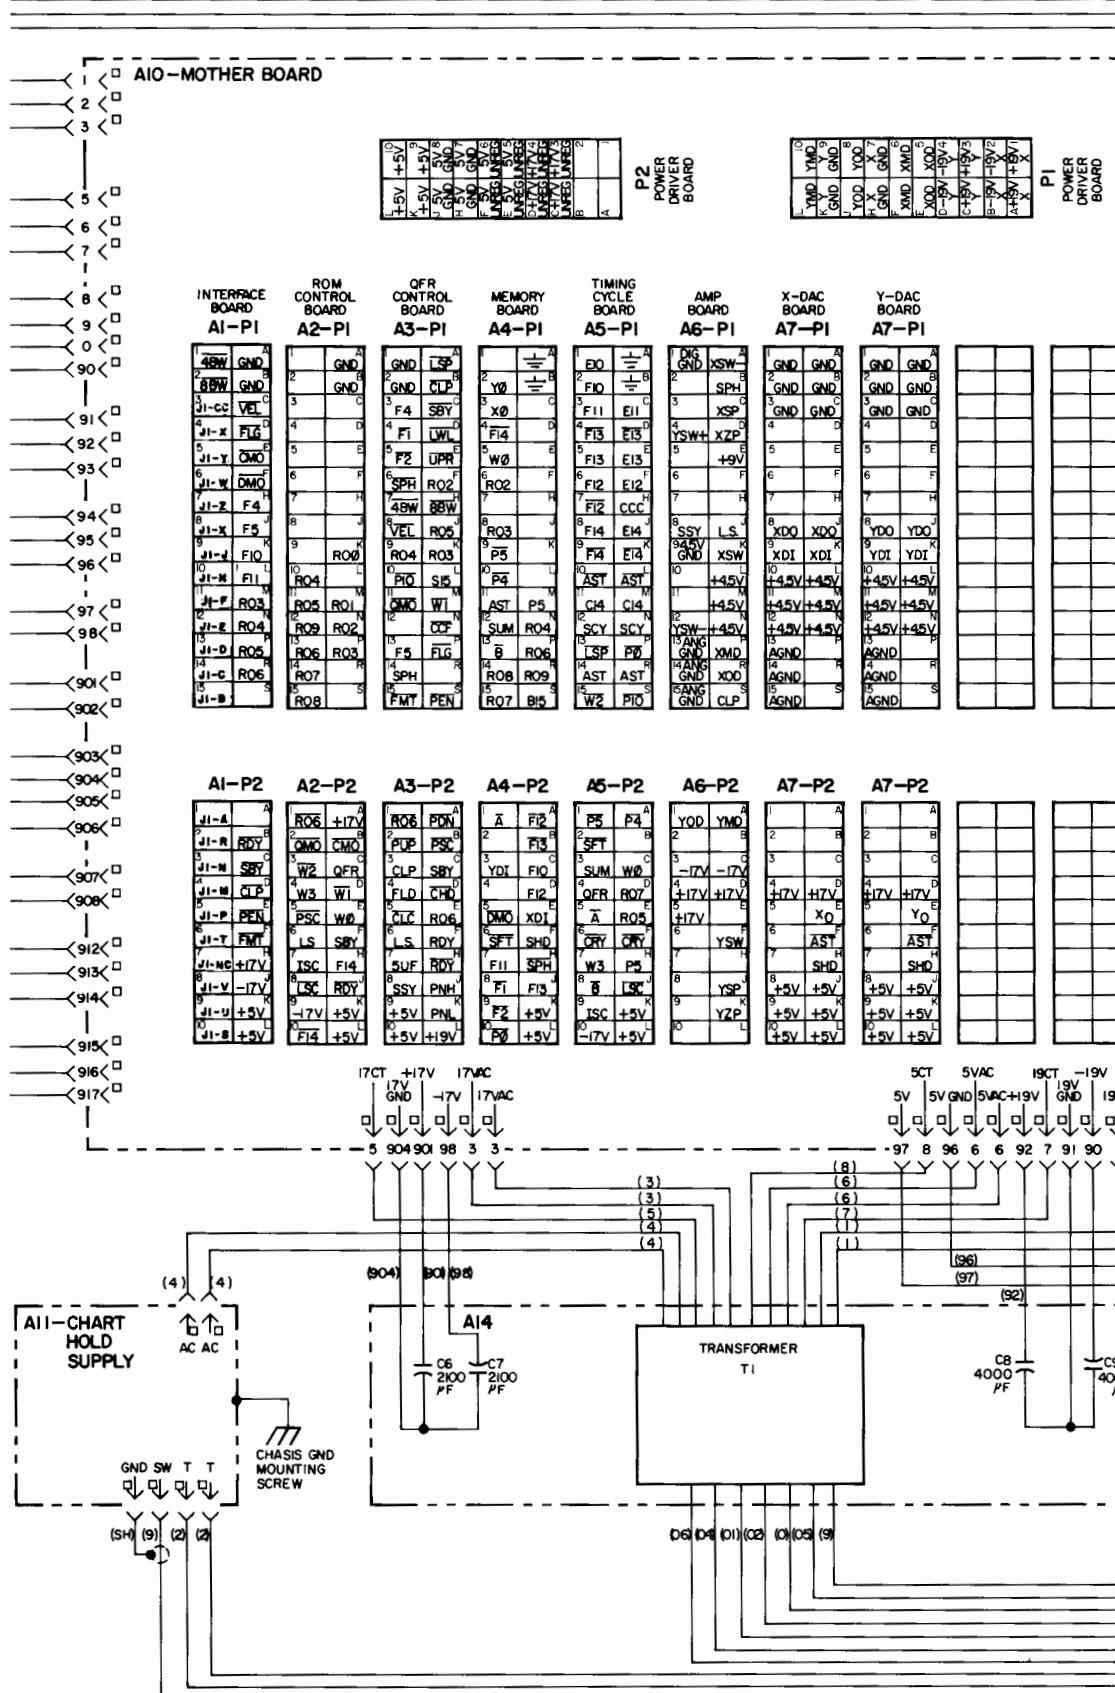

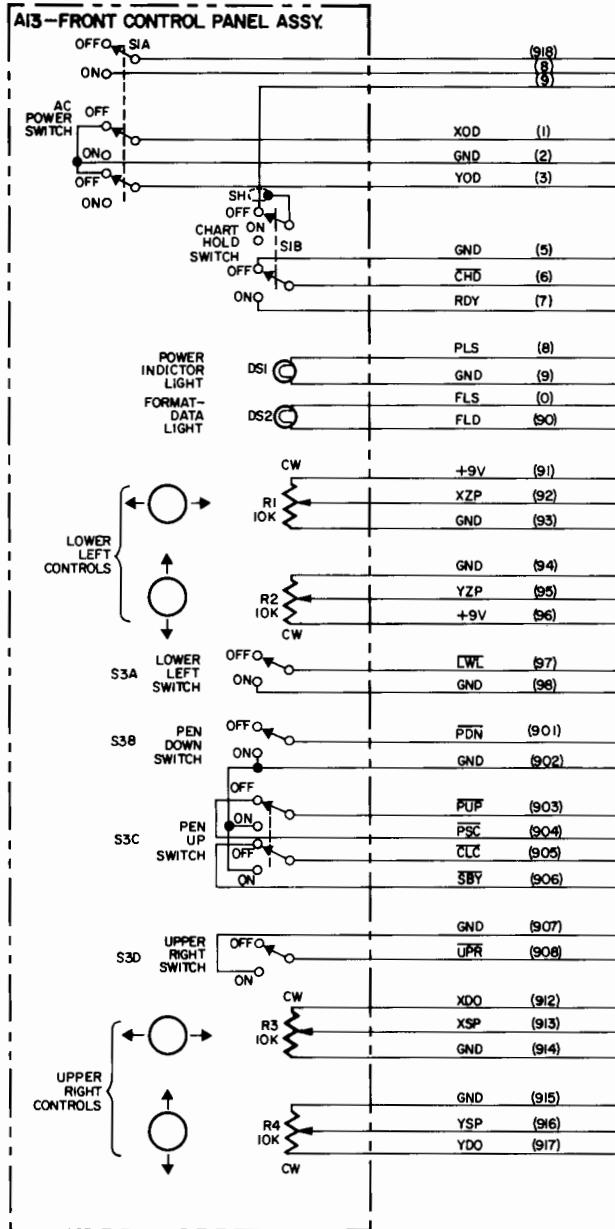

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	07210-60030	1	INTERFACE BOARD ASSY	28480	07210-60030
A1C1	0180-0374	9	C:FXD TANT. 10 UF 10% 20VDCW	56289	150D106X9020B2-DYS
A1C2	0150-0093	38	C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A1C3	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A1IC1	1820-0622	3	IC:TTL 8-INPT MULTIPLEXER W/ENABLE	01295	SN74151N
A1IC2	1820-0622		IC:TTL 8-INPT MULTIPLEXER W/ENABLE	01295	SN74151N
A1R1	0757-0427	18	R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R2	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R3	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R4	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R5	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R6	0698-3150	21	R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R7	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R8	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R9	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R10	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R11	0698-3432	6	R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A1R12	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R13	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R14	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R15	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R16	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R17	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R18	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R19	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R20	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R21	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R22	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R23	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R24	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R25	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R26	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R27	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R28	0698-3432		R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A1R29	0698-3432		R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A1R30	0698-3432		R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A1R31	0698-3432		R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A1R32	0698-3432		R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A1R33	0698-3155	14	R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A1R34	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A1R35	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R36	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R37	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A1R38	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R39	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R40	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A1R41	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2	09862-60020	1	ROM CONTROL BOARD	28480	09862-60020
A2C1	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	150D106X9020B2-DYS
A2C2	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	150D106X9020B2-DYS
A2C3	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A2C4	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A2C5	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A2C6	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A2C7	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A2C8	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A2C9	0150-0121	6	C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50BIS-CML
A2CR1	1901-0040	20	DIODE: SILICON 30MA 30VW	07263	FDG1088
A2CR2	1902-0695	1	DIODE: ZENER 11.3V 2%	28480	1902-0695
A2IC1	1820-0174	3	IC:TTL HEX INVERTER	01295	SN7404N
A2IC2	1820-0174		IC:TTL HEX INVERTER	01295	SN7404N
A2IC3	1818-0001	1	ROM	28480	1818-0001
A2IC4	1820-0765	2	IC:TTL 4-BIT BINARY COUNTER	01295	SN74197N
A2IC5	1820-0765		IC:TTL 4-BIT BINARY COUNTER	01295	SN74197N
A2IC6	1820-0054	11	IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A2IC7	1820-0328	3	IC:TTL QUAD 2-INPT NOR GATE	04713	SN7402N
A2R1	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R2	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R3	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R4	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R5	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R6	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R7	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R8	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R9	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2R10	0698-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A2R11	0698-3399	1	R:FXD MET FLM 133 OHM 1% 1/2W	28480	0698-3399
A2R12	0698-3447	5	R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A2R13	0757-0401	10	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3	09862-60030	1	CNTROL FLOP BOARD	28480	09862-60030
A3C1	0150-0121		C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B1S-CML
A3C2	0150-0121		C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B1S-CML
A3C3	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C4	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C5	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	1500106X902082-DYS
A3C6	0160-3449	1	C:FXD CER 2000 PF 10% 250VDCW	56289	C0678251F202KS25-CDH
A3C7	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	1500106X902082-DYS
A3C8	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C9	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C10	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C11	0150-0121		C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B1S-CML
A3C12	0150-0121		C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B1S-CML
A3C13	0150-0121		C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B1S-CML
A3C14	0180-0161	1	C:FXD ELECT 3.3 UF 20% 35VDCW	56289	1500335X0035H2-DYS
A3C15	0180-0229	1	C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A3C16	0160-2204	2	C:FXD MICA 100PF 5%	72136	RDM15F101J3C
A3C17	0160-2204		C:FXD MICA 100PF 5%	72136	RDM15F101J3C
A3C18	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C19	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	1500106X902082-DYS
A3C20	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C21	0180-0374		C:FXD TANT. 10 JF 10% 20VDCW	56289	1500106X902082-DYS
A3CR1	1901-0040		DIODE:SILICON 30MA 30VW	07263	FDG1088
A3CR2	1901-0040		DIODE:SILICON 30MA 30VW	07263	FDG1088
A3CR3	1901-0158	13	DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
A3CR4	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
A3CR5	1902-0554	1	DIODE BREAKDOWN:10V 1W	28480	1902-0554
A3CR6	1901-0040		DIODE:SILICON 30MA 30VW	07263	FDG1088
A3CR7	1901-0040		DIODE:SILICON 30MA 30VW	07263	FDG1088
A3IC1	1820-0640	2	IC:TTL DATA SELECTOR/MULTIPLEXER	01295	SN74150N
A3IC2	1820-0495	2	IC:TTL 1 OF 16 DECODER	01295	SN74154N
A3IC3	1820-0077	8	IC:TTL DUAL D F/F	01295	SN7474N
A3IC4	1820-0077		IC:TTL DUAL D F/F	01295	SN7474N
A3IC5	1820-0077		IC:TTL DUAL D F/F	01295	SN7474N
A3IC6	1820-0077		IC:TTL DUAL D F/F	01295	SN7474N
A3IC7	1820-0077		IC:TTL DUAL D F/F	01295	SN7474N
A3IC8	1820-0077		IC:TTL DUAL D F/F	01295	SN7474N
A301	1854-0071	23	TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A302	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A303	1853-0020	20	TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A304	1854-0300	2	TSTR:SI NPN	28480	1854-0300
A305	1854-0300		TSTR:SI NPN	28480	1854-0300
A306	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A307	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A308	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A309	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3010	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3011	1854-0094	4	TSTR:SI NPN	80131	2N3646
A3012	1854-0094		TSTR:SI NPN	80131	2N3646
A3013	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A3014	1854-0039	4	TSTR:SI NPN(SELECTED FROM 2N3704)	80131	2N3033
A3015	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A3R1	0757-0442	9	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R2	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R3	0698-0082	5	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A3R4	0812-0045	1	R:FXD WW 0.15 OHM 5% 3W	28480	0812-0045
A3R5	0757-0280	18	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R6	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A3R7	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R8	0757-0416	1	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R9	0698-3445	2	R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A3R10	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A3R11	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R12	0698-0093	1	R:FXD MET DX 10 OHM 5% 1W	28480	0698-0093
A3R13	0598-3155		R:FXD MET FLM 4.64K OHM 1% 1/8W	28480	0698-3155
A3R14	0761-0059	1	R:FXD MET DX 820 OHM 5% 1W	28480	0761-0059
A3R15	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R16	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R17	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R18	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R19	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3R20	0698-3150		R:FXD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
A3R21	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R22	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A3R23	0757-0290	3	R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A3R24	0757-0283	4	R:FXD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
A3R25	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R26	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R27	0757-0446	2	R:FXD MET FLM 15.0K OHM 1% 1/8W	28480	0757-0446
A3R28	0757-0446		R:FXD MET FLM 15.0K OHM 1% 1/8W	28480	0757-0446
A3R29	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A3R30	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A3R31	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R32	0757-0447	3	R:FXD MET FLM 16.2K OHM 1% 1/8W	28480	0757-0447
A3R33	0698-3449	1	R:FXD MET FLM 28.7K OHM 1% 1/8W	28480	0698-3449
A3R34	0757-0465	3	R:FXD MET FLM 100K OHM 1% 1/8W	28480	0757-0465
A3R35	0698-3696	2	R:FXD MET OX 39 OHM 5% 1W	28480	0698-3696
A3R36	0757-0418	1	R:FXD MET FLM 619 OHM 1% 1/8W	28480	0757-0418
A3R37	0757-0465		R:FXD MET FLM 100K OHM 1% 1/8W	28480	0757-0465
A3R38	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R39	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R40	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R41	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R42	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4	09862-60040	1	MEMORY BOARD	28480	09862-60040
A4C1	0180-0374		C:FZO TANT. 10 UF 10% 20VDCW	56289	150D106X902082-DYS
A4C2	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K80D011
A4C3	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C4	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C5	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C6	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C7	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C8	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C9	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C10	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A4C11	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A4IC2	1820-0174		IC:TTL HEX INVERTER	01295	SN7404N
A4IC3	1820-0068	1	IC:TTL TRIPLE 3-INPUT POS NAND GATE	12040	SN7410N
A4IC4	1820-0741	4	IC:TTL DUAL 8-BIT SHIFT REGISTER	28480	1820-0741
A4IC5	1820-0741		IC:TTL DUAL 8-BIT SHIFT REGISTER	28480	1820-0741
A4IC6	1820-0741		IC:TTL DUAL 8-BIT SHIFT REGISTER	28480	1820-0741
A4IC7	1820-0741		IC:TTL DUAL 8-BIT SHIFT REGISTER	28480	1820-0741
A4IC8	1820-0640		IC:TTL DATA SELECTOR/MULTIPLEXER	01295	SN74150N
A4IC9	1820-0622		IC:TTL 8-INPT MULTIPLEXER W/ENABLE	01295	SN74151N
A4IC10	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A4IC11	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A4IC12	1820-0328		IC:TTL QUAD 2-INPT NOR GATE	04713	SN7402N
A4IC13	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A4R1	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4R2	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A5	09862-60050	1	TIMING CYCLE BOARD	28480	09862-60050
A5C2	0160-0939	1	C:FZD MICA 430 PF 5% 300 VDCW	28480	0160-0939
A5C3	0160-2218	1	C:FZD MICA 1000 PF 5%	28480	0160-2218
A5C4	0180-0374		C:FZO TANT. 10 UF 10% 20VDCW	56289	150D106X902082-DYS
A5C5	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C6	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C7	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C8	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C9	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C10	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C11	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C12	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C13	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5C14	0150-0093		C:FZO CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A5CR1	1901-0040		DIDDE:SILICON 30MA 30WV	07263	FDG1088
A5CR2	1901-0040		DIDDE:SILICON 30MA 30WV	07263	FDG1088
A5IC1	1820-0075	3	IC:TTL DUAL J-K MASTER SLAVE F/F	01295	SN7473N
A5IC2	1820-0075		IC:TTL DUAL J-K MASTER SLAVE F/F	01295	SN7473N
A5IC3	1820-0075		IC:TTL DUAL J-K MASTER SLAVE F/F	01295	SN7473N
A5IC4	1820-0328		IC:TTL QUAD 2-INPT NOR GATE	04713	SN7402N
A5IC5	1820-0069	1	IC:TTL DUAL 4-INPT POS NAND GATE	01295	SN7420N
A5IC6	1820-0495		IC:TTL 1 OF 16 DECODER	01295	SN74154N
A5IC7	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN740DN
A5IC8	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A5IC9	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A5IC10	1820-0077		IC:TTL DUAL D F/F	01295	SN7474N

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A5IC11	1820-0282	1	IC:TTL QUAD 2-INPT EXCL. OR GATE	01295	SN7486N
A5IC12	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A5IC13	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A5IC14	1820-0077		IC:TTL DUAL 0 F/F	01295	SN7474N
A5L1	9100-3333	1	COIL/CHOKE 2.2 UH 5%	82142	TYPE 19-4411-12J
A5Q1	1854-0094		TSTR:SI NPN	80131	2N3646
A5Q2	1854-0094		TSTR:SI NPN	80131	2N3646
A5Q3	1854-0092	4	TSTR:SI NPN	80131	2N3563
A5Q4	1853-0015	2	TSTR:SI PNP	80131	2N3640
A5Q5	1854-0092		TSTR:SI NPN	80131	2N3563
A5Q6	1854-0092		TSTR:SI NPN	80131	2N3563
A5Q7	1854-0092		TSTR:SI NPN	80131	2N3563
A5Q8	1853-0015		TSTR:SI PNP	80131	2N3640
A5R1	0757-0417	5	R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A5R2	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A5R3	0698-3446	1	R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A5R4	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A5R5	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A5R6	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A5R7	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A5R8	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A5R9	0757-0438	4	R:FXD MET FLM 5.1K OHM 1% 1/8W	28480	0757-0438
A5R10	0757-0159	2	R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757-0159
A5R11	0757-0817	3	R:FXD MET FLM 750 OHM 1% 1/2W	28480	0757-0817
A5R12	0757-0159		R:FXD MET FLM 1000 OHM 1% 1/2W	28480	0757-0159
A5R13	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A5R14	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6	09862-60070	1	SERVO BOARD	28480	09862-60070
A6C1	0160-0154	1	C:FXD MICA MY 0.0022 UF 10% 200VDCW	56289	192P22292-PTS
A6C2	0150-0059	2	C:FXD CER 3.3-D.25 PF 500VDCW	72982	301-000-C0JO-339C
A6C3	0160-0161	2	C:FXD MY 0.01 UF 10% 200VDCW	56289	192P10392-PTS
A6C4	0140-0190	6	C:FXD MICA 39 PF 5%	72136	RDM15E390J3C
A6C5	0160-2110	4	C:FXD MY 0.47 UF 20% 200VDCW	14752	2108IC474
A6C6	0160-2207	10	C:FXD MICA 300 PF 5%	28480	0160-2207
A6C7			NOT ASSIGNED		
A6C8	0160-2199	2	C:FXD MICA 30 PF 5% 300VDCW	28480	0160-2199
A6C9	0160-2146	8	C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C10	0180-0116	5	C:FXD ELECT 6.8 UF 10% 35VDCW	56289	1500685X9035B2-DYS
A6C11	0160-0127	4	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A6C12	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C13	0160-2110		C:FXD MY 0.47 UF 20% 200VDCW	14752	2108IC474
A6C14	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C15	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A6C16	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C17	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C18	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C19	0160-0161		C:FXD MY 0.01 UF 10% 200VDCW	56289	192P10392-PTS
A6C20	0150-0059		C:FXD CER 3.3-D.25 PF 500VDCW	72982	301-000-C0JO-339C
A6C21	0140-0190		C:FXD MICA 39 PF 5%	72136	RDM15E390J3C
A6C22	0160-2207		C:FXD CER 0.02 UF +80-20% 100VDCW	28480	0160-2207
A6C23	0160-2110		C:FXD MY 0.47 UF 20% 200VDCW	14752	2108IC474
A6C24	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C25	0160-2199		C:FXD MICA 30 PF 5% 300VDCW	28480	0160-2199
A6C26	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C27	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C28	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C29	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A6C30	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C31	0160-2110		C:FXD MY 0.47 UF 20% 200VDCW	14752	2108IC474
A6C32	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C33	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C34	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A6C35	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6C36	0180-0116		C:FXD ELECT 6.8 UF 10% 35VDCW	56289	1500685X9035B2-DYS
A6C37	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C38	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A6C39	0180-0116		C:FXD ELECT 6.8 UF 10% 35VDCW	56289	1500685X9035B2-DYS
A6C40	0160-2146		C:FXD CER 0.02 UF +80-20% 100VDCW	91418	TA
A6CR1	1901-0040		DIDDE:SILICON 30MA 30WV	07263	FDG1088
A6CR2	1902-0048	4	DIDDE:BREAKDOWN 6.81V 5%	04713	SZ10939-134
A6CR3	1902-0048		DIDDE:BREAKDOWN 6.81V 5%	04713	SZ10939-134
A6CR4	1901-0040		DIDDE:SILICON 30MA 30WV	07263	FDG1088
A6CR5	1901-0450		DIDDE:SILICON	28480	1901-0450
A6CR6	1901-0450		DIDDE:SILICON	28480	1901-0450
A6CR7	1901-0450		DIDDE:SILICON	28480	1901-0450
A6CR8	1901-0450		DIDDE:SILICON	28480	1901-0450

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6CR10	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR11	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR12	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR13	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR14	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR15	1902-0048		DIODE:BREAKDOWN 6.81V 5%	04713	SZ10939-134
A6CR16	1902-0048		DIODE:BREAKDOWN 6.81V 5%	04713	SZ10939-134
A6CR17	1902-3150	1	DIODE BREAKDOWN:9.09V 2%	28480	1902-3150
A6CR18	1902-0041	4	DIODE:BREAKDOWN 5.11V 5%	04713	SZ10939-98
A6CR19	1902-0041		DIODE:BREAKDOWN 5.11V 5%	04713	SZ10939-98
A6CR20	1902-0041		DIODE:BREAKDOWN 5.11V 5%	04713	SZ10939-98
A6CR21	1902-0041		DIODE:BREAKDOWN 5.11V 5%	04713	SZ10939-98
A6CR22	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR23	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR24	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR25	1901-0450		DIODE:SILICON	28480	1901-0450
A6CR26	1901-0450		DIODE:SILICON	28480	1901-0450
A6IC1	1820-0223	13	INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC2	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC3	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC4	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC5	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC6	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC7	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC8	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC9	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC10	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC11	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC12	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6IC13	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A6I1	9170-0847	1	BEAD:SHIELDING	02114	56-590-65-38
A601	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A602	1855-0062	2	TSTR:SI FET 30V	01295	2N1595
A603	1853-0098	4	TSTR:SI PNP	80131	2N5086
A604	1853-0098		TSTR:SI PNP	80131	2N5086
A605	1854-0087	8	TSTR:SI NPN	80131	2N3417
A606	1854-0087		TSTR:SI NPN	80131	2N3417
A607	1854-0087		TSTR:SI NPN	80131	2N3417
A608	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A609	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A6010	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A6011	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A6012	1855-0062		TSTR:SI FET 30V	01295	2N1595
A6013	1853-0098		TSTR:SI PNP	80131	2N5086
A6014	1853-0098		TSTR:SI PNP	80131	2N5086
A6015	1854-0087		TSTR:SI NPN	80131	2N3417
A6016	1854-0087		TSTR:SI NPN	80131	2N3417
A6017	1854-0087		TSTR:SI NPN	80131	2N3417
A6018	1854-0039		TSTR:SI NPN	80131	2N3053
A6019	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A6020	1853-0020	2	TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A6K1	0698-7652		R:FWD FLM 49.9K OHM 1% 1/8W	28480	0698-7652
A6K2	0698-6349		R:FWD FLM 500K OHM 1% 1/8W	28480	0698-6349
A6K3	0757-0283		R:FWD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
A6K4	0698-8077		R:FWD FLM 178K OHM 1% 1/8W	28480	0698-8077
A6R5	0698-3161	3	R:FWD MET FLM 38.3K OHM 1% 1/8W	28480	0698-3161
A6R6	0698-3136	2	R:FWD MET FLM 17.8K OHM 1% 1/8W	28480	0698-3136
A6R7	0757-0438		R:FWD MET FLM 5.11K OHM 1% 1/8W	28480	0757-0438
A6R8	0757-0449	5	R:FWD FLM 20K OHM 1% 1/8W	28480	0757-0449
A6R9	0757-0442		R:FWD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A6R10	0698-6335	2	R:FWD FLM 900 OHM 1% 1/8W	28480	0698-6335
A6R11	0698-3454	3	R:FWD MET FLM 215K OHM 1% 1/8W	28480	0698-3454
A6R12	0757-0427		R:FWD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A6R13	0698-4531	1	R:FWD FLM 267K OHM 1% 1/8W	28480	0698-4531
A6R14	0757-0449		R:FWD FLM 20K OHM 1% 1/8W	28480	0757-0449
A6R15	0698-3260	4	R:FWD MET FLM 464K OHM 1% 1/8W	28480	0698-3260
A6R16	0757-0469	4	R:FWD FLM 150K OHM 1% 1/8W	28480	0757-0469
A6K17	2100-2516	3	R:VAR CERMET 100K OHM 10% LIN 1/2W	28480	2100-2516
A6R18	0757-0438		R:FWD MET FLM 5.11K OHM 1% 1/8W	28480	0757-0438
A6R19	2100-2692	2	R:VAR CERMET I MEGOHM 20% TYPE V 1/2W	28480	2100-2692
A6K20	0698-3266	2	R:FWD MET FLM 237K OHM 1% 1/8W	28480	0698-3266
A6R21	0757-0458	4	R:FWD MET FLM 51.1K OHM 1% 1/8W	28480	0757-0458
A6K22	0757-0434	4	R:FWD MET FLM 3.65K OHM 1% 1/8W	28480	0757-0434
A6K23	0757-0316	36	R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R24	0757-0284	2	R:FWD MET FLM 150 OHM 1% 1/8W	28480	0757-0284

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6R25	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R26	0757-0434		R:FXD MET FLM 3.65K OHM 1% 1/8W	28480	0757-0434
A6R27	0683-0275		R:FXD COMP 2.7 OHM 5% 1/4W	01121	C8 27G5
A6R28	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R29	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R30	0757-0447		R:FXD MET FLM 16.2K OHM 1% 1/8W	28480	0757-0447
A6R31	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A6R32	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A6R33	0698-3154	7	R:FXD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
A6R34	0757-0458		R:FXD MET FLM 51.1K OHM 1% 1/8W	28480	0757-0458
A6R35	0698-3440	2	R:FXD MET FLM 196 OHM 1% 1/8W	28480	0698-3440
A6R36	0698-6330	2	R:FXD FLM 2K OHM 1% 1/8W	28480	0698-6330
A6R37	0757-0419	2	R:FXD MET FLM 681 OHM 1% 1/8W	28480	0757-0419
A6R38	0757-0465		R:FXD MET FLM 100K OHM 1% 1/8W	28480	0757-0465
A6R39	0757-0817		R:FXD MET FLM 750 OHM 1% 1/2W	28480	0757-0817
A6R40	0757-1094	2	R:FXD MET FLM 1.47K OHM 1% 1/8W	28480	0757-1094
A6R41	0698-3410	2	R:FXD MET FLM 3.16K OHM 1% 1/2W	28480	0698-3410
A6R44	0698-3408	1	R:FXD MET FLM 2.15K OHM 1% 1/2W	28480	0698-3408
A6R45	0698-3154		R:FXD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
A6R46	0757-0288	1	R:FXD MET FLM 9.09K OHM 1% 1/8W	28480	0757-0288
A6R47	0698-7652		R:FXD FLM 49.9K OHM 1.0% 1/8W	28480	0698-7652
A6R48	0698-8078	1	R:FXD FLM 698K OHM 1.0% 1/2W	28480	0698-8078
A6R49	0698-3161		R:FXD MET FLM 38.3K OHM 1% 1/8W	28480	0698-3161
A6R50	0698-8074	1	R:FXD FLM 118K OHM 1.0% 1/8W	28480	0698-8074
A6R51	0757-0449		R:FXD FLM 20K OHM 1% 1/8W	28480	0757-0449
A6R52	0698-8075	1	R:FXD FLM 6.19K OHM 1.0% 1/8W	28480	0698-8075
A6R53	0698-3440		R:FXD MET FLM 196 OHM 1% 1/8W	28480	0698-3440
A6R54	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A6R55	0698-6335		R:FXD FLM 900 OHM 1% 1/8W	28480	0698-6335
A6R56	0698-6330		R:FXD FLM 2K OHM 1% 1/8W	28480	0698-6330
A6R57	0698-3454		R:FXD MET FLM 215K OHM 1% 1/8W	28480	0698-3454
A6R58	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A6R59	0698-3454		R:FXD MET FLM 215K OHM 1% 1/8W	28480	0698-3454
A6R60	2100-2516		R:VAR CERMET 100K OHM 10% LIN 1/2W	28480	2100-2516
A6R61	0698-3161		R:FXD MET FLM 38.3K OHM 1% 1/8W	28480	0698-3161
A6R62	0698-3260		R:FXD MET FLM 464K OHM 1% 1/8W	28480	0698-3260
A6R63	0757-0469		R:FXD FLM 150K OHM 1% 1/8W	28480	0757-0469
A6R64	2100-2516		R:VAR CERMET 100K OHM 10% LIN 1/2W	28480	2100-2516
A6R65	0757-0438		R:FXD MET FLM 5.11K OHM 1% 1/8W	28480	0757-0438
A6R66	0698-3266		R:FXD MET FLM 237K OHM 1% 1/8W	28480	0698-3266
A6R67	2100-2692		R:VAR CERMET 1 MEGOHM 20% TYPE V 1/2W	28480	2100-2692
A6R68	0757-0458		R:FXD MET FLM 51.1K OHM 1% 1/8W	28480	0757-0458
A6R69	0683-0275		R:FXD COMP 2.7 OHM 5% 1/4W	01121	C8 27G5
A6R70	0757-0434		R:FXD MET FLM 3.65K OHM 1% 1/8W	28480	0757-0434
A6R71	0757-0284		R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
A6R72	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R73	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R74	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A6R75	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A6R76	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R77	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A6R78	0757-0447		R:FXD MET FLM 16.2K OHM 1% 1/8W	28480	0757-0447
A6R79	0698-3154		R:FXD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
A6R80	0757-0434		R:FXD MET FLM 3.65K OHM 1% 1/8W	28480	0757-0434
A6R81	0757-0458		R:FXD MET FLM 51.1K OHM 1% 1/8W	28480	0757-0458
A6R82	0757-0815	1	R:FXD MET FLM 562 OHM 1% 1/2W	28480	0757-0815
A6R83	0698-3274	1	R:FXD MET FLM 10K OHM 1% 1/8W	28480	0698-3274
A6R84	0698-8076	1	R:FXD FLM 8.66K OHM 1.0% 1/8W	28480	0698-8076
A6R85	0811-1217	1	R:FXD WW 150 OHM 5% 5W	28480	0811-1217
A6R86	0757-1094		R:FXD MET FLM 1.47K OHM 1% 1/8W	28480	0757-1094
A6R87	0698-3410		R:FXD MET FLM 3.16K OHM 1% 1/2W	28480	0698-3410
A6R88	0757-0419		R:FXD MET FLM 681 OHM 1% 1/8W	28480	0757-0419
A6R89	0757-0817		R:FXD MET FLM 750 OHM 1% 1/2W	28480	0757-0817
A6R90	2100-2517		R:VAR FLM 50K OHM 10% LIN 1/2W	28480	2100-2517
A6R91	0698-3260		R:FXD MET FLM 464K OHM 1% 1/8W	28480	0698-3260
A6R92	2100-2517		R:VAR FLM 50K OHM 10% LIN 1/2W	28480	2100-2517
A6R93	0698-3260		R:FXD MET FLM 464K OHM 1% 1/8W	28480	0698-3260
A7	09862-60060	1	DAC BOARD	28480	09862-60060
A7C1	0160-0300	14	C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C2	0160-0300		C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C3	0160-0300		C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C4	0160-0300		C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C5	0160-0300		C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C6	0160-0300		C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C7	0160-0300		C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7C8	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C9	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C10	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C11	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C12	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C13	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C14	0160-0300		C:FWD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A7C15			NOT ASSIGNED		
A7C16	0150-0093		C:FWD CER D.01 UF +80-20% 100VDCW	72982	801-K800011
A7C17	0150-0093		C:FWD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A7C18	0150-0093		C:FWD CER D.01 UF +80-20% 100VDCW	72982	801-K800011
A7C19	0150-0093		C:FWD CER D.01 UF +80-20% 100VDCW	72982	801-K800011
A7IC1	1820-1039	8	IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC2	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC3	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC4	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC5	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC6	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC7	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC8	1820-1039		IC:TTL DUAL D F/F(SELECTED)	98220	1820-1039
A7IC9	1820-0054		IC:TTL QUAD 2-INPT NAND GATE	01295	SN7400N
A7Q1	1853-0319	4	TSTR:SI PNP	28480	1853-0319
A7Q2	1854-0538		TSTR:SI NPN	28480	1854-0538
A7Q3	1853-0319		TSTR:SI PNP	28480	1853-0319
A7Q4	1854-0538		TSTR:SI NPN	28480	1854-0538
A7Q5	1853-0319		TSTR:SI PNP	28480	1853-0319
A7Q6	1854-0538		TSTR:SI NPN	28480	1854-0538
A7Q7	1853-0319		TSTR:SI PNP	28480	1853-0319
A7Q8	1854-0538		TSTR:SI NPN	28480	1854-0538
A7Q9	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q10	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q11	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q12	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q13	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q14	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q15	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q16	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q17	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q18	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q19	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q20	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q21	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q22	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q23	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q24	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q25	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q26	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q27	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q28	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7R1	0698-3515	14	R:FWD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R2	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R3	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R4	0757-0316		R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R5	0757-0316		R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R6	0811-2742		R:FWD WW 19.9K OHM 0.01% 1/16W	28480	0811-2742
A7R7	2100-2632		R:VAR FLM 100 OHM 10% LIN 1/2W	28480	2100-2632
A7R8	0698-3515		R:FWD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R9	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R10	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R11	0757-0316		R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R12	0757-0316		R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R13	0811-3099		R:FWD WW 39.95K OHM 0.01% 1/32W	28480	0811-3099
A7R15	0698-3515		R:FWD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R16	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R17	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R18	0757-0316	1	R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R19	0757-0316		R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R20	0811-3100		R:FXO WW 79.95K OHM 0.01% 1/32W	28480	0811-3100
A7R22	0698-3515		R:FWD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R23	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R24	0757-0278		R:FWD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R25	0757-0316		R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R26	0757-0316	1	R:FWD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R27	0811-3098		R:FWD WW 159.95K OHM 0.01% 1/32W	28480	0811-3098
A7R28	0811-3097	1	R:FWD WW 150K OHM 0.01% 1/32W	28480	0811-3097

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7R29	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R30	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R31	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R32	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R33	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R34	0811-3096	1	R:FXD WM 19.95K OHM 0.05% 1/32W	28480	0811-3096
A7R35	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R36	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R37	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R38	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R39	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R40	0811-2744	1	R:FXD WM 39.95K OHM 0.05% 1/32W	28480	0811-2744
A7R41	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R42	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R43	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R44	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R45	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R46	0811-2747	1	R:FXD WM 79.95K OHM 0.1% 1/16W	28480	0811-2747
A7R47	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R48	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R49	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R50	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R51	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R52	0757-0470	2	R:FXD MET FLM 162K OHM 1% 1/8W	28480	0757-0470
A7R53	0757-0469		R:FXD FLM 150K OHM 1% 1/8W	28480	0757-0469
A7R54	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R55	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R56	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R57	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R58	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R59	0757-0449		R:FXD FLM 20K OHM 1% 1/8W	28480	0757-0449
A7R60	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R61	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R62	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R63	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R64	0757-0316	3	R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R65	0698-4008		R:FXD MET FLM 40K OHM 1% 1/8W	28480	0698-4008
A7R66	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R67	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R68	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R69	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R70	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R71	0698-3201	1	R:FXD FLM 80.0K OHM 1% 1/8W	28480	0698-3201
A7R72	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R73	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R74	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R75	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R76	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R77	0757-0470		R:FXD MET FLM 162K OHM 1% 1/8W	28480	0757-0470
A7R78	0757-0469		R:FXD FLM 150K OHM 1% 1/8W	28480	0757-0469
A7R79	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R80	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R81	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R82	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R83	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R84	0757-0449		R:FXD FLM 20K OHM 1% 1/8W	28480	0757-0449
A7R85	0698-3515		R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A7R86	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R87	0757-0278		R:FXD MET FLM 1.78K OHM 1% 1/8W	28480	0757-0278
A7R88	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R89	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A7R90	0698-4008		R:FXD MET FLM 40K OHM 1% 1/8W	28480	0698-4008
A7R91	0698-4008		R:FXD MET FLM 40K OHM 1% 1/8W	28480	0698-4008
A7R92	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A7R93	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A7R94	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8	09862-60080	1	RECTIFIER BOARD	28480	09862-60080
A8C1	0180-0116		C:FXD ELECT 6.8 UF 10% 35VDCW	56289	1500685X903532-DYS
A8C2	0180-0116		C:FXD ELECT 6.8 UF 10% 35VDCW	56289	1500685X9035B2-DYS
A8C3	0160-2145	2	C:FXD CER 5000 PF +80-20% 100VDCW	91418	TA
A8C4	0160-2145		C:FXD CER 5000 PF +80-20% 100VDCW	91418	TA
A8CR1	1901-0040		DIODE: SILICON 30MA 30VW	07263	FDG1088
A8CR2	1901-0040		DIODE: SILICON 30MA 30VW	07263	FDG1088
A8CR3	1902-0184	2	DIODE BREAKDOWN:SILICON 16.2V 5%	28480	1902-0184
A8CR4	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ABCR5	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR6	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
ABCR7	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
ABCR8	1902-0184		DIODE BREAKDOWN:SILICON 16.2V 5%	28480	1902-0184
ABCR9	1902-3223	2	DIODE BREAKDOWN:17.4V 2% 400MW	28480	1902-3223
ABCR10	1902-3223		DIODE BREAKDOWN:17.4V 2% 400MW	28480	1902-3223
ABCR11	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR12	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR13	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR14	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR15	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR16	1901-0200		DIODE:SI 3 A 100 PRRV	28480	1901-0200
ABCR17	1901-0200		DIODE:SI 3 A 100 PRRV	28480	1901-0200
ABCR18	1901-0200		DIODE:SI 3 A 100 PRRV	28480	1901-0200
ABCR19	1901-0200		DIODE:SI 3 A 100 PRRV	28480	1901-0200
ABCR20	1901-0200		DIODE:SI 3 A 100 PRRV	28480	1901-0200
ABCR21	1901-0200		DIODE:SI 3 A 100 PRRV	28480	1901-0200
ABCR22	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR23	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
ABCR24	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
ABCR25	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
ABF1	2110-0029	5	FUSE:CARTRIDGE 3 AMP 125V SLOW BLOW	75915	313003
ABF2	2110-0029		FUSE:CARTRIDGE 3 AMP 125V SLOW BLOW	75915	313003
ABF3	2110-0029		FUSE:CARTRIDGE 3 AMP 125V SLOW BLOW	75915	313003
ABF4	2110-0029		FUSE:CARTRIDGE 3 AMP 125V SLOW BLOW	75915	313003
ABF5	2110-0029		FUSE:CARTRIDGE 3 AMP 125V SLOW BLOW	75915	313003
ABF6	2110-0065	2	FUSE:0.375A 250V	75915	312.375
ABF7	2110-0065		FUSE:0.375A 250V	75915	312.375
ABQ1	1853-0036	4	TSTR:SI PNP	80131	2N3906
ABQ2	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
ABQ3	1854-0441	5	TSTR:SI NPN	80131	2N3054
ABQ4	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
ABQ5	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
ABQ6	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
ABQ7	1853-0036		TSTR:SI NPN	80131	2N3906
ABQ8	1854-0441		TSTR:SI NPN	80131	2N3054
ABQ9	1853-0036		TSTR:SI PNP	80131	2N3906
ABQ10	1853-0036		TSTR:SI PNP	80131	2N3906
ABQ11	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
ABQ12	1854-0441		TSTR:SI NPN	80131	2N3054
ABQ13	1854-0441		TSTR:SI NPN	80131	2N3054
ABQ14	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
ABR1	0698-3154		R:FWD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
ABR2	0757-0397	3	R:FWD MET FLM 68.1 OHM 1% 1/8W	28480	0757-0397
ABR3	0757-0443	2	R:FWD MET FLM 11.0K OHM 1% 1/8W	28480	0757-0443
ABR4	0757-0397		R:FWD MET FLM 68.1 OHM 1% 1/8W	28480	0757-0397
ABR5	0757-0290		R:FWD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
ABR6	0757-0283		R:FWD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
ABR7	0698-3156		R:FWD MET FLM 14.7K OHM 1% 1/8W	28480	0698-3156
ABR8	0757-0443		R:FWD MET FLM 11.0K OHM 1% 1/8W	28480	0757-0443
ABR9	0757-0397		R:FWD MET FLM 68.1 OHM 1% 1/8W	28480	0757-0397
ABR10	0698-3154		R:FWD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
ABR11	0757-0290		R:FWD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
ABR12	0698-3156		R:FWD MET FLM 14.7K OHM 1% 1/8W	28480	0698-3156
ABR13	0757-0283		R:FWD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
ABR14	0698-3601	2	R:FWD MET DX 1D OHM 5% 2W	28480	0698-3601
ABR15	0698-3601		R:FWD MET DX 10 OHM 5% 2W	28480	0698-3601
ABR16	0757-0280		R:FWD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
ABR17	0757-0280		R:FWD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
ABR18	0698-3150		R:FWD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
ABR19	0698-3150		R:FWD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
ABR20	0761-0005	4	R:FWD MET DX 2200 OHM 5% 1A	28480	0761-0005
ABR21	0761-0005		R:FWD MET DX 2200 OHM 5% 1A	28480	0761-0005
ABR22	0761-0057	1	R:FWD MET DX 560 OHM 5% 1W	28480	0761-0057
ABR23	0761-0005		R:FWD MET DX 2200 OHM 5% 1A	28480	0761-0005
ABR24	0761-0005		R:FWD MET DX 2200 OHM 5% 1A	28480	0761-0005
ABR25	0698-3150		R:FWD MET FLM 2.37K OHM 1% 1/8W	28480	0698-3150
ABR26	0698-3154		R:FWD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
ABR27	0698-3154		R:FWD MET FLM 4.22K OHM 1% 1/8W	28480	0698-3154
ABR28	0698-3696		R:FWD MET DX 39 OHM 5% 1W	28480	0698-3696
A9	09862-60090	1	POWER DRIVER BOARD	28480	09862-60090
A9C1	0160-0128	2	C:FWD CER 2.2 UF 20% 25VDCW	56289	5C152C25-CML
A9C2	0160-0128		C:FWD CER 2.2 UF 20% 25VDCW	56289	5C152C25-CML
A9C3	0150-0096	1	C:FWD CER 0.05 UF +80-20% 100VDCW	91418	TA
A9C4	0180-0104	1	C:FWD ELECT 230 UF +75-10% 15VDCW	56289	300207G0150F4-DSM

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 7. Electrical Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A9CR1	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
A9CR2	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
A9CR3	1902-3077		DIODE BREAKDOWN:4.42V 2%	28480	1902-3077
A9CR4	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A9CR5	1901-0158		DIODE:SILICON 0.75A 200 PIV	28480	1901-0158
A9CR6	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
A9CR7	1902-3077		DIODE BREAKDOWN:4.42V 2%	28480	1902-3077
A901	1854-0039		TSTR:SI NPN	80131	2N3053
A902	1854-0530	6	TSTR:SI NPN	80131	2N3055
A903	1853-0012	3	TSTR:SI PNP	80131	2N2904A
A904	1854-0530		TSTR:SI NPN	80131	2N3055
A905	1854-0039		TSTR:SI NPN	80131	2N3053
A906	1854-0530		TSTR:SI NPN	80131	2N3055
A907	1853-0012		TSTR:SI PNP	80131	2N2904A
A908	1854-0530		TSTR:SI NPN	80131	2N3055
A909	1854-0530		TSTR:SI NPN	80131	2N3055
A9010	1854-0441		TSTR:SI NPN	80131	2N3054
A9011	1854-0087		TSTR:SI NPN	80131	2N3417
A9012	1854-0087		TSTR:SI NPN	80131	2N3417
A9013	1853-0012		TSTR:SI PNP	80131	2N2904A
A9014	1854-0530		TSTR:SI NPN	80131	2N3055
A9R1	0698-3444	4	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A9R2	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A9R3	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A9R4	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A9R5	0683-0475	2	R:FXD COMP 4.7 OHM 5% 1/4W	01121	C8 47G5
A9R6	0683-0475		R:FXD COMP 4.7 OHM 5% 1/4W	01121	C8 47G5
A9R7	0757-0824	3	R:FXD MET FLM 2000 OHM 1% 1/2W	28480	0757-0824
A9R8	0757-0824		R:FXD MET FLM 2000 OHM 1% 1/2W	28480	0757-0824
A9R10	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A9R11	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R12	0698-3136		R:FXD MET FLM 17.8K OHM 1% 1/8W	28480	0698-3136
A9R13	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A9R14	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R15	0811-1827	1	R:VAR WW D.1 OHM 10% 3W	28480	0811-1827
A9R16	0757-0824		R:FXD MET FLM 2000 OHM 1% 1/2W	28480	0757-0824
A9R17	0811-1849	1	R:VAR WW 0.75 OHM 10% 5W	28480	0811-1849
A9R18	0698-3159	1	R:FXD MET FLM 26.1K OHM 1% 1/8W	28480	0698-3159
A9R19	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A10	07210-60100	1	MOTHER BOARD	28480	07210-60100
A11	09862-60110	1	CHART HOLD SUPPLY BOARD	28480	09862-60110
A12	07200-60120	1	MECH. ASSEMBLY	28480	07200-60120
A13DS1	2140-0336	2	LAMP:INCANDESCENT 12V 100 MA	28480	2140-0336
A13DS2	2140-0336		LAMP:INCANDESCENT 12V 100 MA	28480	2140-0336
A13R1	2100-2682	4	R:VAR WW 10K OHM 10% LIN 2W	28480	2100-2682
A13R2	2100-2682		R:VAR WW 10K OHM 10% LIN 2W	28480	2100-2682
A13R3	2100-2682		R:VAR WW 10K OHM 10% LIN 2W	28480	2100-2682
A13R4	2100-2682		R:VAR WW 10K OHM 10% LIN 2W	28480	2100-2682
A13S1	3101-1643	1	SWITCH	28480	3101-1643
A13S3	3101-1644	1	SWITCH: PUSHBUTTON 2PDT 4 STATIONS	28480	3101-1644
A14C5	0180-2421	1	C:FXD AL ELECT 15000 UF +75-10% 20VDCW	56289	320153G0208C68
A14C6	0180-2420	2	C:FXD AL ELECT 2100 UF +75-10% 40VDCW	56289	320212G040AB68
A14C7	0180-2420		C:FXD AL ELECT 2100 UF +75-10% 40VDCW	56289	320212G040AB68
A14C8	0180-2197	2	C:FXD ELECT 4000 UF +75-10% 30VDCW	28480	0180-2197
A14C9	0180-2197		C:FXD ELECT 4000 UF +75-10% 30VDCW	28480	0180-2197
A14T1	09862-60180	1	TRANSFORMER	28480	09862-60180
A15C1	0160-0195	4	C:FXD CER 1000 PF 20% 250WVAC	56289	19C251AI-CDH
A15C2	0160-0195		C:FXD CER 1000 PF 20% 250WVAC	56289	19C251AI-CDH
A15C3	0160-0195		C:FXD CER 1000 PF 20% 250WVAC	56289	19C251AI-CDH
A15C4	0160-0195		C:FXD CER 1000 PF 20% 250WVAC	56289	19C251AI-CDH
A15L1	9100-1344	2	COIL	28480	9100-1344
A15L2	9100-1344		COIL	28480	9100-1344
A15S1	3101-1609	1	SWITCH: SLIDE 2-OPDT	82389	11E-1D36

APPENDIX C
SCHEMATICS AND ELECTRICAL PARTS LIST

Table 8. Code List of Manufacturers

<u>Mfr. No.</u>	<u>Manufacturer Name</u>	<u>Address</u>	<u>Zip Code</u>
01121	Allen Bradley Co.	Milwaukee, Wis.	53204
01295	Texas Instruments Inc. Semiconductor Components Div.	Dallas, Tex.	75231
02114	Ferroxcube Corp.	Saugerties, N.Y.	12477
04713	Motorola Semiconductor Prod. Inc.	Phoenix, Ariz.	85008
07263	Fairchild Camera & Inst. Corp. Semiconductor Div.	Mountain View, Calif.	94040
12040	National Semiconductor Corp.	Danbury, Conn.	06810
14752	Electro-Cube Inc.	San Gabriel, Calif.	91776
28480	Hewlett-Packard Co. Corporate HQ	Palo Alto, Calif.	94304
56289	Sprague Electric Co.	N. Adams, Mass.	01247
72136	Electro Motive Mfg. Co. Inc.	Willimantic, Conn.	06226
72982	Erie Technological Prod. Inc.	Erie, Pa.	16512
75915	Littlefuse Inc.	Des Plaines, Ill.	60016
80131	Electronic Industries Association	Washington, D.C.	20006
82142	Airco Speer Elect. Comp.	Du Bois, Pa.	15801
82389	Switchcraft Inc.	Chicago, Ill.	60630
91418	Radio Materials Co.	Chicago, Ill.	60646
98220	Hewlett-Packard Co. San Diego Div.	San Diego, Calif.	92127



PART NO. 07210-90001
JUNE 1972

PRINTED IN U.S.A.